



Motorola Droid Mini Loudspeaker Replacement

This guide will show you how to replace the loudspeaker in your Motorola Droid Mini.

Written By: Arielle



INTRODUCTION


The loudspeaker is responsible for the sound produced by your Droid Mini. When your speaker malfunctions or the sound is distorted, it is probably time to replace the loudspeaker.



TOOLS:

- [iFixit Opening Tool](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Case

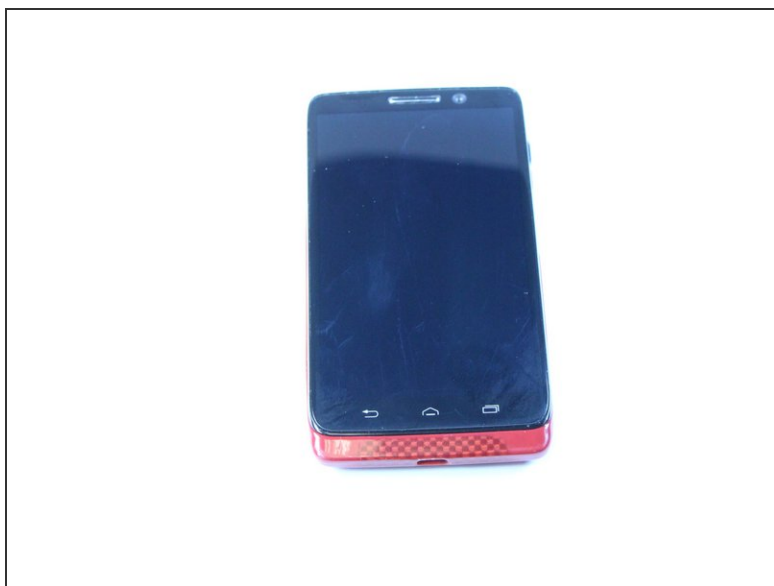

- Pull out the volume keys using the iFixit opening tool.


Step 2



- Pry off the back case gently using the iFixit opening tool.



- ⓘ Make sure to go around the entire perimeter of the case.

Step 3 — Loudspeaker

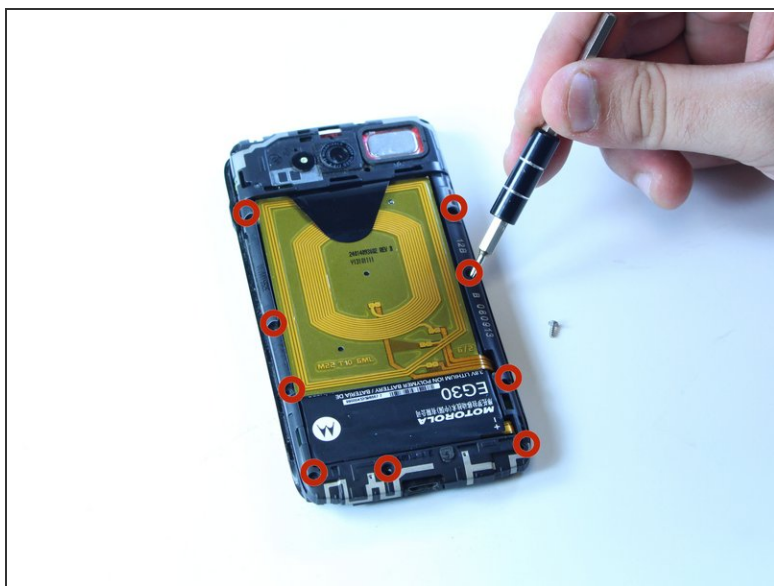

- Use the T5 screw head to unscrew the 9 silver screws from the housing frame.
- Carefully separate the housing frame from the motherboard.

Step 4

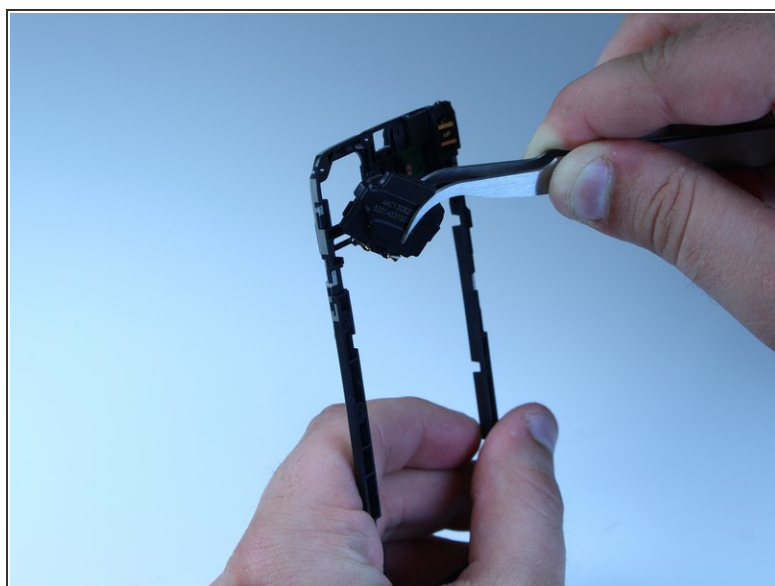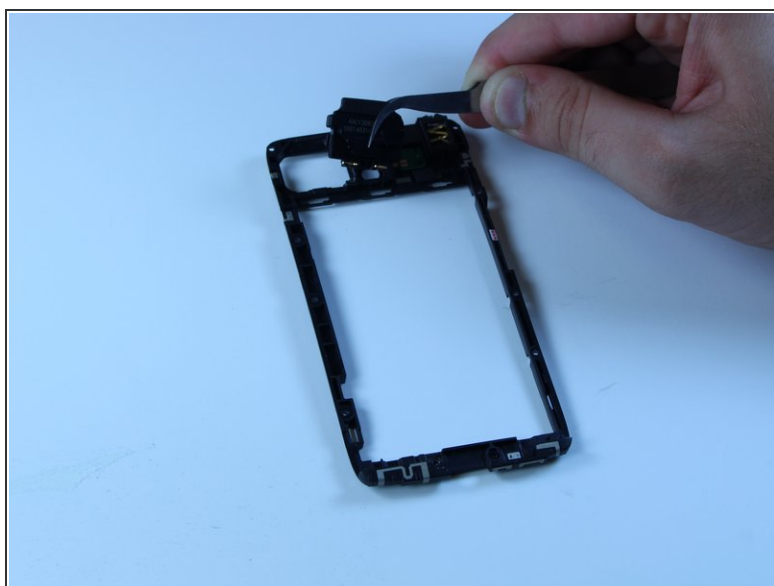

- Use the tweezers to gently push the loudspeaker out of the housing frame.

To reassemble your device, follow these instructions in reverse order.