




Acer Aspire V5-572 Bottom Cover Replacement

Acer Aspire V5-572 Bottom Cover Replacement

Written By: ZFix

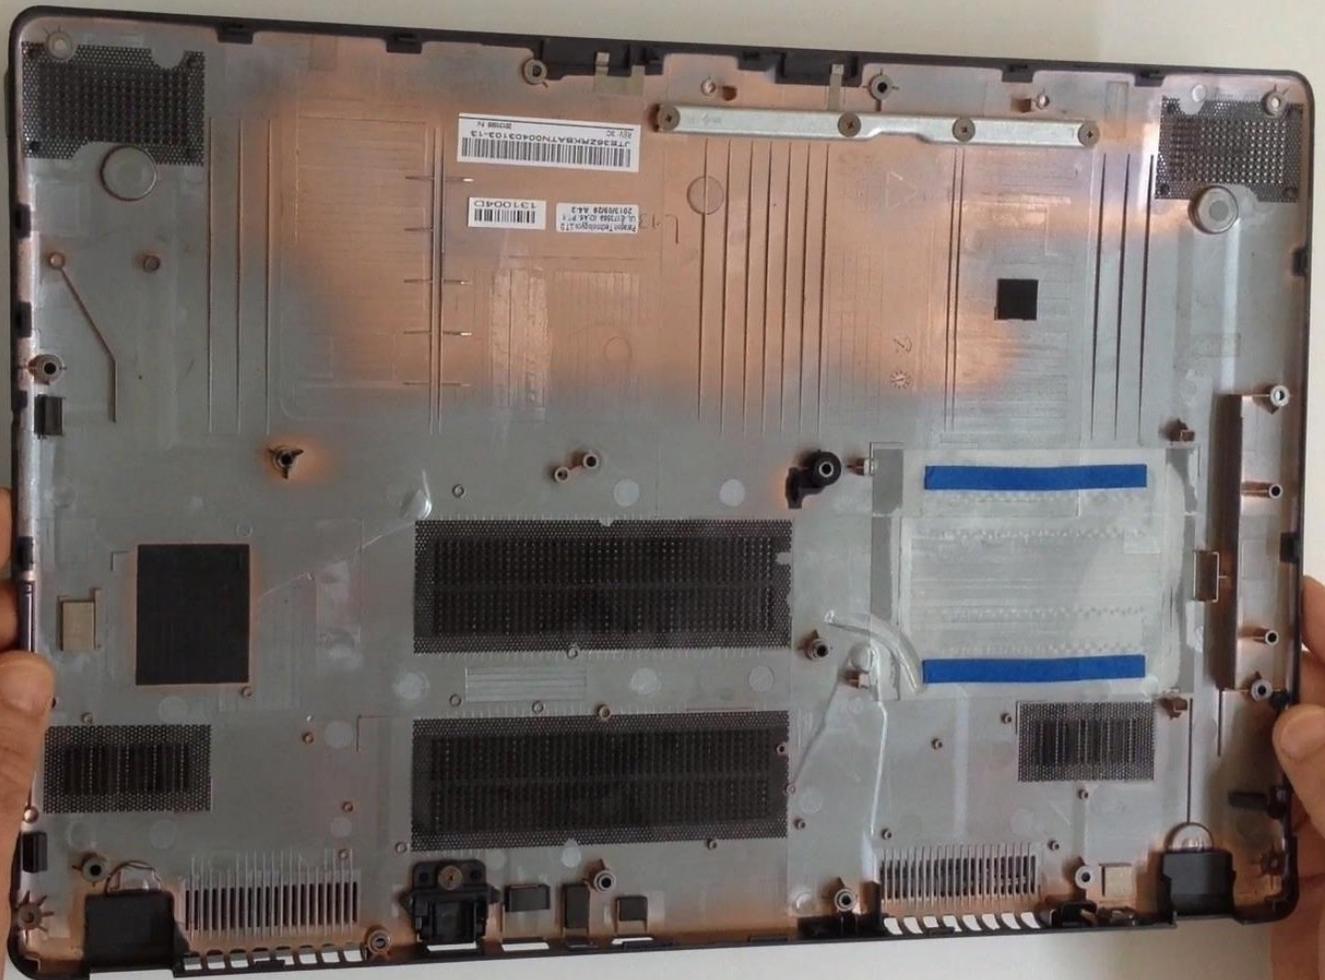

INTRODUCTION

Aspire V5-572, V5-572G - how to remove the Bottom cover.


[video: <http://youtu.be/Sg8tUXZL864>]



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Bottom Cover

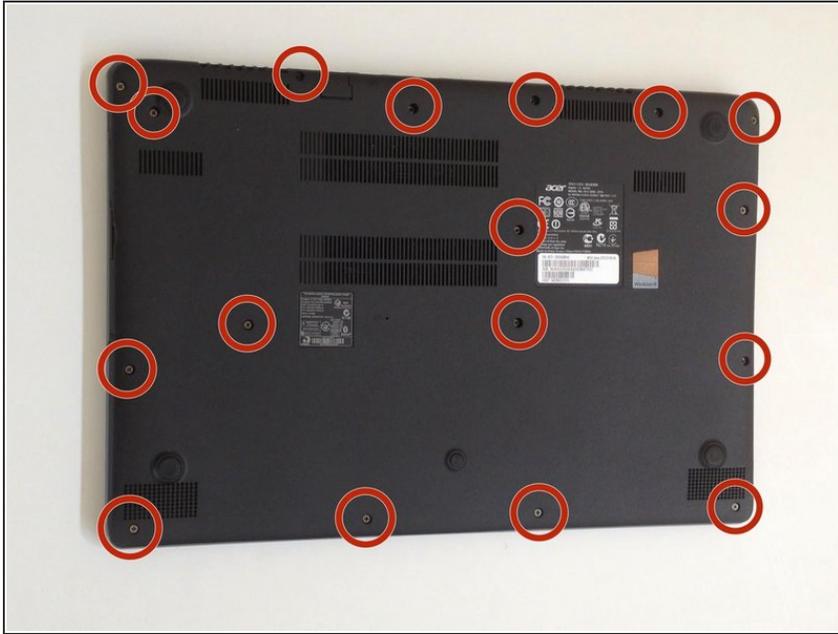

- ⓘ Switch-off the Laptop.
- Remove the seventeen Philips #0 screws.

Step 2




- If there is a plastic storage tray in the laptop, remove it.

Step 3



- Starting from the SD Memory Card hole, start prying between the top and bottom cases.
- ⚠ Use plastic tools to avoid damaging the cover.
- Remove the bottom case.

Step 4

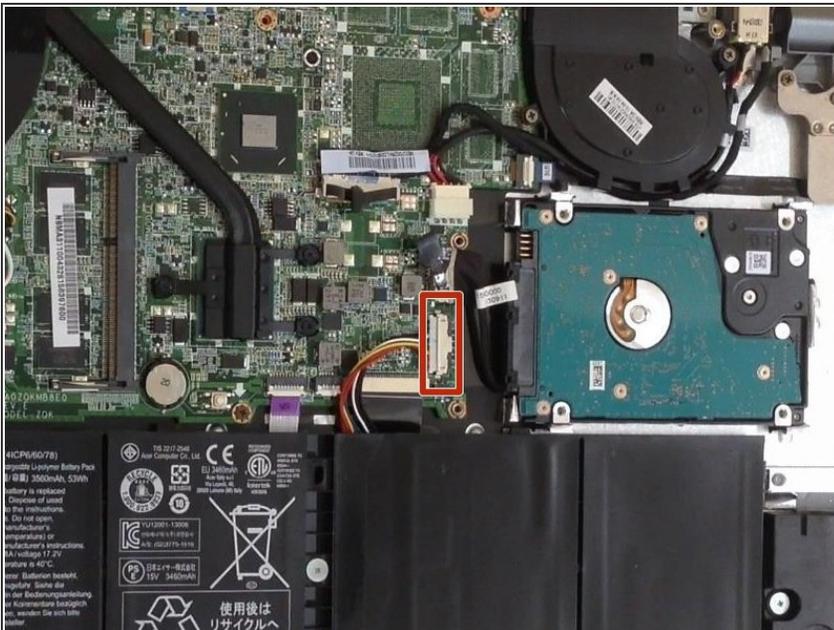

- ⚠ Disconnect the battery immediately for a safer repair.
- Pull the battery connector away from the hard drive to disconnect it.

To reassemble your device, follow these instructions in reverse order.