


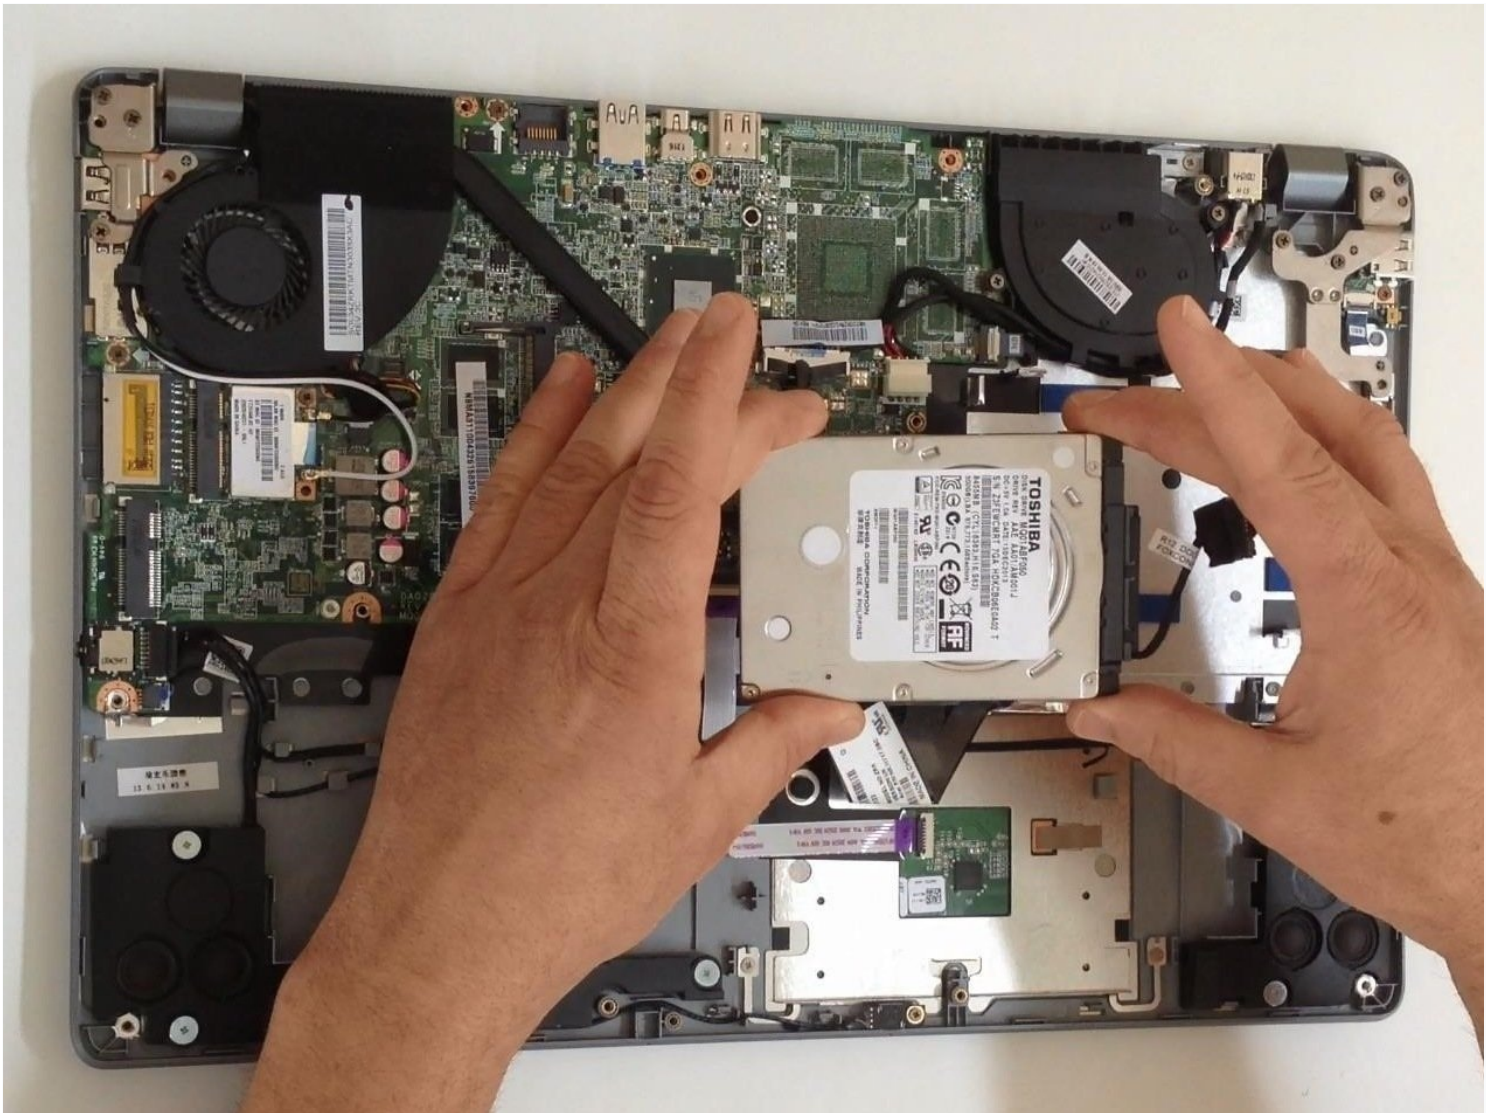

# Acer Aspire V5-572, V5-572G HDD Replacement

Acer Aspire - V5-572, V5-572G Follow this guide...

Written By: ZFix



# INTRODUCTION

Acer Aspire - V5-572, V5-572G

Follow this guide if you want to change / upgrade your HDD (Hard Disk Drive) or install SSD (Solid State Drive).


## TOOLS:


Phillips #0 Screwdriver (1)  
iFixit Opening Tool (1)  
iFixit Opening Picks (Set of 6) (1)

## PARTS:

500 GB 5400 RPM 2.5" Hard Drive (1)  
1000 GB 5400 RPM SATA Hard Drive (1)  
500 GB SSD Hybrid 2.5" Hard Drive (1)

## Step 1 — Bottom Cover

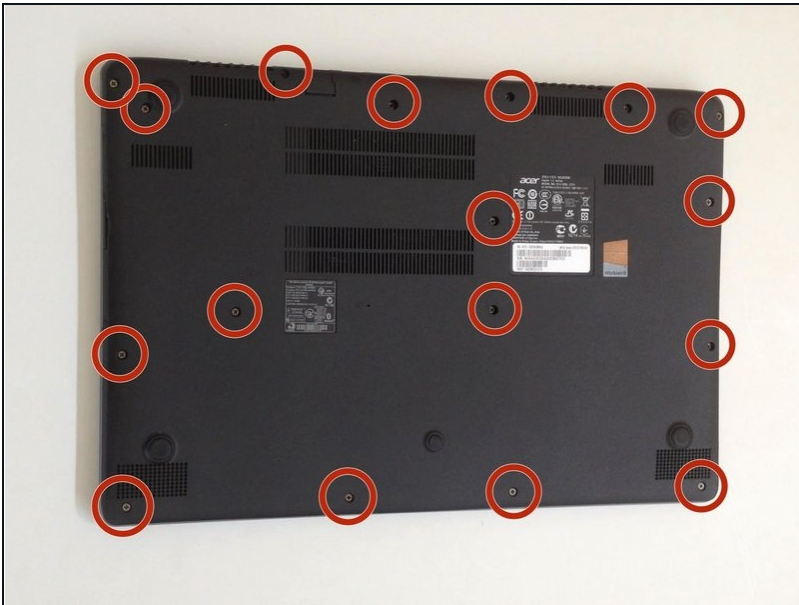

 Switch-off the Laptop.



- Remove the seventeen Philips #0 screws.

## Step 2



- If there is a plastic storage tray in the laptop, remove it.

## Step 3

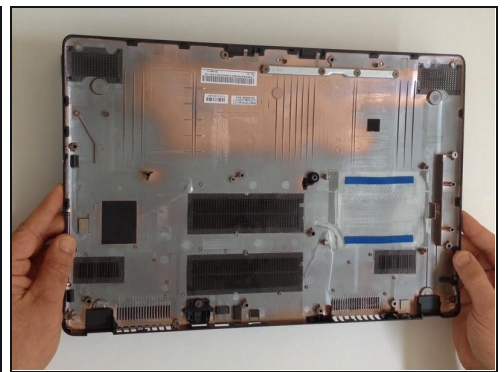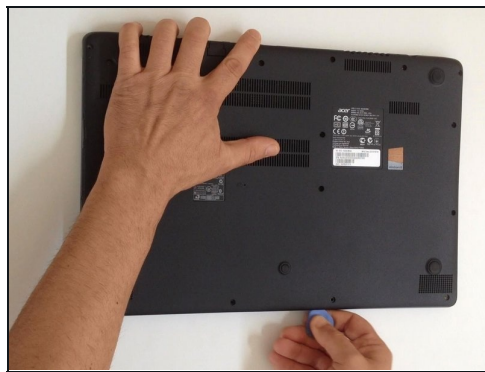


- Starting from the SD Memory Card hole, start prying between the top and bottom cases.

⚠ Use plastic tools to avoid damaging the cover.

- Remove the bottom case.





## Step 4

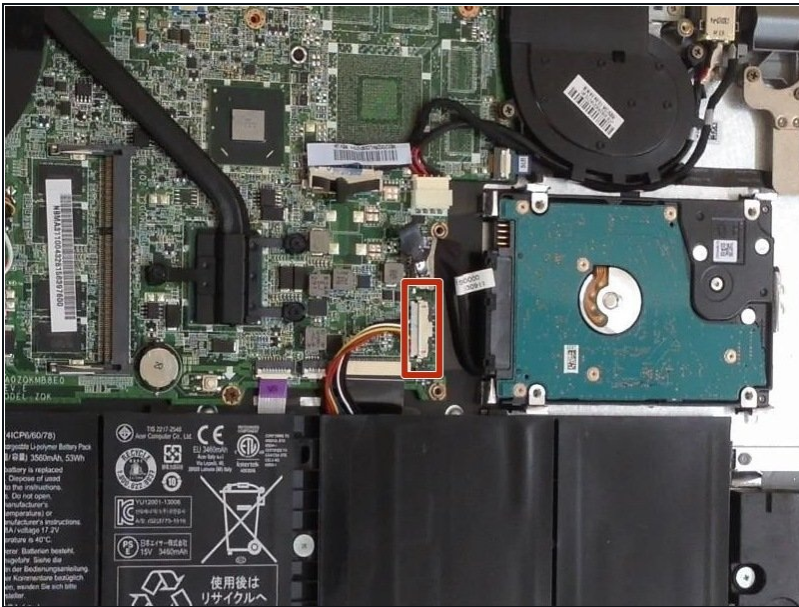

⚠ Disconnect the battery immediately for a safer repair.

- Pull the battery connector away from the hard drive to disconnect it.

## Step 5 — HDD

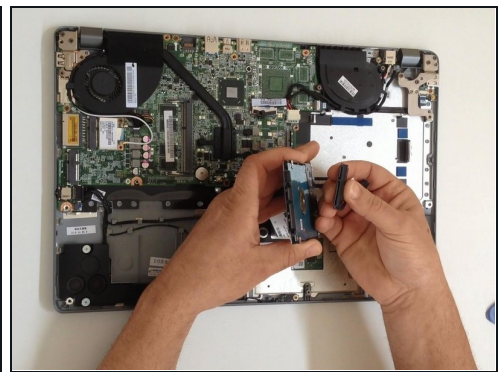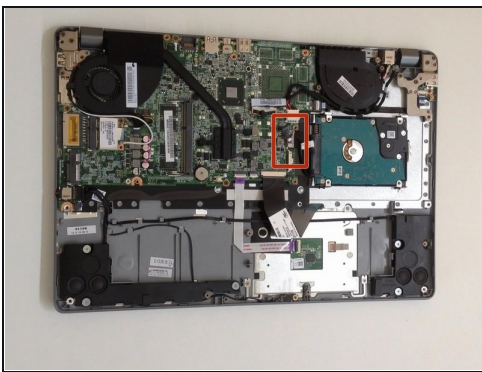

- Disconnect the SATA Cable from the Mother Board.
- Take out the HDD and remove the SATA cable from it.
- Now you can change / upgrade your HDD.

---

To reassemble your device, follow these instructions in reverse order.