




Parrot Bebop Drone Upper Parts Replacement

Use this guide to replace the upper assembly on your Parrot Bebop.

Written By: David Hoyt

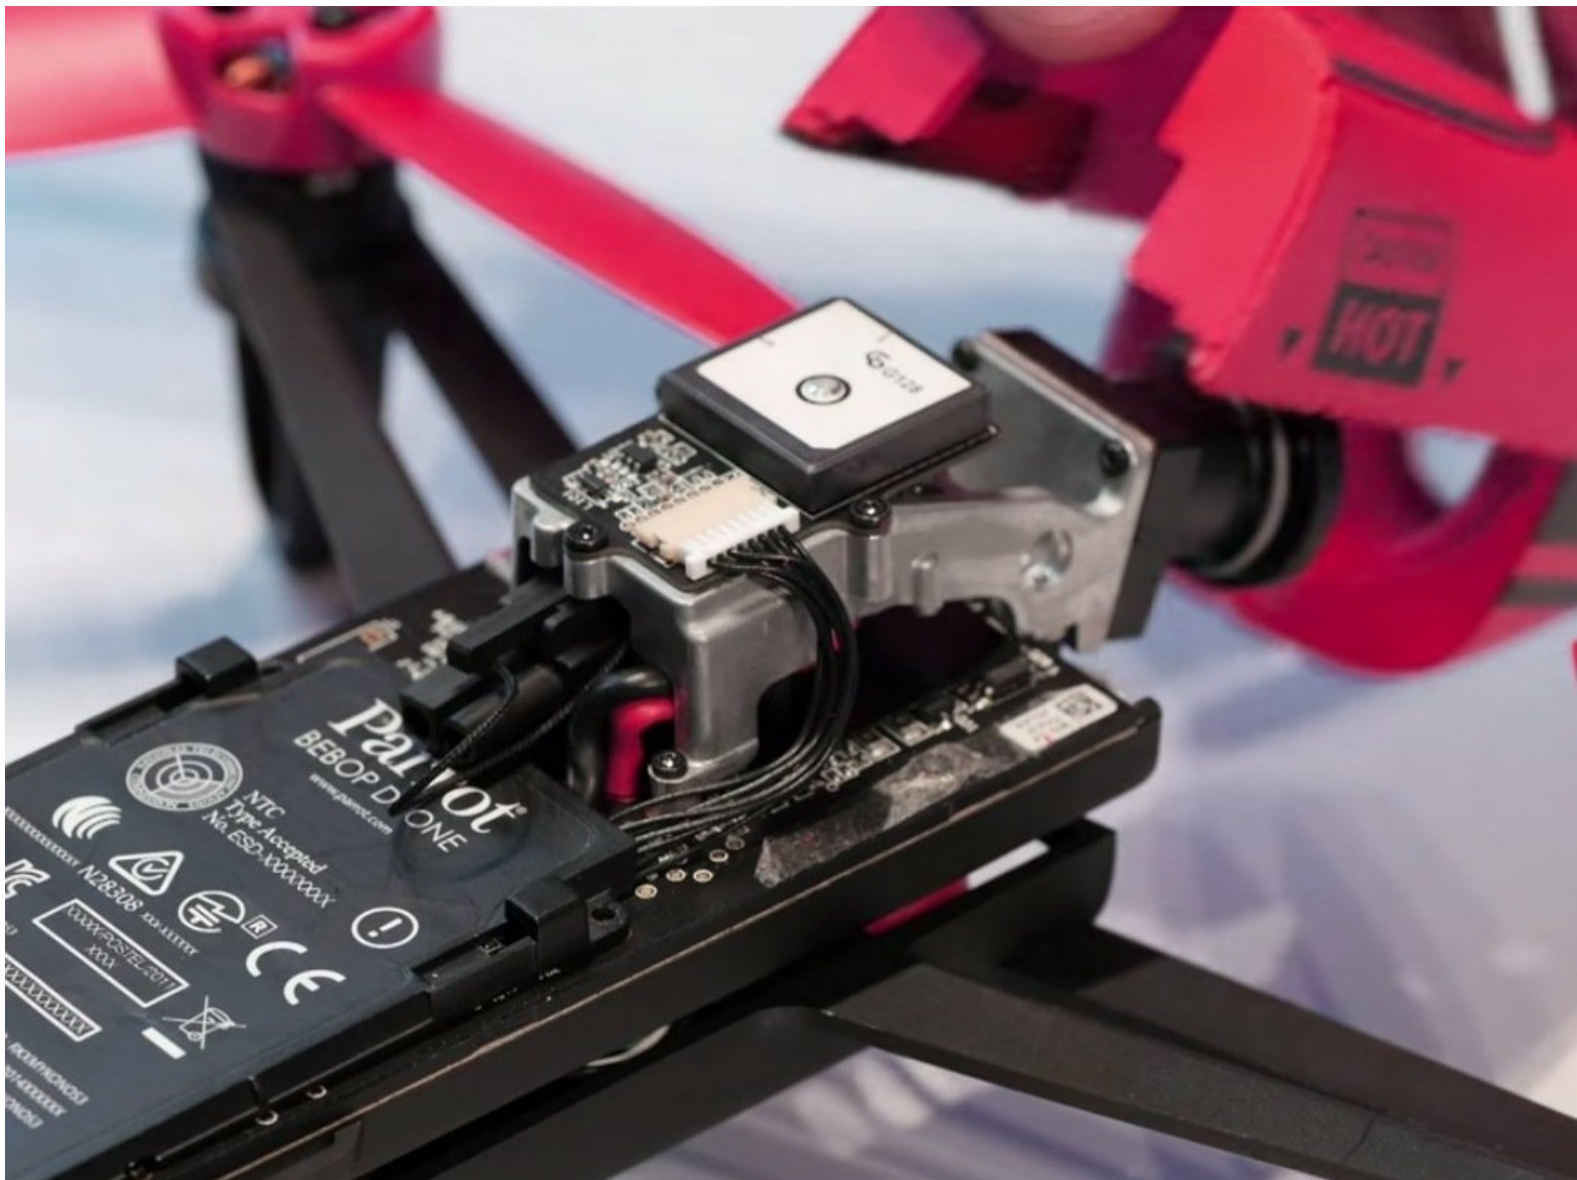

INTRODUCTION

Use this guide to replace the upper assembly on your Parrot Bebop. The upper parts include: the ventilator, camera, upper frame, and motherboard.

[video: <http://youtu.be/goDEkjjV5SE>]



TOOLS:

- [T8 Torx Screwdriver](#) (1)
 - [Precision Utility Knife](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

To reassemble your device, follow these instructions in reverse order.