




Kindle Touch Battery Replacement

Use this guide to replace an old or faulty...

Written By: Adam Yerly

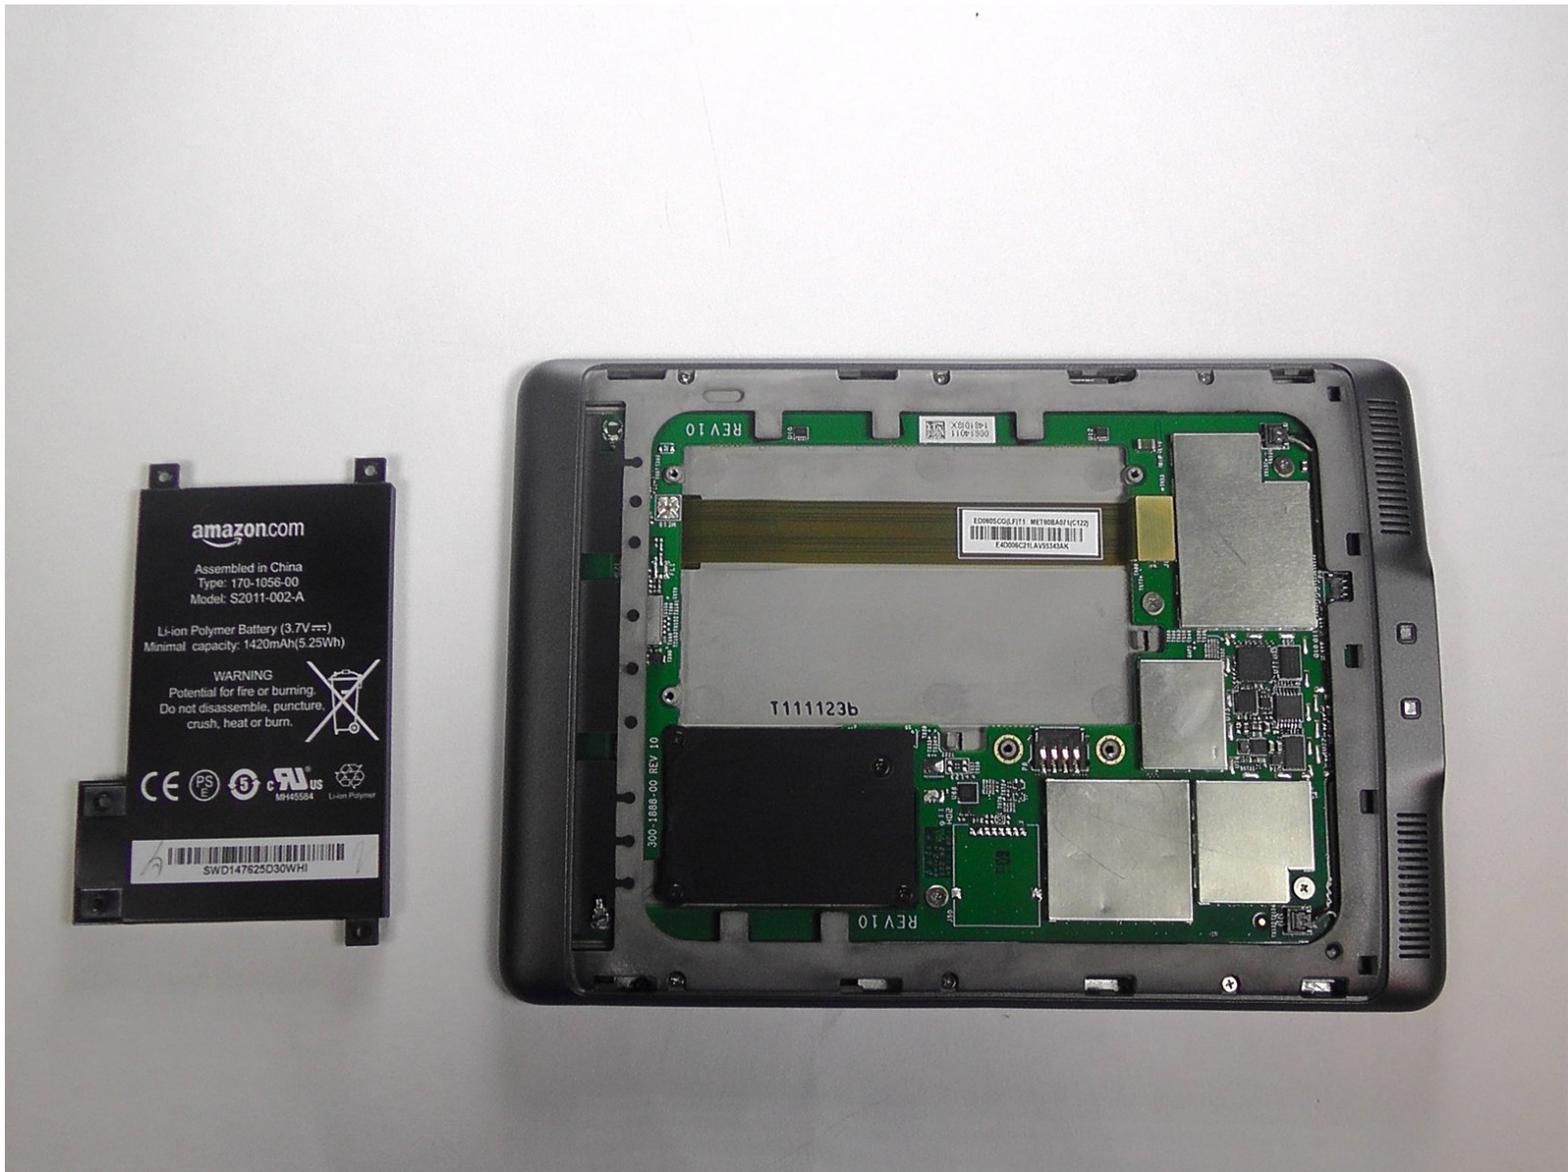

INTRODUCTION

Use this guide to replace an old or faulty Amazon Kindle Touch battery. The battery may be due for replacement if your Kindle runs out of power quickly, won't work unless plugged in, or won't charge.

Make sure the device is powered off and disconnected from all external power sources before beginning this process. Please dispose of electronic waste responsibly.

TOOLS:

- [iFixit Opening Tool](#) (1)
small
 - [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Use the plastic opening tool to undo the ten plastic clips around the back panel of the Kindle.

Step 2



- Gently lift the bottom and slide the panel off.

Step 3 — Battery



- Use a Phillips #00 screwdriver to remove the five screws.

Step 4



- Using the flat end of your spudger, gently pry the battery up and remove it.

To reassemble your device, follow these instructions in reverse order.