



Polaroid A10 Back Cover Replacement

This efficient guide will assist in opening the external casing of the Polaroid A10 by removing the back panel to access the internal device.

Written By: Shilpa Verma



INTRODUCTION


Use this guide to replace the back cover on your Polaroid A10.



TOOLS:


- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover

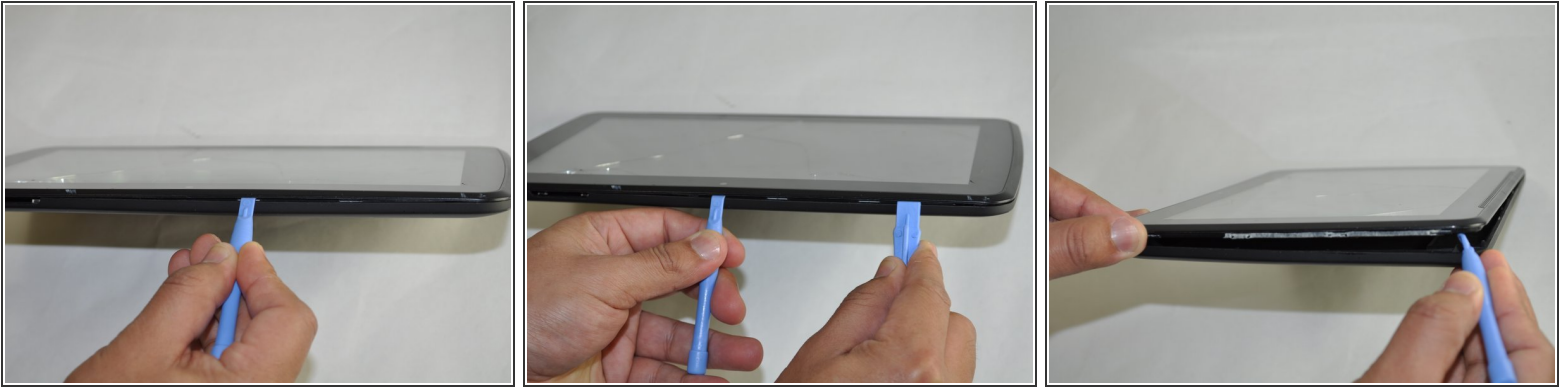

- Begin by having the side with volume and power button face up towards you.
- Insert a plastic opening tool between the display and the back cover.
- Once you have one plastic opening tool in, you can insert another one. While holding one in place, slide the other along the gap to release the tabs.

 It is easier to remove the back cover, if the display screen is faced down.

 The tabs must be released from all four sides before removing the back cover.

To reassemble your device, follow these instructions in reverse order.