



Hipstreet Equinox 2 Screen Replacement

Follow this guide to replace the screen of your tablet.

Written By: Brandon Snodgrass



INTRODUCTION

Often times the screen gets little dots that wont go away, or it could be cracked from dropping the tablet. The hardest part about replacing the screen is taking everything else off to get to it.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Rear Case




- Remove the two 3mm screws using a PH00 screwdriver.

Step 2



- Use the blue plastic opening tool to gently pry the back case off.

Step 3 — Battery

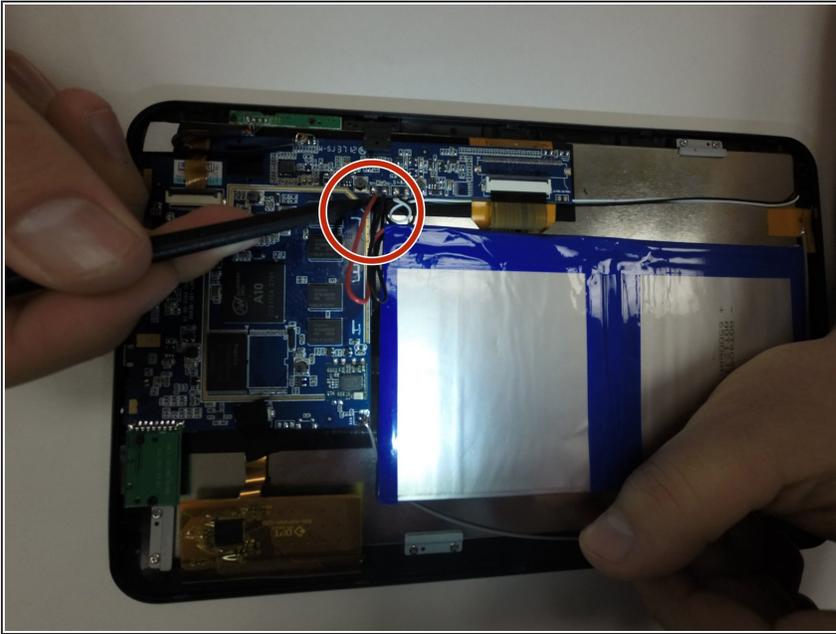


- Disconnect the wires that connect the battery to the motherboard using the spudger.

Step 4




- Slide the spudger underneath the battery and gently lift it off of the adhesive.

Step 5

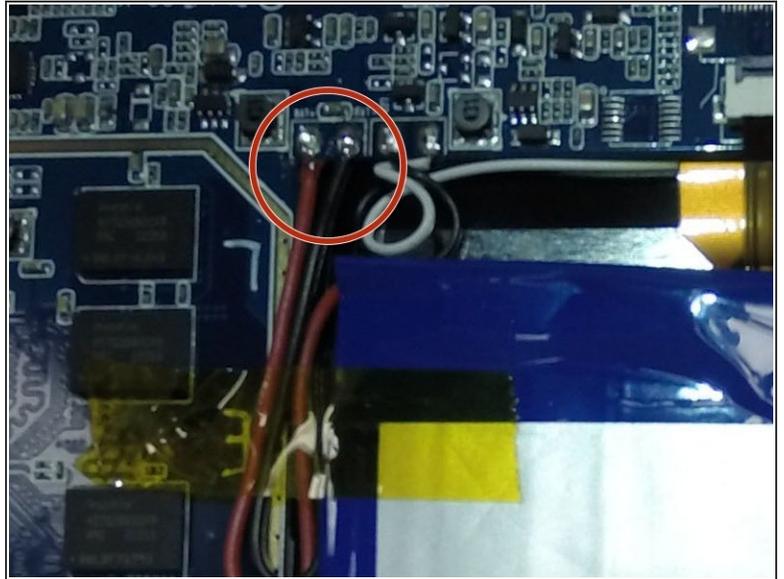


- Place the new battery in the same location and connect the wires the same way as the previous battery.

Step 6 — Motherboard

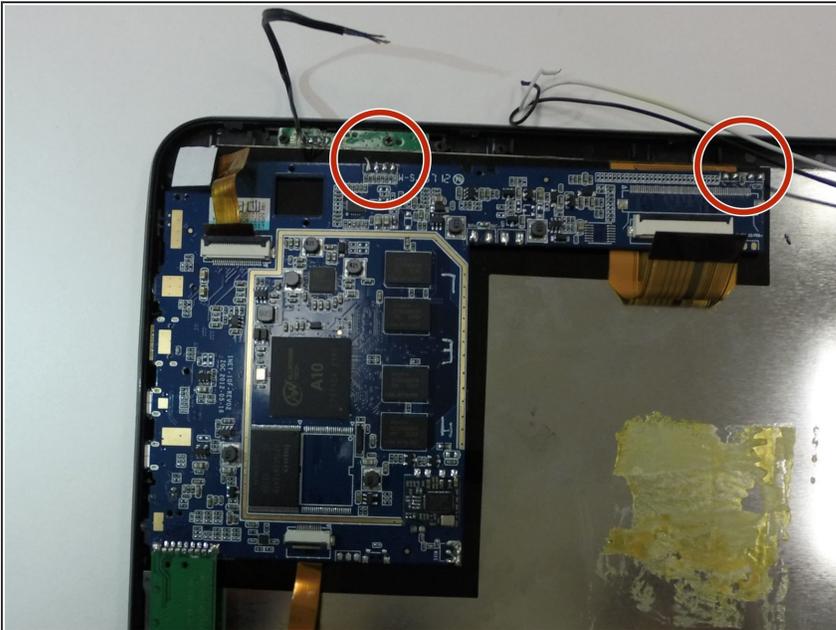

- [Unsolder](#) these wires from the motherboard, it is a good idea to label these wires as you remove them according to the picture to the left.

Step 7

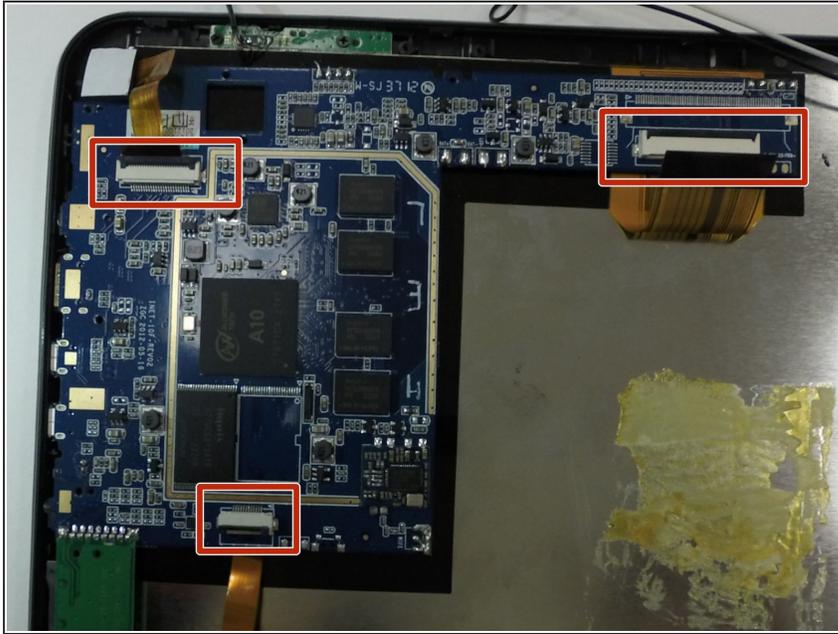

- Remove contact strips by lifting gently on the clip indicated in this picture, then pulling strip out of the clip.

Step 8




- Remove the 3.5mm screws located at these locations shown on the picture by using the PH00 screwdriver.

Step 9



- Gently lift the motherboard out of the tablet, make sure no wires are still caught or attached while you lift the motherboard.

Step 10 — Screen

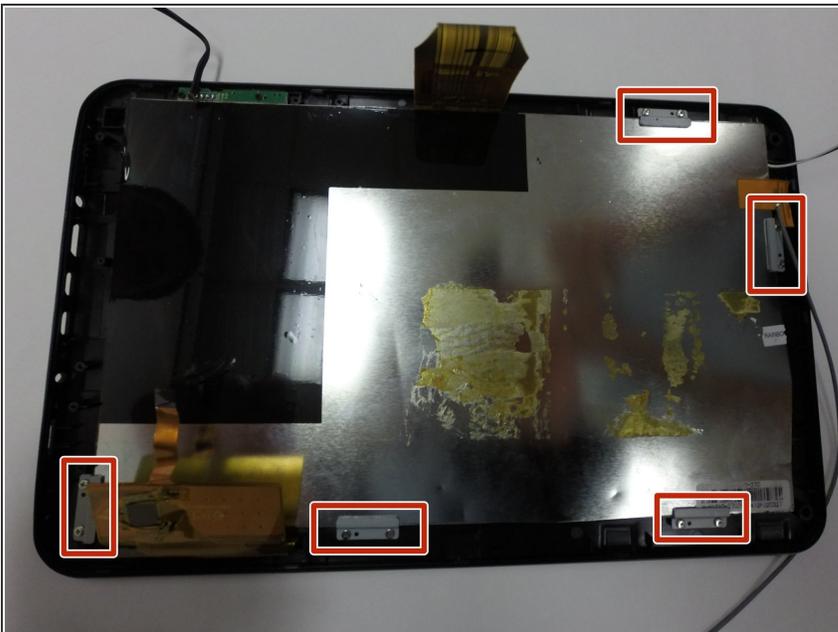

- Remove these 2.5mm screws and brackets holding the screen down using a PH00 screwdriver.

Step 11



- Gently lift the screen out of the tablet

To reassemble your device, follow these instructions in reverse order.