



Hannspree Hannspad SN1AT71 Back Panel Replacement

The first step in fixing your Hannspad is taking off the back panel, which is different than most tablets in that it wraps around the front of the tablet.

Written By: matthew vandeventer



INTRODUCTION

The Hannspad has a deceptive back panel that will not separate. Don't lose hope. This is not the real back panel, it is just there for aesthetics. The actual way to take the back panel off is at the seam around the edge of the screen. Follow these steps to protect your screen and easily take the back panel off your Hannspad.

TOOLS:



- [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Place the tablet screen side up.
- ⚠ Make sure the device is turned off to avoid damage.


Step 2

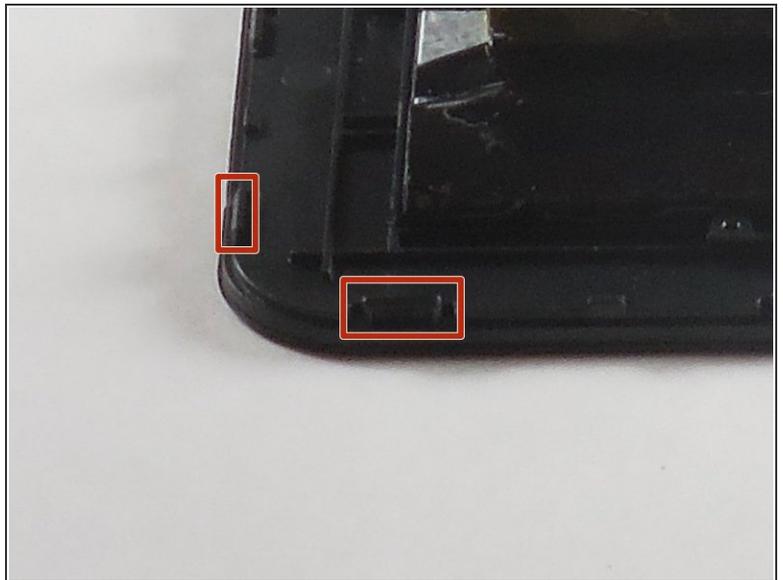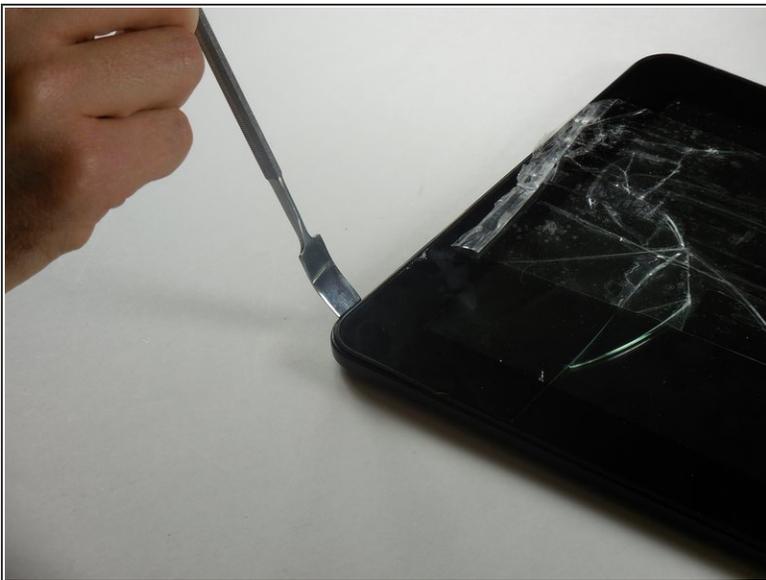

- Use the metal spudger to press an opening between the screen and back cover.
- *The plastic tabs are located on each corner of the back cover.*



⚠ Be careful, as the plastic tabs are delicate.

Step 3

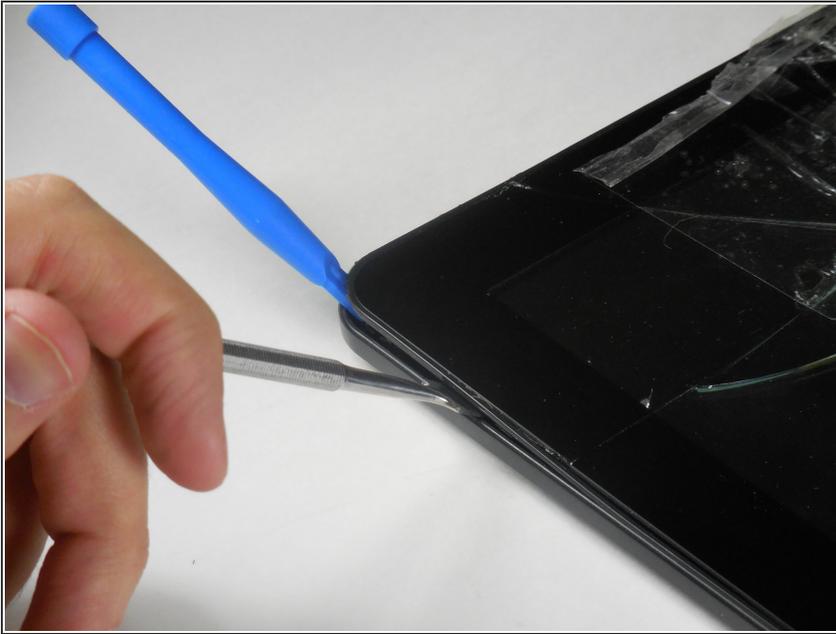


- Wedge the plastic opening tool between the screen and the back panel to prevent re-engagement

Step 4

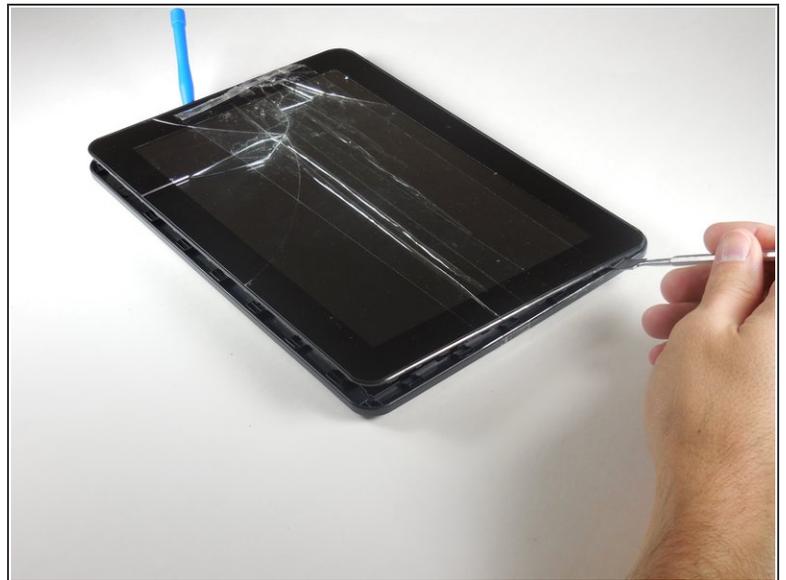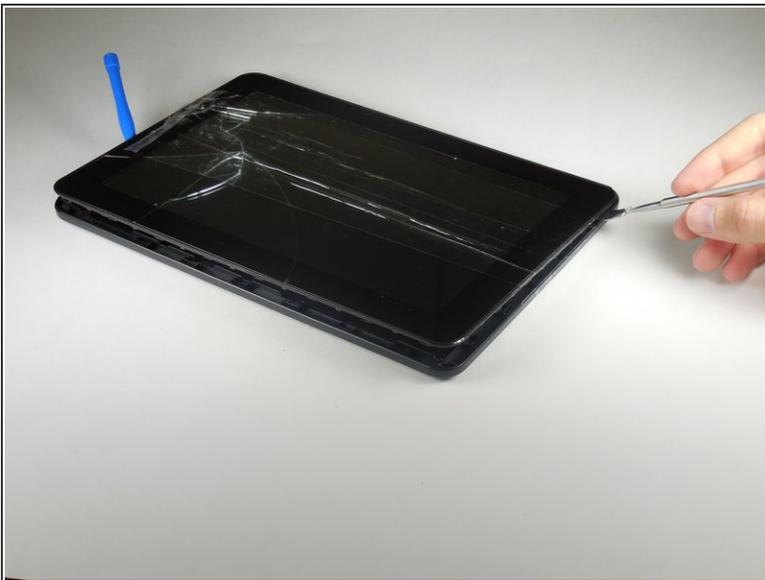

- Slide the metal spudger around the casing to separate it from the inside of the tablet.

Step 5

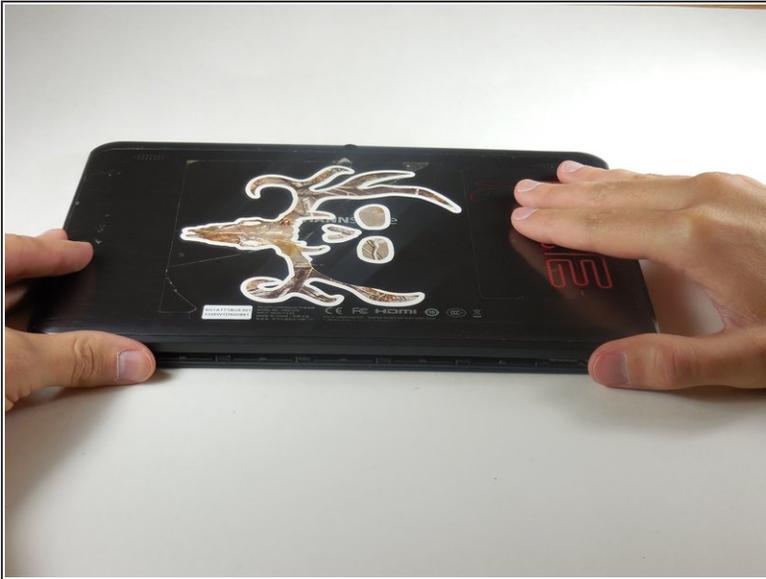

- Flip the tablet over so the screen side is down after all the tabs are separated.
- Remove the back panel by delicately lifting it straight up.

To reassemble your device, follow these instructions in reverse order.