




Nokia 6590i Vibrator Replacement

This guide will show you how to remove the...

Written By: Colby Leslie

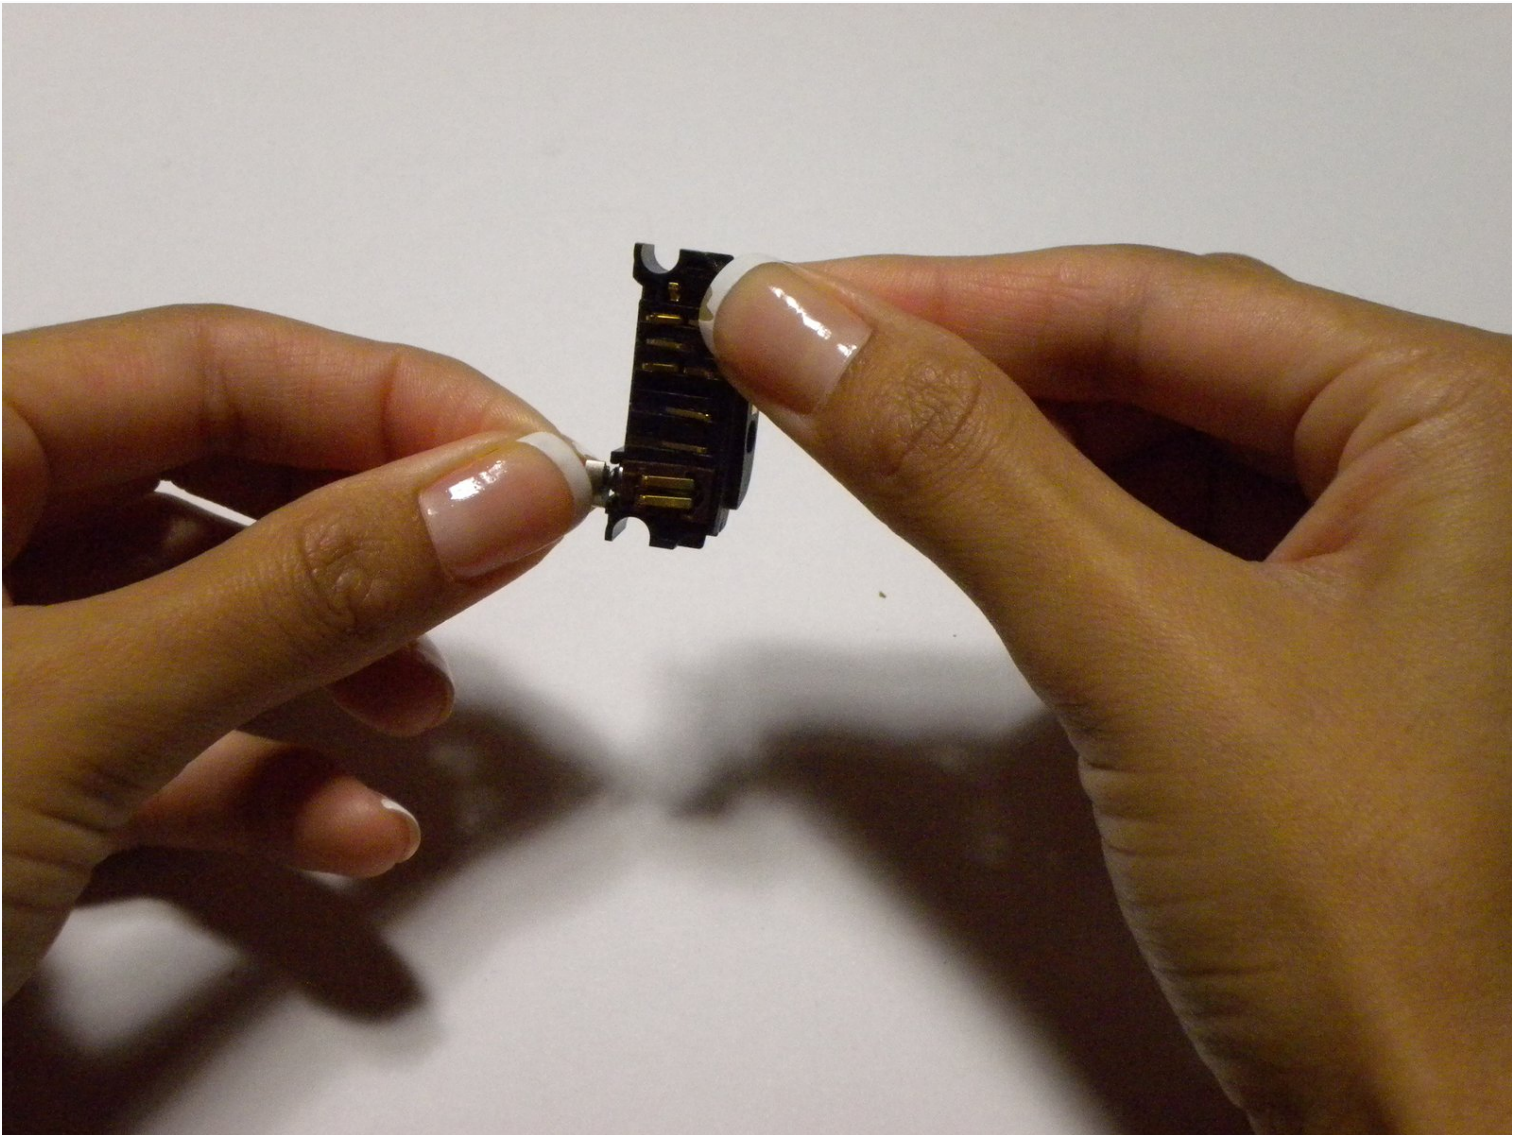

INTRODUCTION


This guide will show you how to remove the phone's vibrator used for the vibrate ring setting

TOOLS:

[Spudger](#) (1)

[T6 Torx Screwdriver](#) (1)

Step 1 — Battery

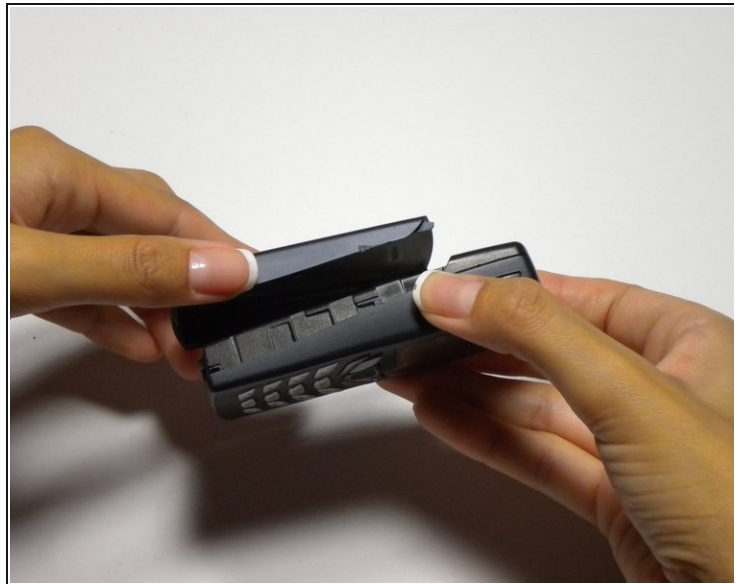

- Press the button on the bottom of the rear cover.
- Keep the button pressed while pulling the cover downward to remove the back cover.
- Lift the cover off.

Step 2



- To remove the battery, push it down from the top and pull it out.

Step 3 — Disassembling Nokia 6590i Keypad, Speaker, and Screen Assembly



- Grip the front cover from the bottom.

Step 4



- Lift the front cover off.

Step 5




- Remove the six screws using a T6 torx screwdriver.

Step 6




- Insert spudger along edge of assembly and gently lift assembly away from case

Step 7

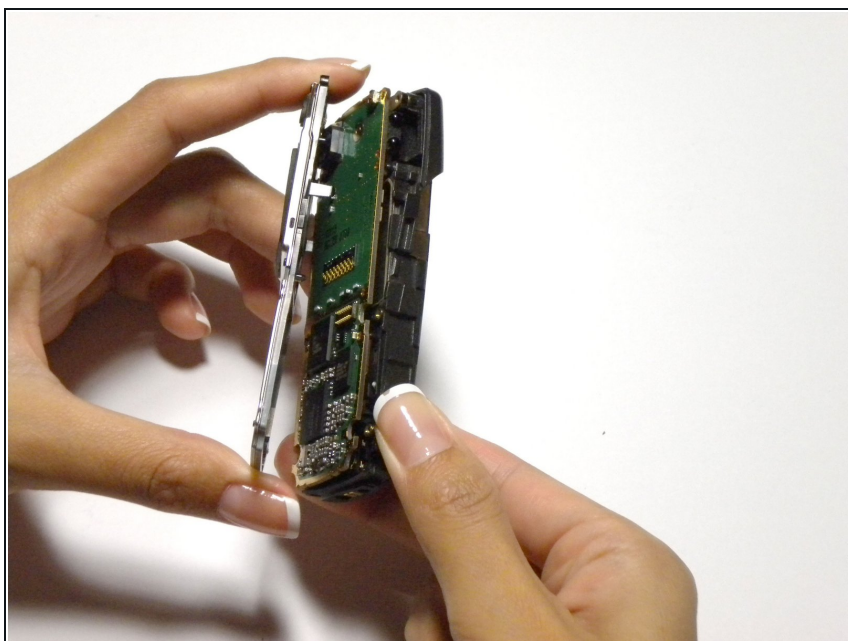


- Remove assembly from phone

Step 8 — Logic Board

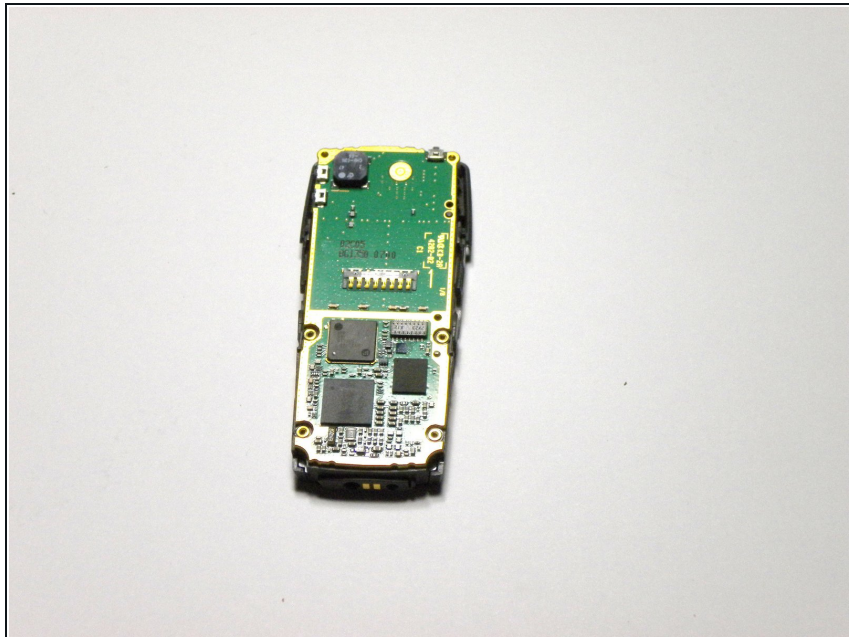


- The logic board now sits on top of the phone.

Step 9

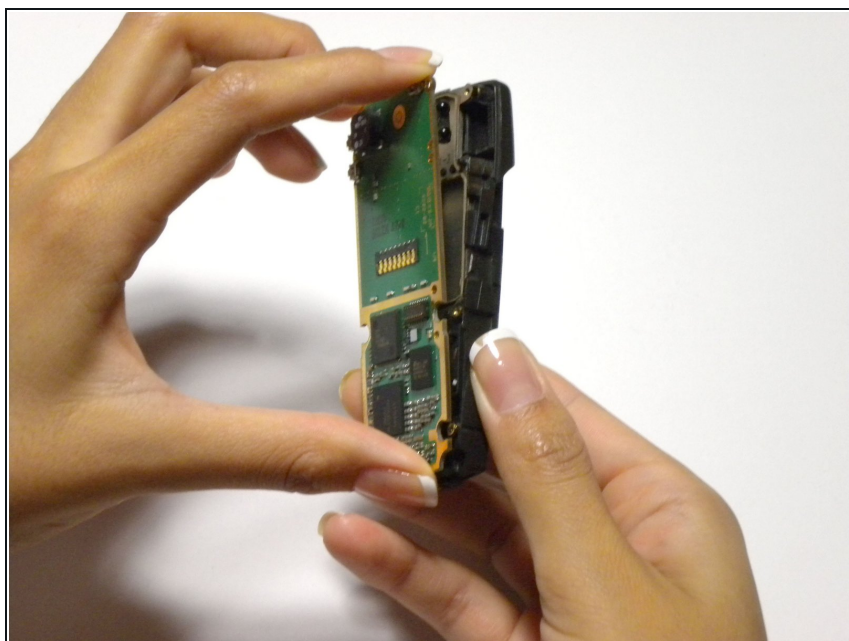


- Lift the logic board out of the phone.

Step 10 — Battery Charger Connector

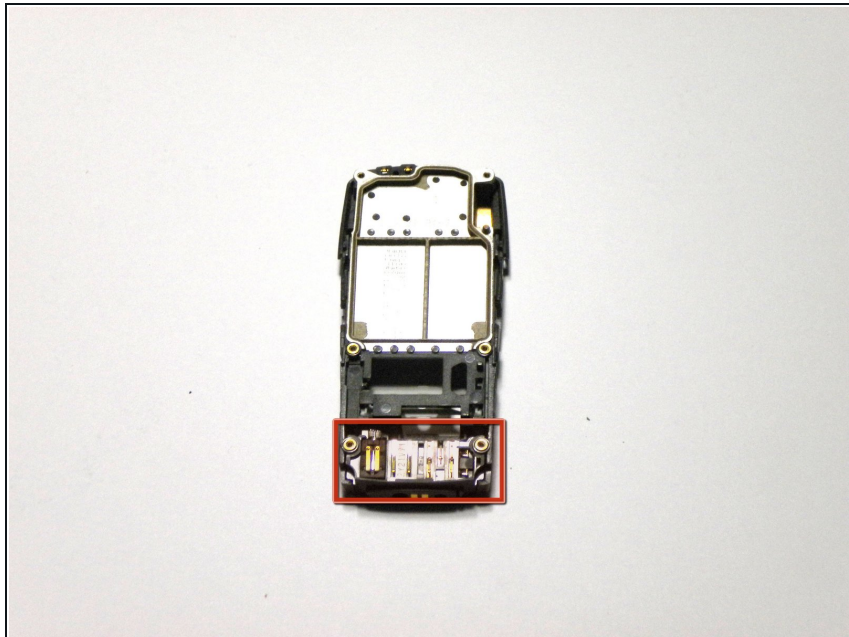


- Locate battery charger connector

Step 11

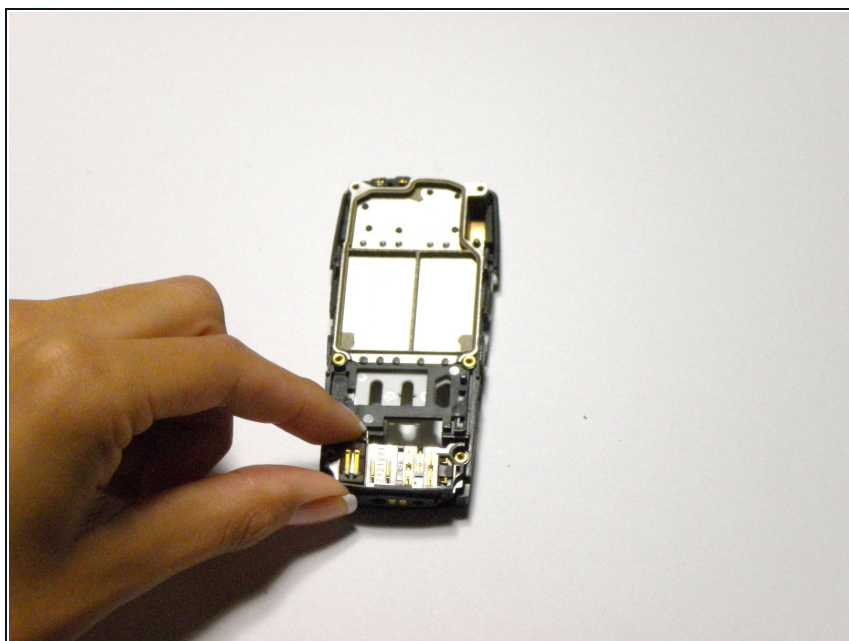


- Grasp top and bottom of battery charger connector on the left side

Step 12

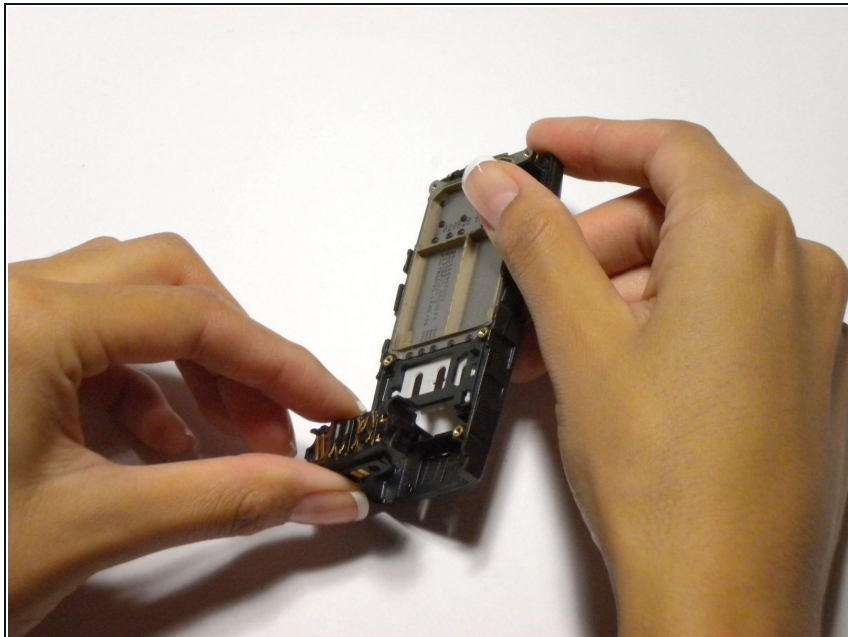


- Lift out the battery charger connector

Step 13 — Vibrator

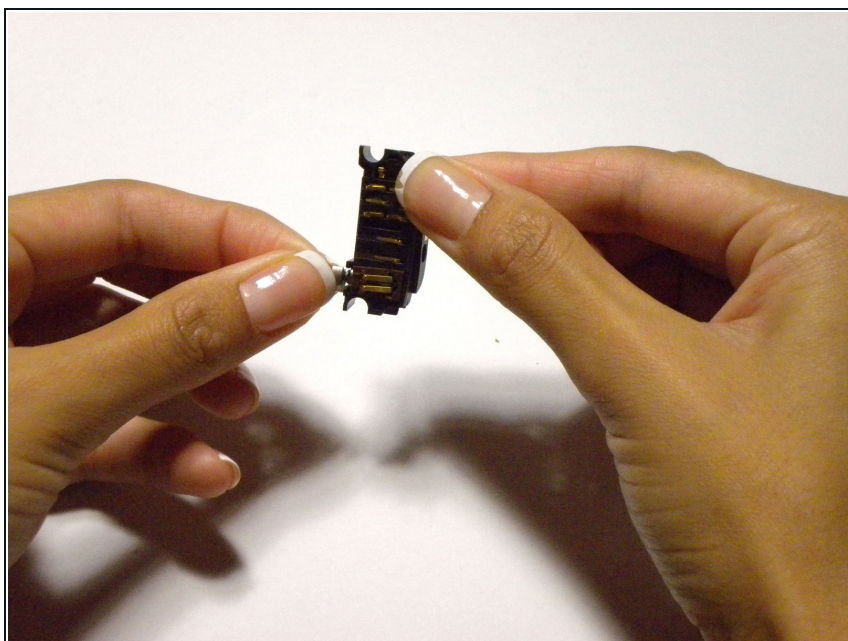

- Grasp vibrator which protrudes from the battery charger connector

Step 14

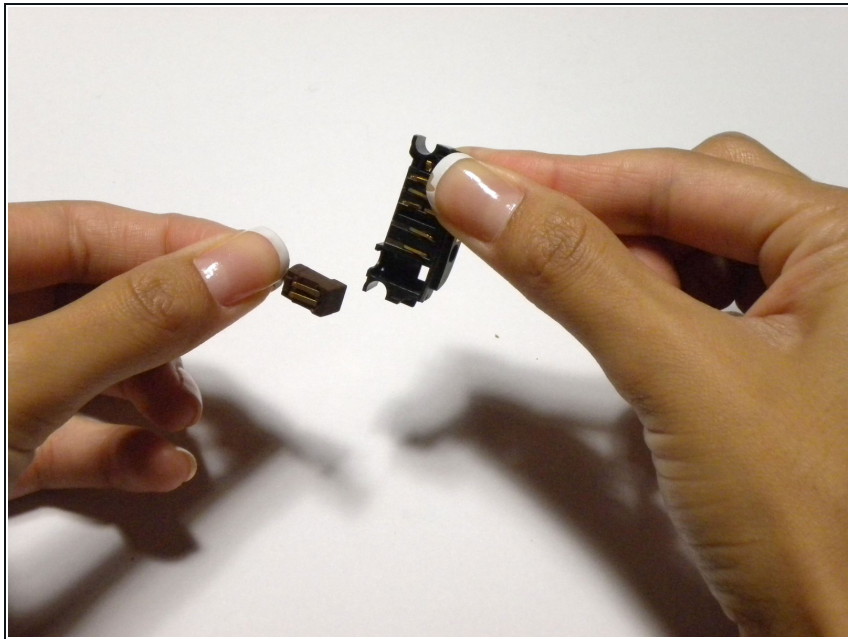

- Lift the vibrator out of the battery charger connector.

To reassemble your device, follow these instructions in reverse order.