



# Arnova 7K G3 Rear Cover Replacement

This guide will show you how to remove the back cover of the Arnova 7K G3.

Written By: Tyler Sigafoose



---

## INTRODUCTION

Before replacing any components on the Arnova 7K G3 tablet, disassembly is required. That process starts with removing the rear cover to gain access to a majority of the components including the battery, speaker, and logic board.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Cover



- Remove four 5 mm Phillips #00 screws from each corner of the tablet.

## Step 2

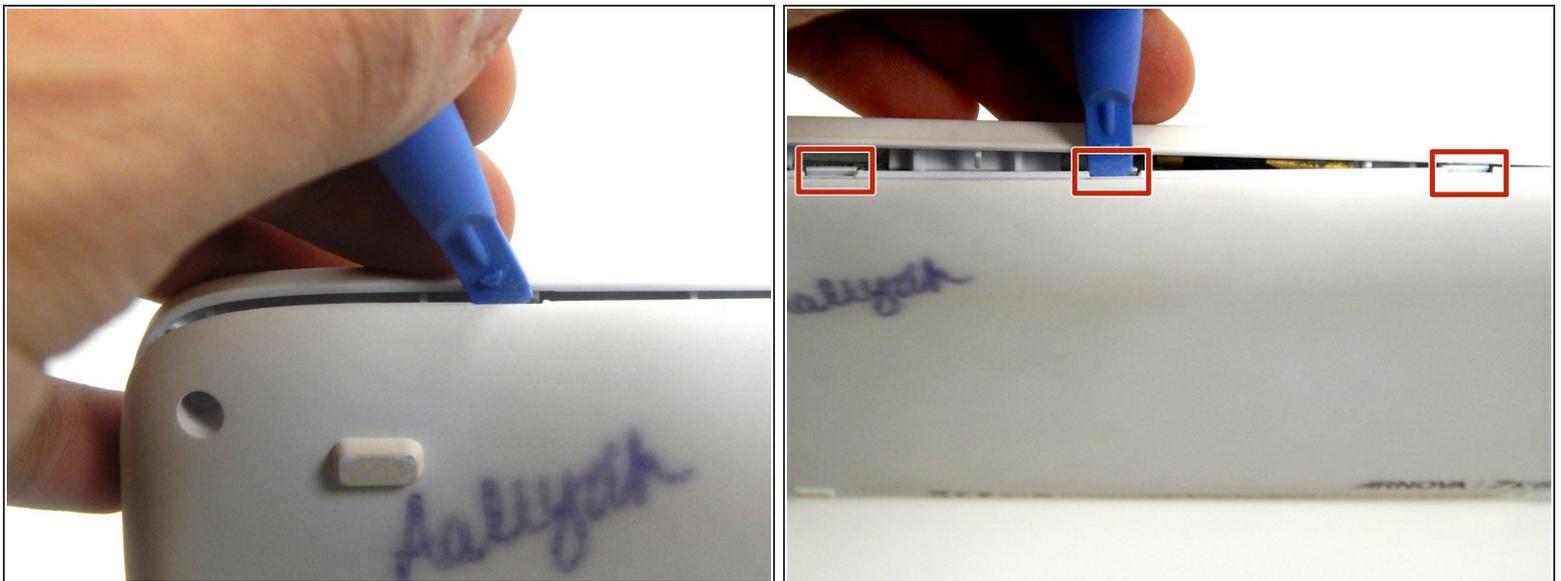

- Place the iFixit opening tool in the notches between the cases and pull the covers apart.

### Step 3



- Repeat step two until 3/4 of the rear cover is unlatched.
- Proceed to remove the rear cover by gently pulling it apart by hand.

To reassemble your device, follow these instructions in reverse order.