



Hipstreet Equinox 2 Rear Case Replacement

This guide serves as a prerequisite for many other guides listed here, it covers how to remove the back of the tablet.

Written By: Zach



INTRODUCTION

To get into the tablet to do any work you must remove the rear case of the tablet. The ease of removing the back of this tablet makes it very serviceable.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case



- Remove the two 3mm screws using a PH00 screwdriver.

Step 2

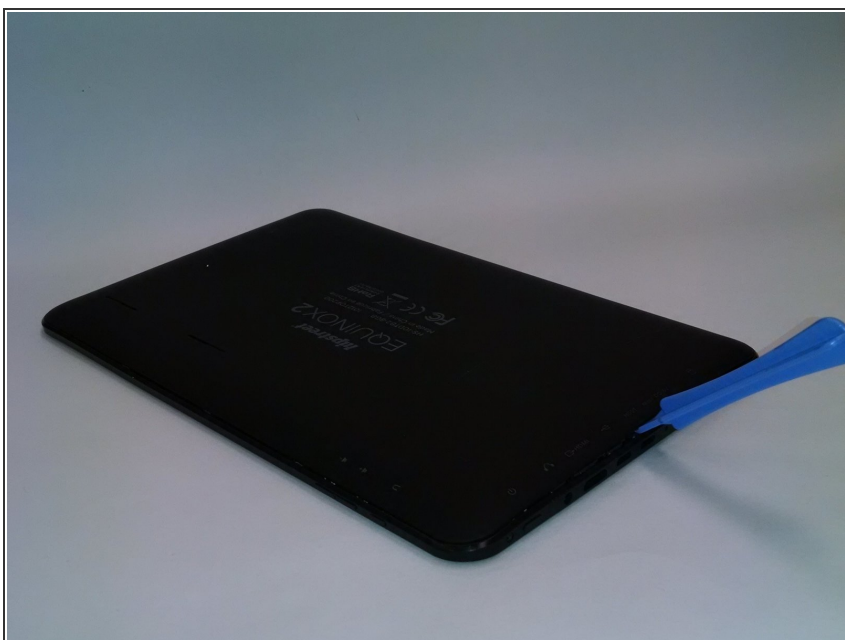

- Use the blue plastic opening tool to gently pry the back case off.

To reassemble your device, follow these instructions in reverse order.