



GoPro Hero3+ Black Edition Front Face Plate Replacement

This guide will show how to easily remove the faceplate of the GoPro Hero3+ Black Edition.

Written By: Nathan Braham



INTRODUCTION

If you don't like the cracked look of your GoPro faceplate, it may be time to give it a makeover. See how to replace it in under a minute!



TOOLS:


- [iFixit Opening Tools](#) (1)



PARTS:

- [GoPro Hero3 Plus Black Front Panel](#) (1)

Step 1 — Front Face Plate

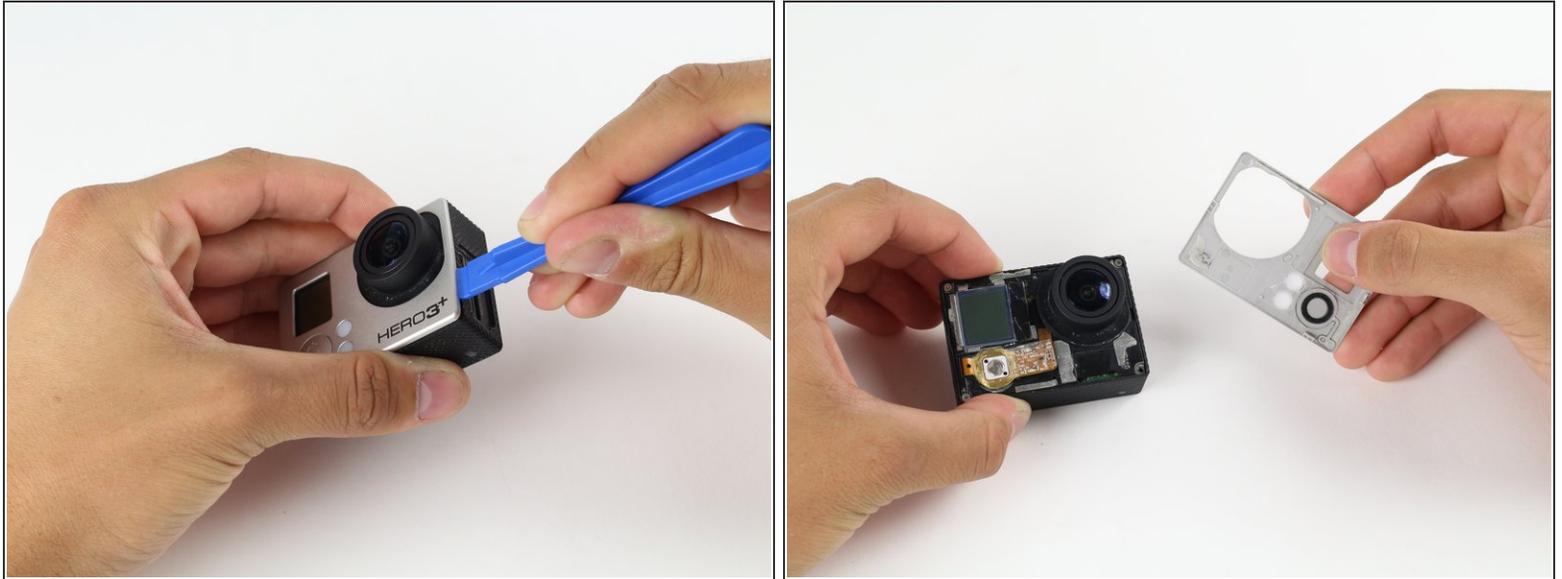

- Using a plastic opening tool, pry the gray, front face plate until it can be removed from the housing.
 - ⚠ To avoid breaking or weakening the tabs on the face plate which hold it in place, alternate the sides from which you pry and check each tab before separating the plate from the body.

To reassemble your device, press face plate back on with hands.