



Written By: Jason



INTRODUCTION

Changing the battery may be necessary if the device won't power up, or doesn't seem to hold a charge anymore. The most challenging step to changing the battery is removing the back cover. Acquiring the tools listed (or similar) are absolutely necessary for a complication free battery replacement.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:

- [Double-Sided Tape](#) (1)



Step 1 — Back Cover

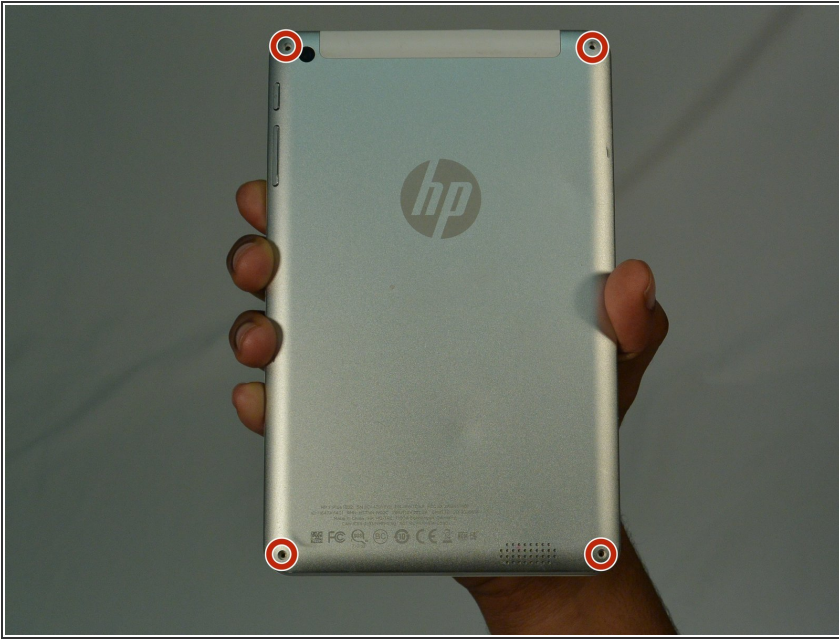

- Using the T5 Torx Screwdriver, remove the T5x3mm screws located in all 4 corners.

⚠ Device should be turned off and unplugged before starting the replacements.


Step 2

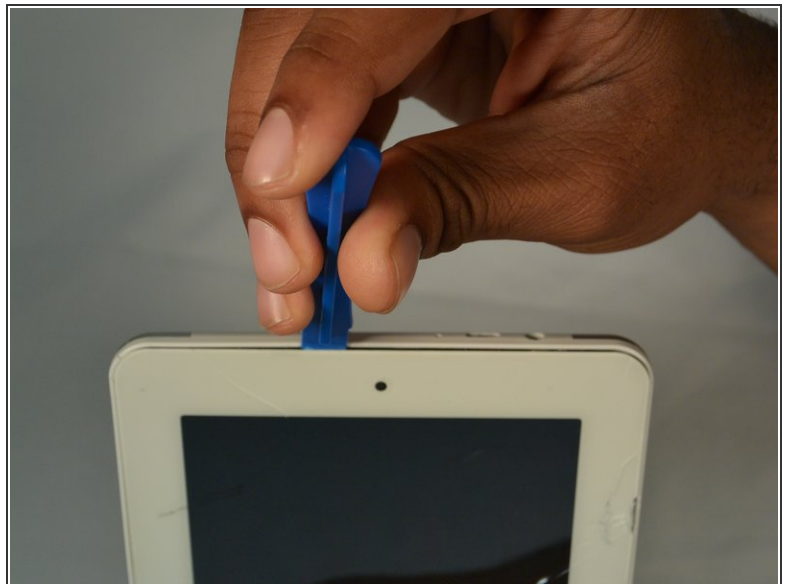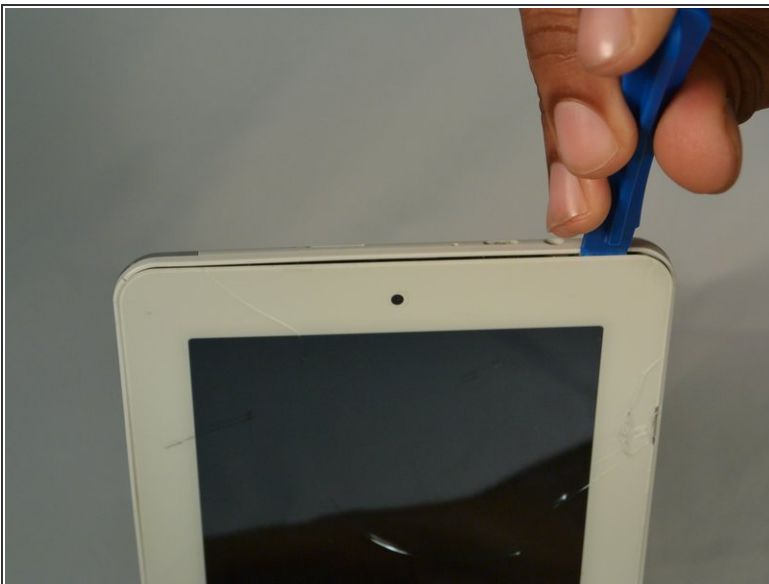

- Use the plastic opening tool to push in between the front and the back of the tablet.
- Slide the plastic opening tool around all 4 sides of the tablet to separate the back cover.


⚠ Be careful when you are trying to remove the back as it can damage the screen if you force it too much.

Step 3

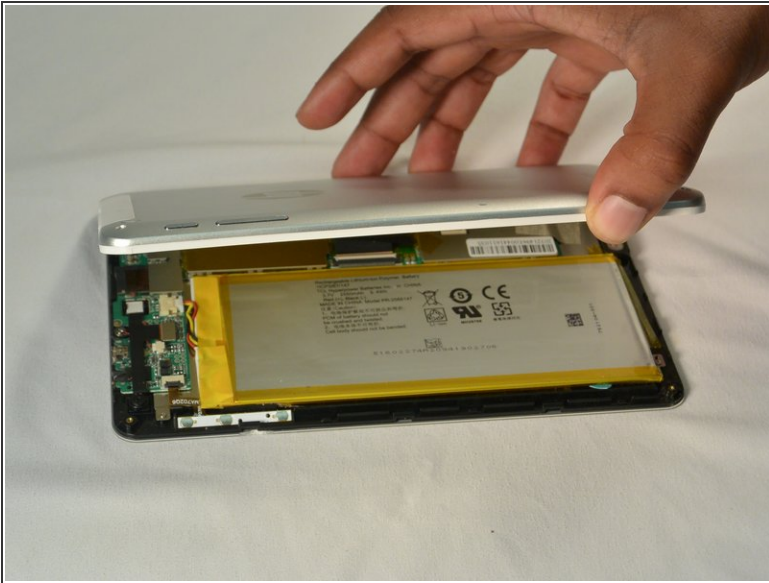

- Continue sliding the plastic opening tool around the tablet until all 4 sides are separated from each other.
- Remove the back cover.

Step 4 — Battery

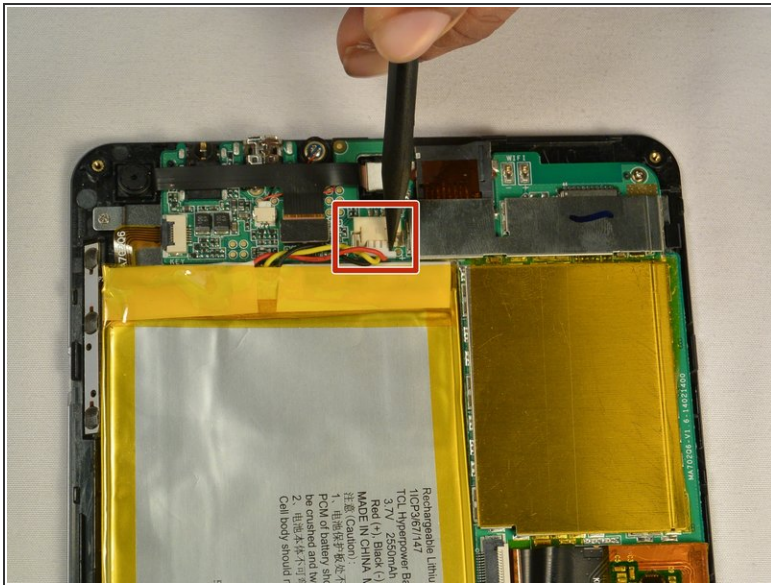

- Push out the battery connector using the spudger.
- Swing the battery connector clear of the connector socket.

Step 5



- Lift the battery from the device.

To reassemble your device, follow these instructions in reverse order. Use new double sided tape to secure the new battery.