




TRS-80 Color Computer Keyboard Replacement

Replace the aging built-in keyboard.

Written By: Christopher Paige

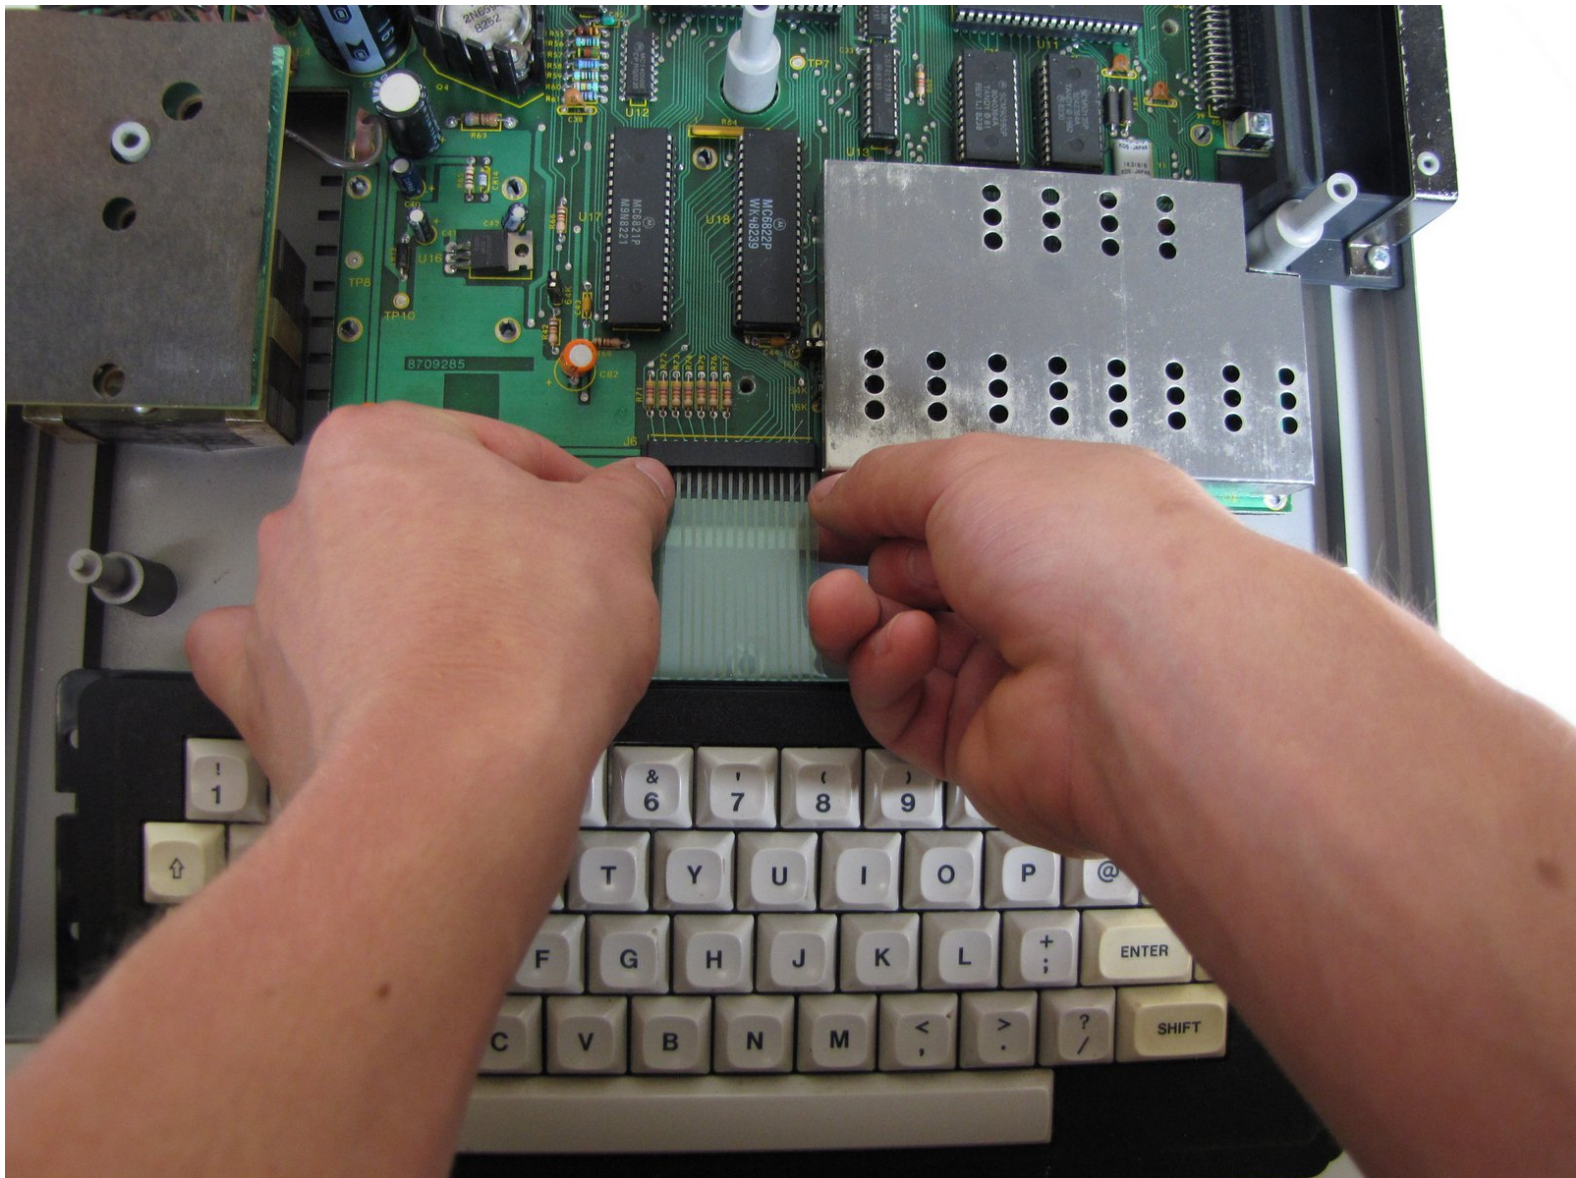

INTRODUCTION

Replace the aging built-in keyboard.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Outside Casing




- Flip the computer over.
- Remove the two 24.1mm Phillips screws near the front of the case.
- Remove the five 33.0 mm Phillips screws towards the back of the case.

Step 2



- Carefully flip the computer right side up.
- Lift off the top half of the case.

Step 3 — Keyboard

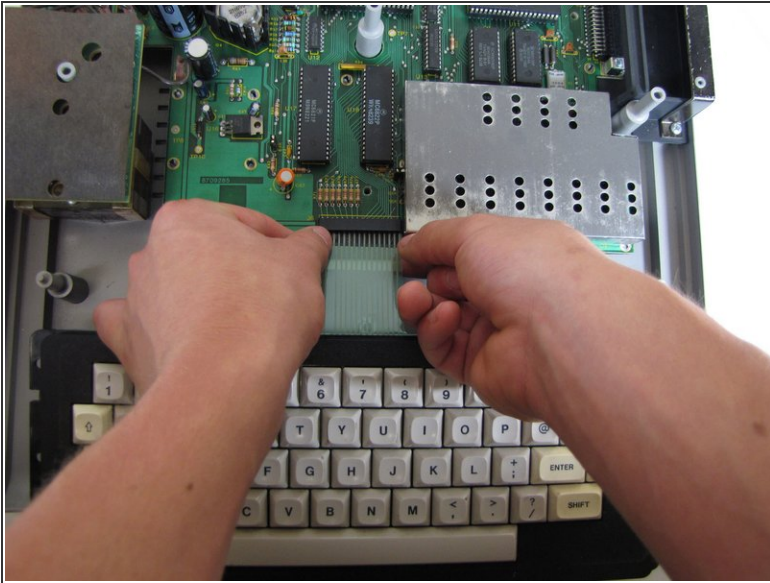

- Near the motherboard, gently pull the keyboard ribbon cable until it becomes free.
- Lift the keyboard out of the case.

To reassemble your device, follow these instructions in reverse order.