

Samsung SGH-A117 Battery Replacement

This guide will give step-by-step instructions on how to replace the battery in the Samsung SGH-A117 flip phone.

Written By: Stephanie Isaac



INTRODUCTION

Steps

- Removing the back cover- 1 step
- Removing the battery- 1 step


Tools Required

• No tools are required to complete this process

Time Required

• 1-2 minutes

Step 1 — Battery

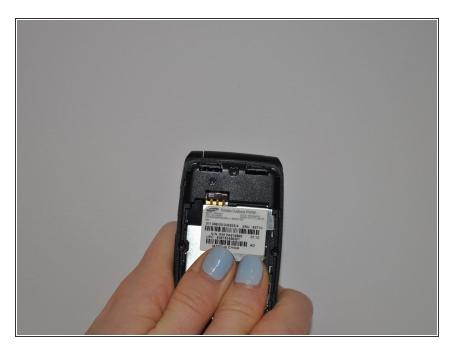

 Remove the battery by pressing the battery lock down and slide the battery cover away.

Step 2



 Lift the bottom of the battery and then move it up and away.

To reassemble your device, follow these instructions in reverse order.