



HKC P771A Digitizer Replacement

This guide shows you how to remove the digitizer from a HKC P771A tablet.

Written By: Sara Hill






TOOLS:



- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — Digitizer

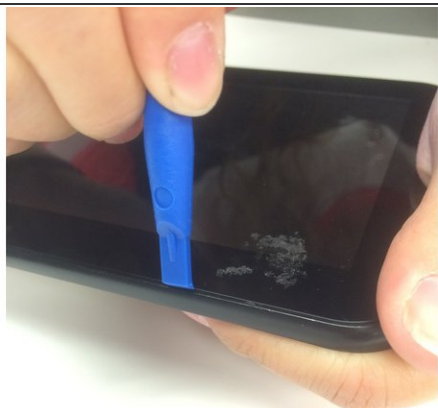


- Remove back of tablet using the plastic opening tool
 - Slide the opening tool between the back of the tablet and the digitizer
 - Lift along the edges until the back of the tablet and the digitizer are separated

Step 2

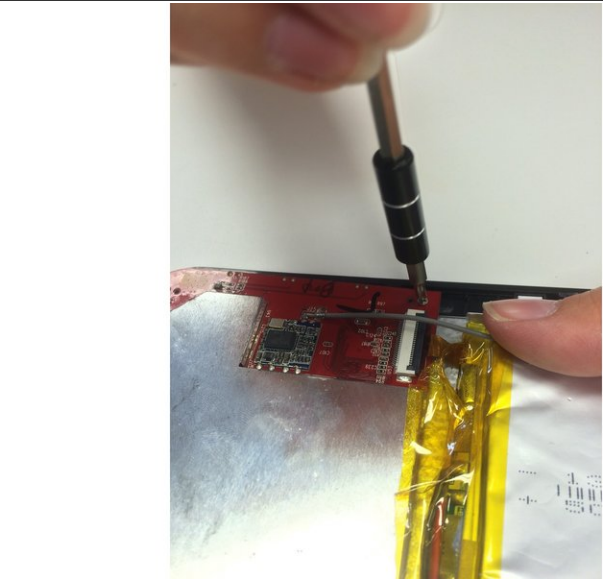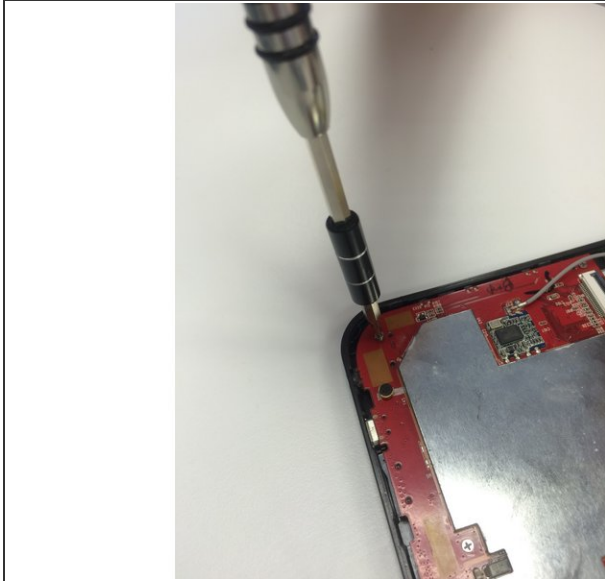

- Remove 4 screws located on the red motherboard
 - The red motherboard will be loose, but does not need to come completely unattached

Step 3

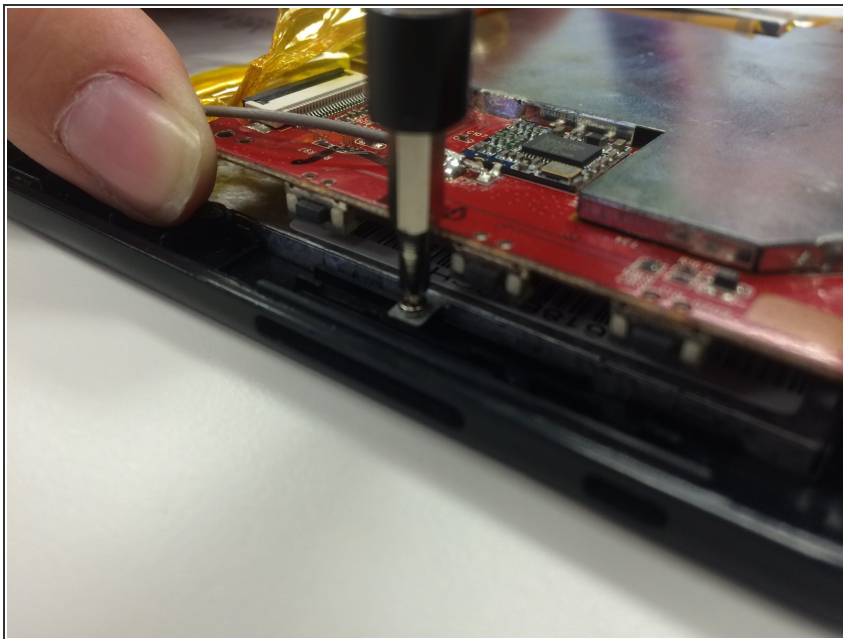

- Remove 7 screws located around the edges of the tablet
 - 5 screws are visible around the edges of the device and 2 screws are located underneath the red motherboard

Step 4



- Lift digitizer from the screen
- After removing all of the screws, the screen should easily separate from the digitizer

Step 5



- Now you can replace the old digitizer with a new one

To reassemble your device, follow these instructions in reverse order.