



Trio Stealth G4 Back Panel Replacement

This guide will show step by step instructions on how to replace the back panel of your Trio Stealth G4. This specific repair may be necessary if the back panel is broken or no longer latches to the front casing.

Written By: Matt Arnold



INTRODUCTION

The back panel assembly is an important part of the device as it protects all of the internal components of the tablet.

The disassembly is very simple and requires only a plastic opening tool. The latches keeping the back panel attached to the front casing can sometimes be a little difficult to separate, so don't be afraid to use some force.




TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



 Working on your device while it is turned on may result in electric shock. Be sure to shut down and unplug your device before you begin.

- Flip your tablet over so that the back panel is facing up.

Step 2




- Use a plastic opening tool to gently pry the back panel assembly apart from the front casing.
- Start on one edge of the device by inserting the plastic opening tool between the back panel and the front casing using a gentle rocking motion.

Step 3




- Once you have successfully separated one edge of the back panel from the front casing, slide the plastic opening tool along the other edges to detach them as well.
- ❗ The latches keeping the back panel attached to the front casing can sometimes be a little difficult to separate, so don't be afraid to use some force.

Step 4

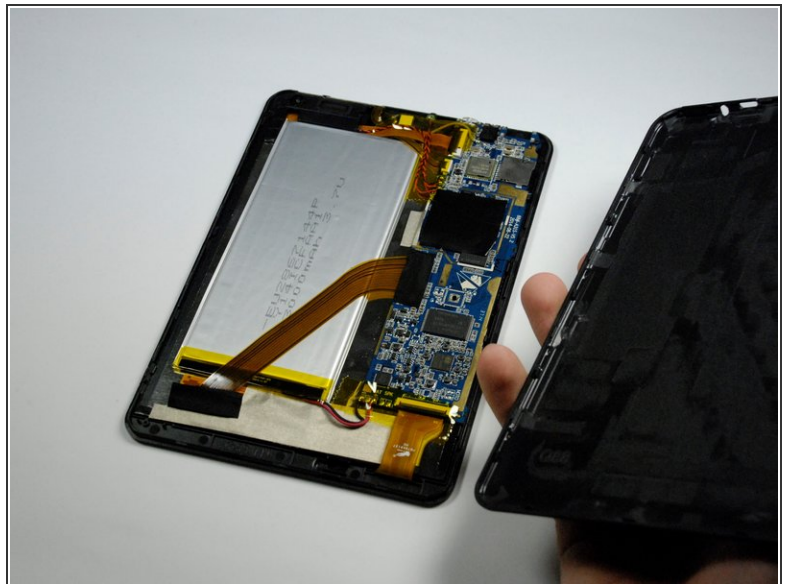

- Remove the back panel from the rest of the tablet and set it aside.

Step 5

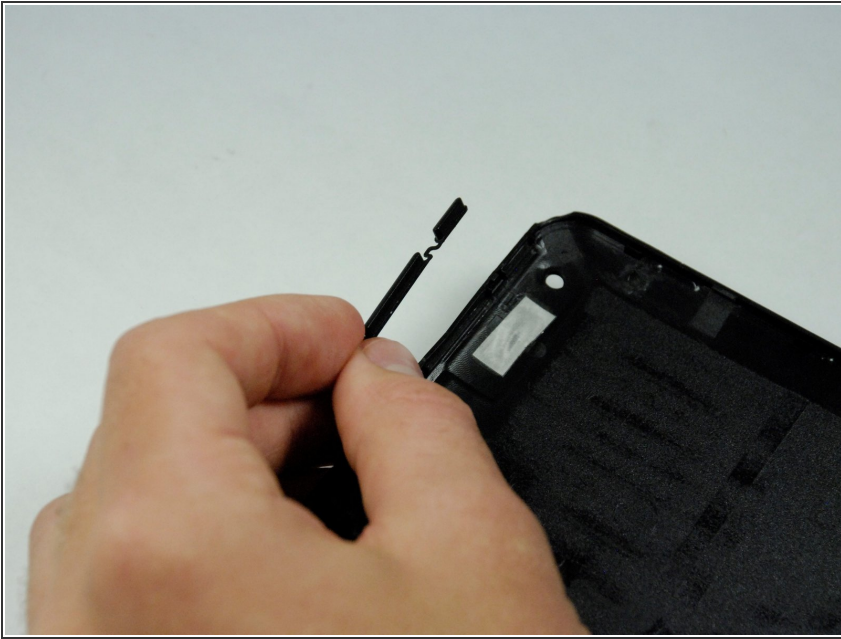

- The plastic volume button cover may fall out when you remove the back panel. Set it aside.

To reassemble your device, follow these instructions in reverse order.