



Roku 2 Roku 2 Motherboard Replacement

This guide will demonstrate device disassembly, with the intent to remove and replace the Motherboard of the device.

Written By: Eric Rawls



 TOOLS:

- [iOpener](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Roku 2 Motherboard




- Heat up the iOpener for 30 seconds in the microwave and place across rubber pads on the back of the device.
- ⓘ It may take multiple heats, left for a minute at a time, to properly loosen the glue.

Step 2



- Gently use the plastic opening tool to pry the rubber pads off.

Step 3

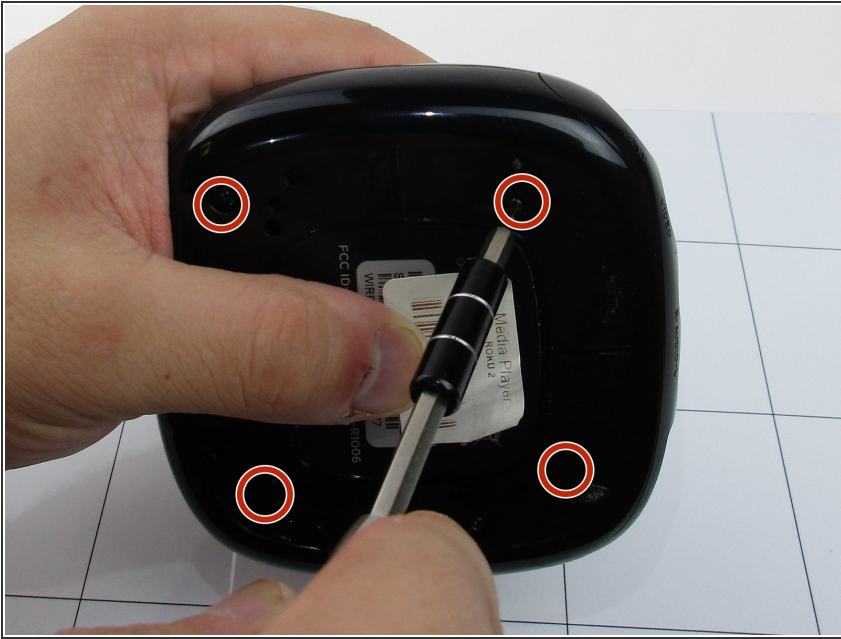

- Remove the four Phillips #000 screws from the bottom of the case.

Step 4




- Gently remove the under side of the device.

Step 5




- Remove the middle component that is held in place by the top and bottom of the device.

Step 6

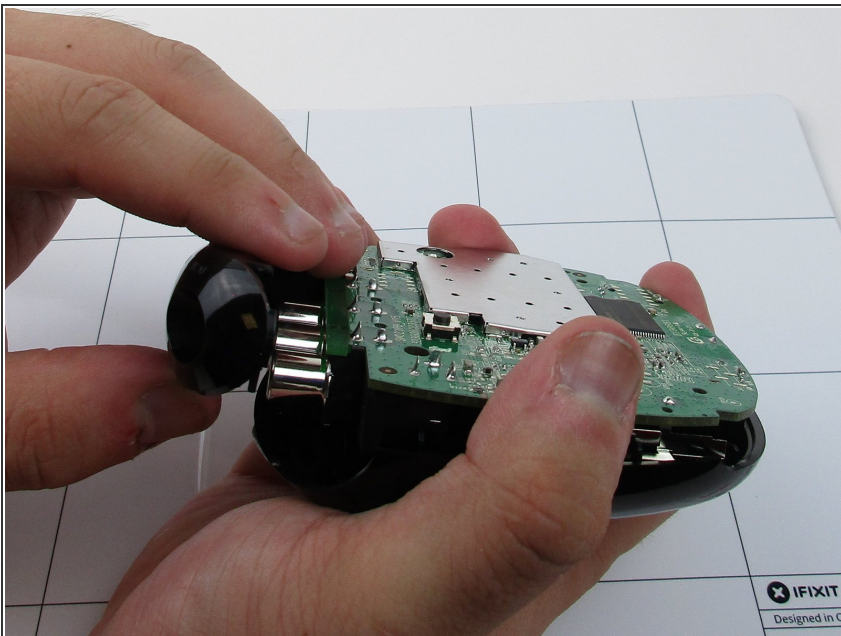

- Remove the cover over the A/V ports on the front of the device.

Step 7

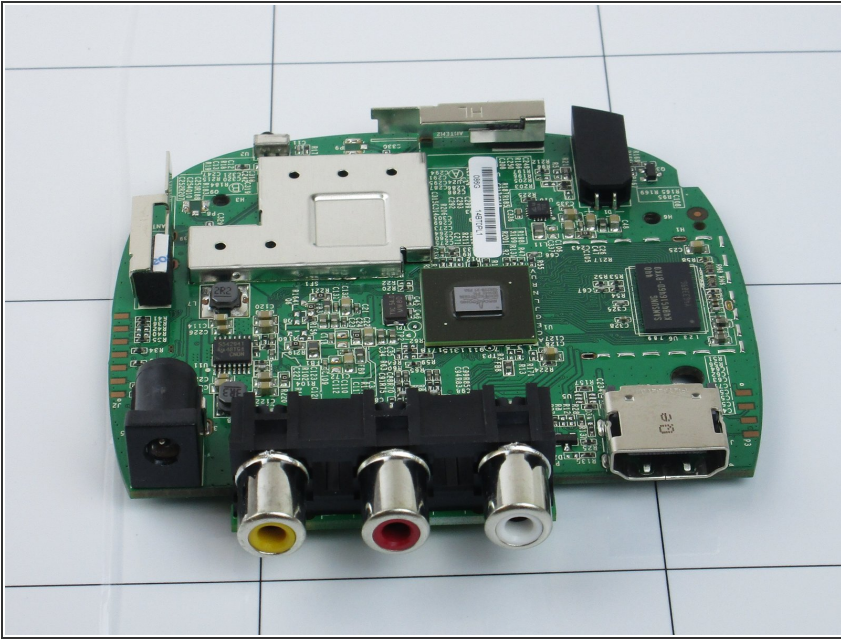

- Remove the board from the plastic enclosure.

To reassemble your device, follow these instructions in reverse order.