



MacBook Pro 13" Unibody Mid 2009 Trackpad Replacement

i will show you how to change the trackpad.

Written By: SIMRAN



INTRODUCTION

This guide has been updated by iFixit staff! Read the new, official guide [here](#).



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Trackpad



- Remove the following 10 screws securing the lower case to the MacBook Pro 13" Unibody:
- Red Seven 3 mm Phillips screws.
- Orange Three 13.5 mm Phillips screws.

Step 2




- Slightly lift the lower case and push it toward the rear of the computer to free the mounting tabs.

Step 3



- Remove the following tri-wing screws securing the battery to the upper case:
- Red One 5.5 mm tri-wing screw
- Orange One 13.5 mm tri-wing screw.

Step 4

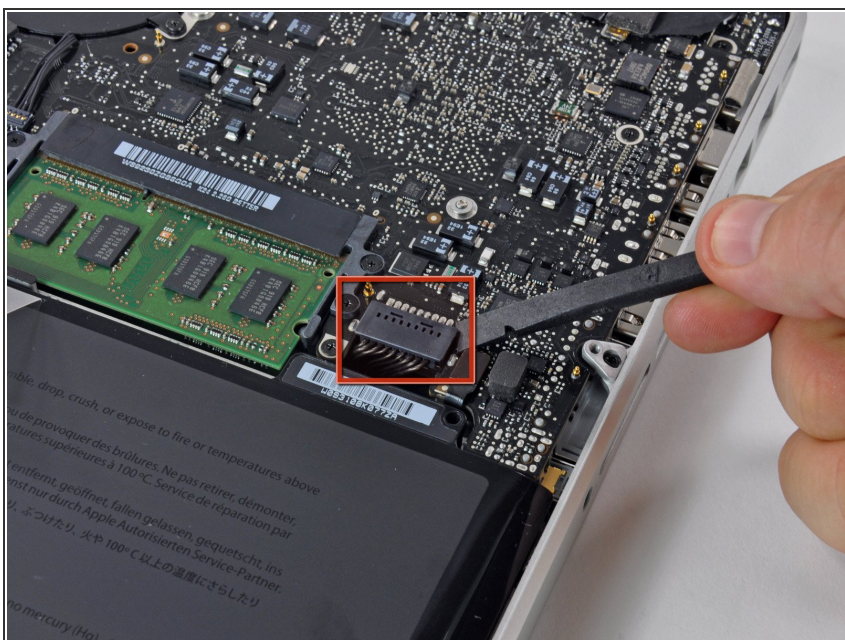


- Use the flat end of a spudger to lift the battery connector up out of its socket on the logic board.

Step 5




- Lift the battery out of the upper case

Step 6

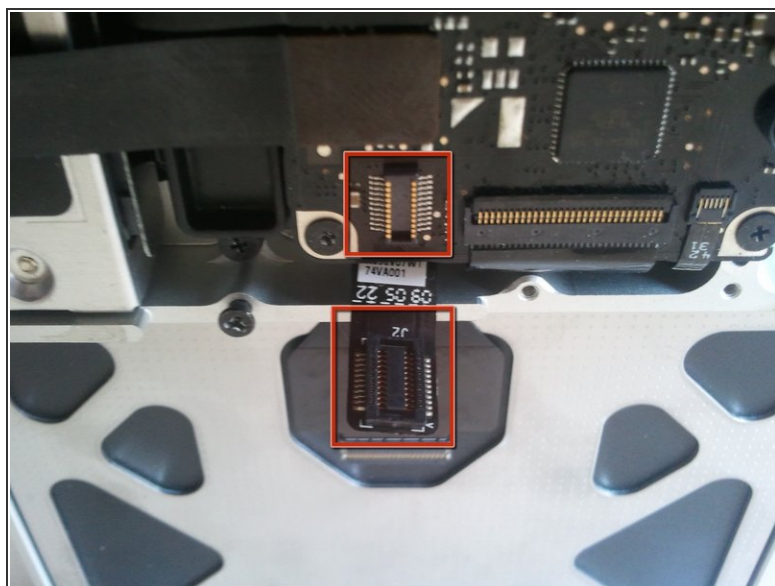

- Remove the ribbon cable by releasing it from the ZIF connector on the underside of the trackpad and also from the socket that attaches it to the logic board.

Step 7

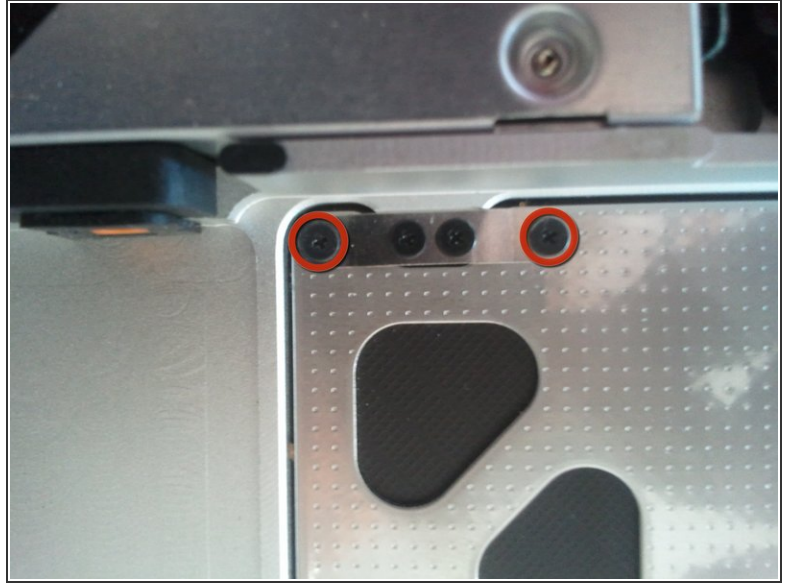

- Remove the four 1.2mm #00 Phillips head screws from rear of the trackpad.

To reassemble your device, follow these instructions in reverse order.