



Fairphone 2 Rear Camera Module Replacement

This guide will show you how to replace the camera module of the Fairphone 2.

Written By: Tobias Isakeit



INTRODUCTION

This guide will show you how to replace the camera module of the Fairphone 2.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Fairphone 2 Rear Camera Module](#) (1)

Step 1 — Slim Case




- Pick a corner of your slim case and get between the two parts with your thumb's fingernails.
- Pull up the back part of the slim case to separate the small snap fit connections.
- Remove the back part of the slim case.

Step 2





- Get in between the front part of the slim case and the phone's body with your thumb nail.
- Separate the snap fit connectors on the front part by pulling it to the side and pushing against the display.

Step 3

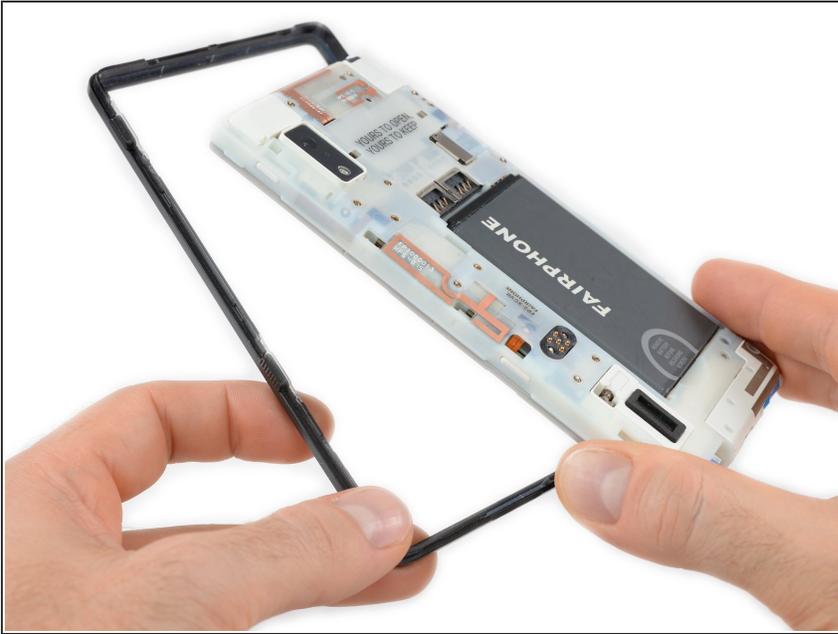

- Remove the front part of the slim case.

Step 4 — Battery

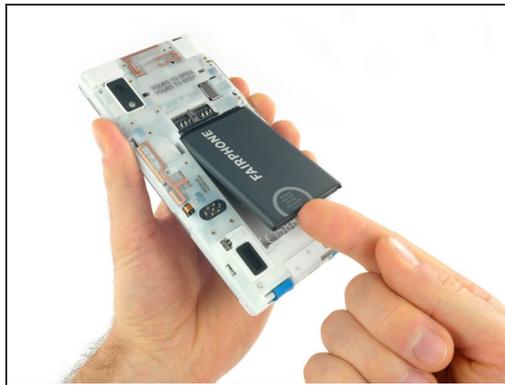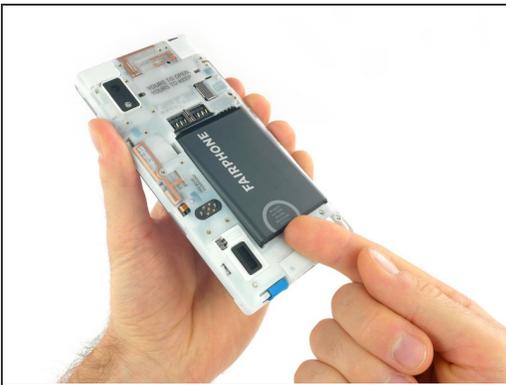

- Push the battery toward the top of the phone.
- Pull the battery out away from the phone.

Step 5 — Display Assembly



- After taking out the battery you can unlock the display assembly.
- Flip the two blue switches to the inner position.
- Slide the display assembly towards the bottom of the phone.

Step 6




i Another possible way of sliding the display assembly open.

Step 7




- Take off the display assembly.

Step 8 — Rear Camera Module

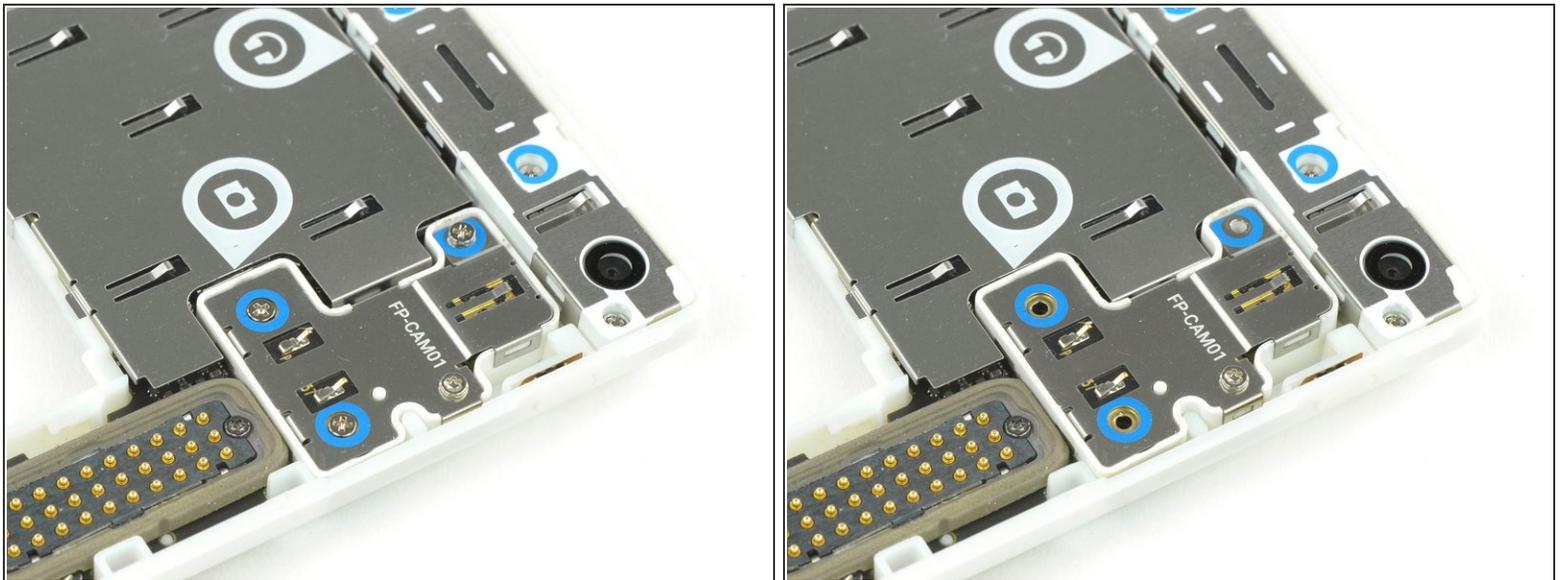

- Remove the three Phillips #0 screws of the module which are nicely marked by the blue circles.
- ⓘ Now the module should stand off a little bit due to the pogo pins underneath.

Step 9

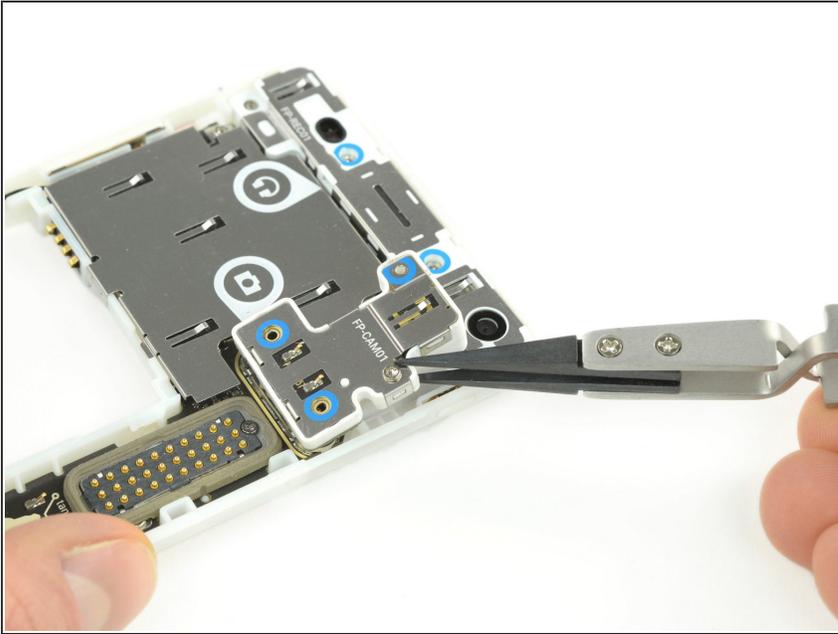

- Take out the whole module.

To reassemble your device, follow these instructions in reverse order.

Information on what to do with the old module can be found on the [FairPhone support page](#) and in the [FairPhone forum](#).