




HTC Ozone Keyboard Replacement

Written By: Marco Jokada

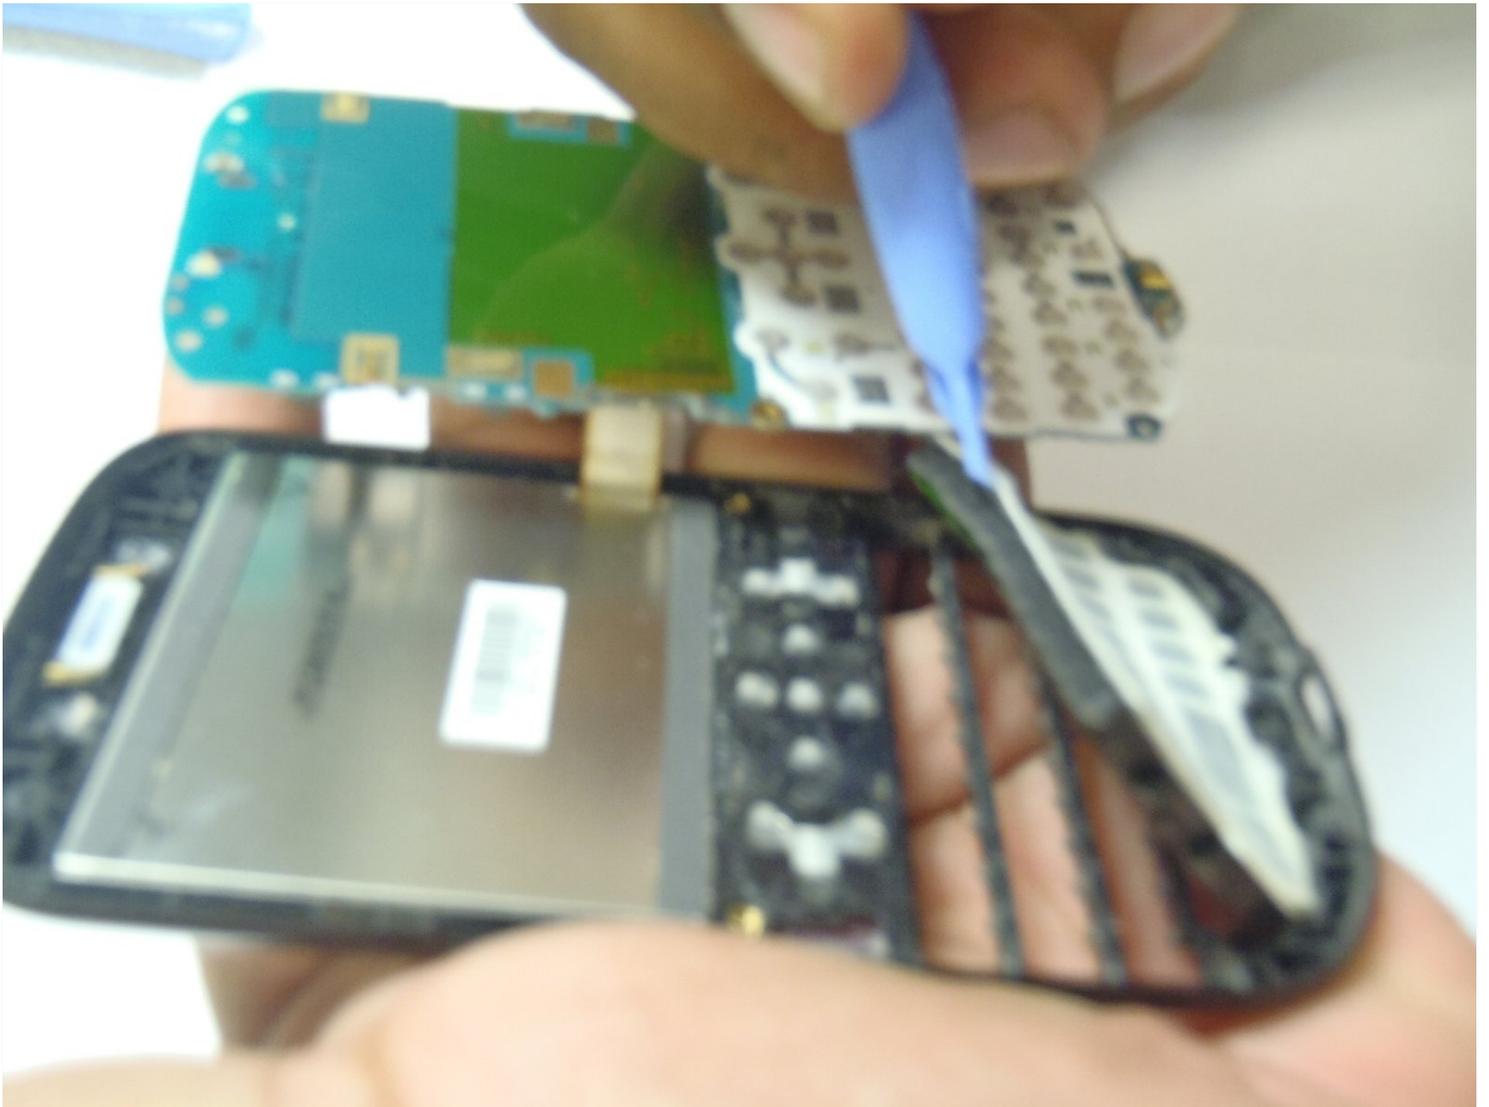

 **TOOLS:**

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)

Step 1 — Rear Battery Cover



- Flip the phone over to have the rear cover facing up.
- The camera lens should be towards the top of the phone.

Step 2



- Slide the cover up, towards the top of phone, to unlock the battery cover.
- Lift the cover off phone and remove it.

Step 3 — Battery




- Use your finger to push the top of the battery downwards and lift the battery out of the phone.

Step 4 — Frame





- Remove the six Torx #5 screws that are securing the rear frame.

Step 5

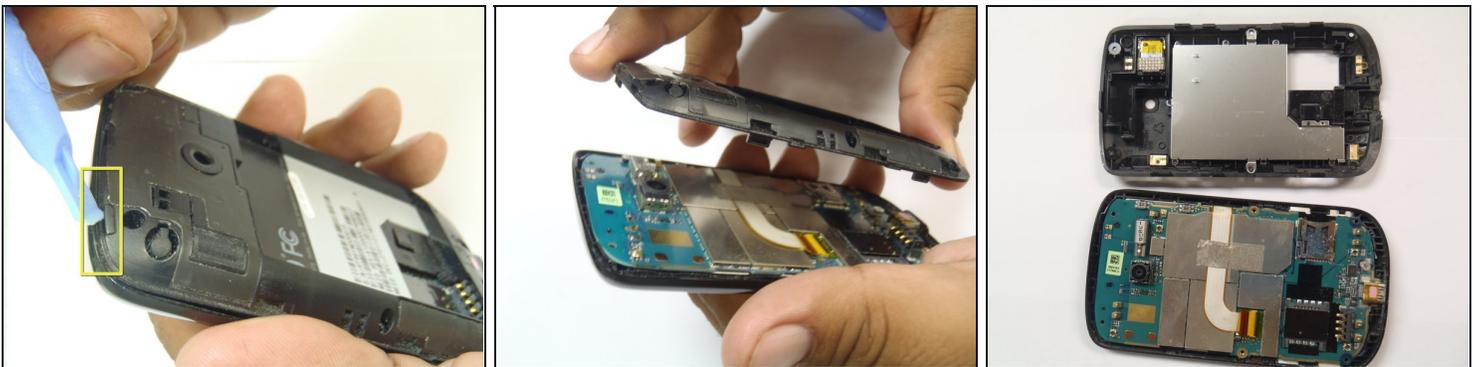



- Pry the frame open, releasing the eight plastic tabs around the edge of the frame, using the plastic opening tool.
 - ① A [plastic card](#) can be used instead of the plastic opening tool.

Step 6 — Motherboard

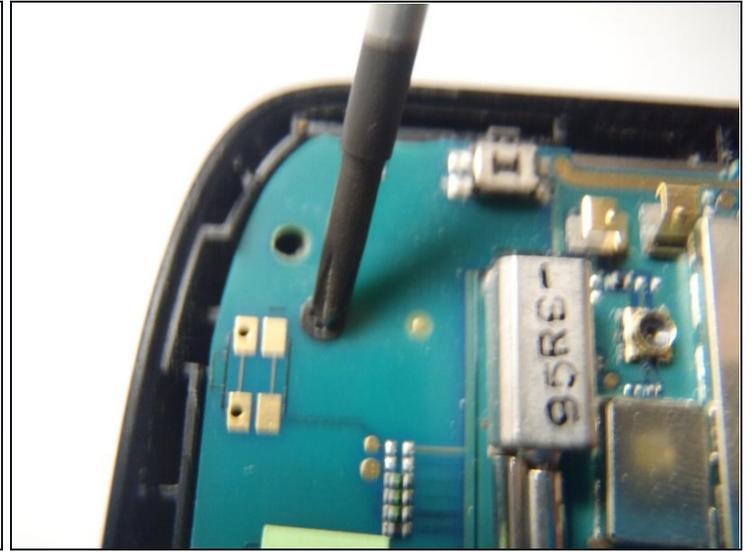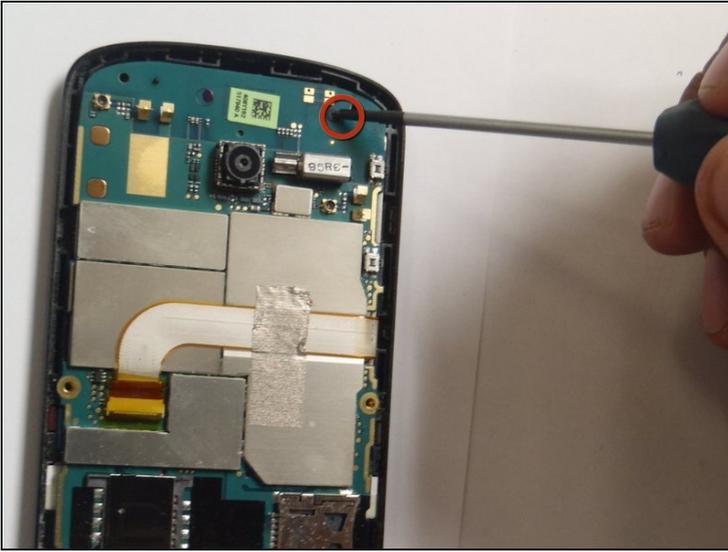

- Remove the single Phillips #0 screw that is securing the motherboard to the front case of the phone.

Step 7

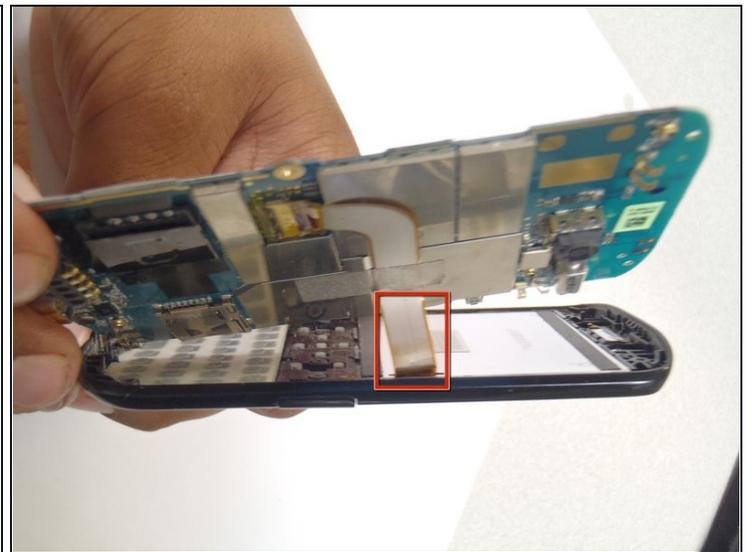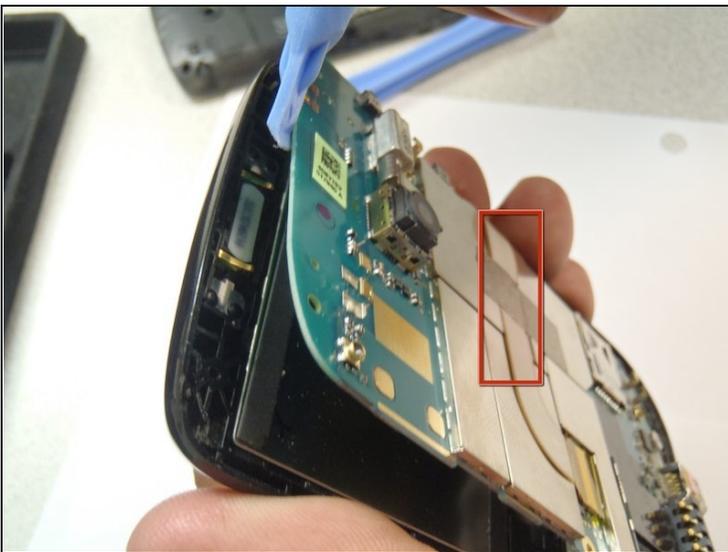

- Pry the motherboard away from the front of the plastic case using a plastic opening tool.


⚠ Be careful not to break the ribbon cable when prying away the motherboard.

Step 8




- Remove the plastic cover from the LCD display and the motherboard.
⚠ The Motherboard and the LCD are still attached together.

Step 9 — LCD Display

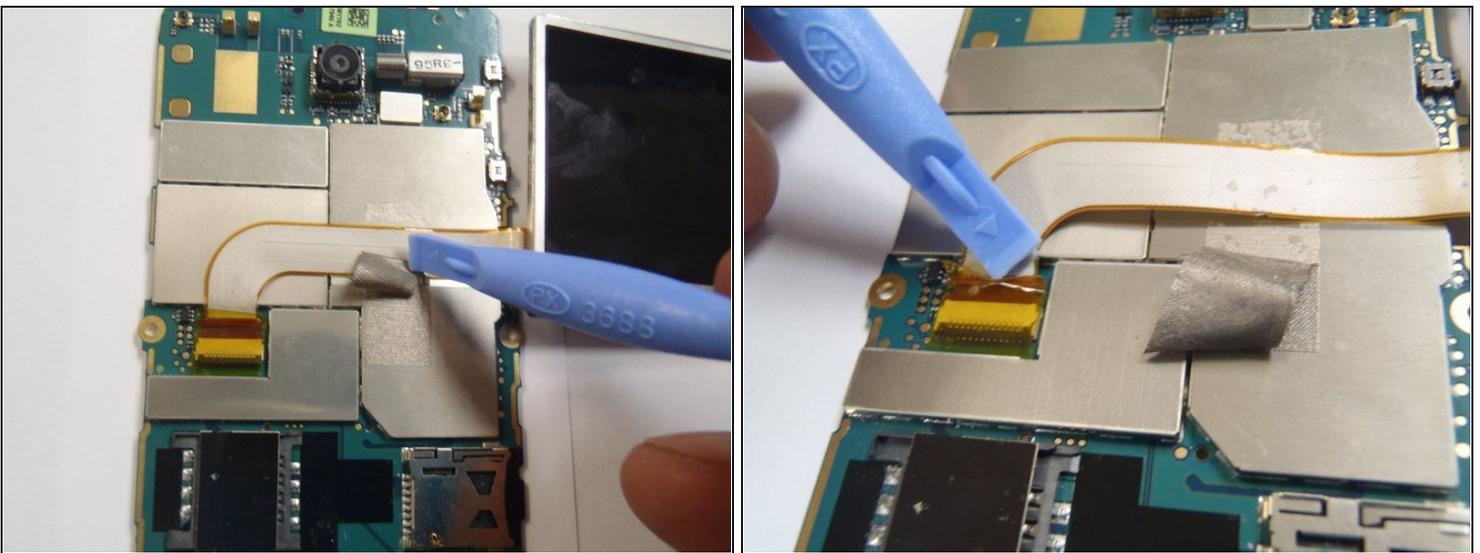


- Remove the gray tape securing the ribbon cable.

Step 10

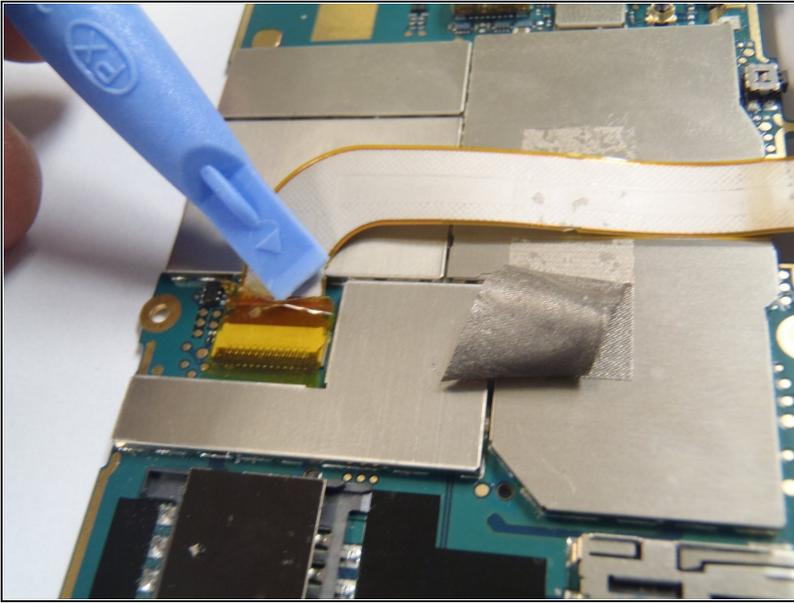


- Remove the yellow tape securing the connector lock.

Step 11

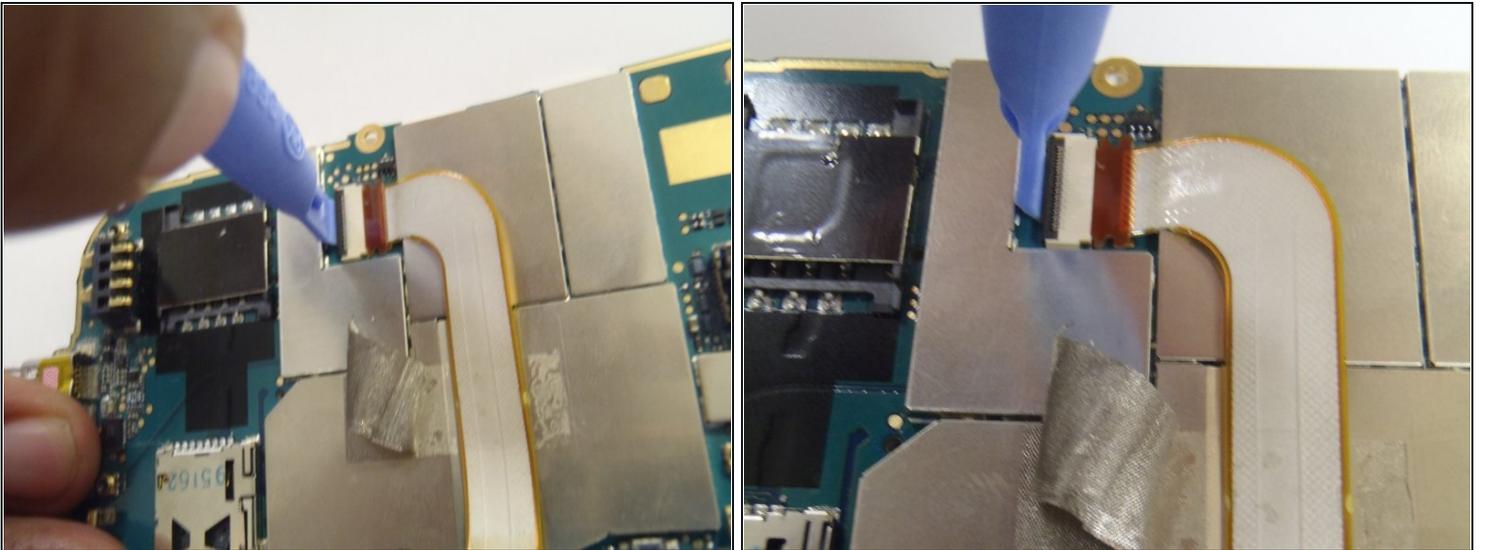


- Carefully lift the black lock to release the ribbon cable, using the plastic opening tool.

Step 12

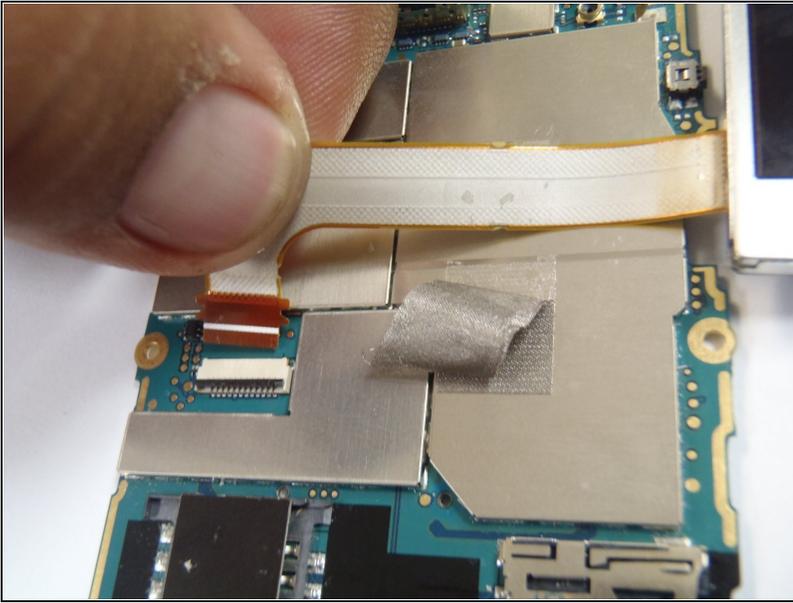


- Pull the ribbon cable upwards, disconnecting it from the Motherboard.

Step 13

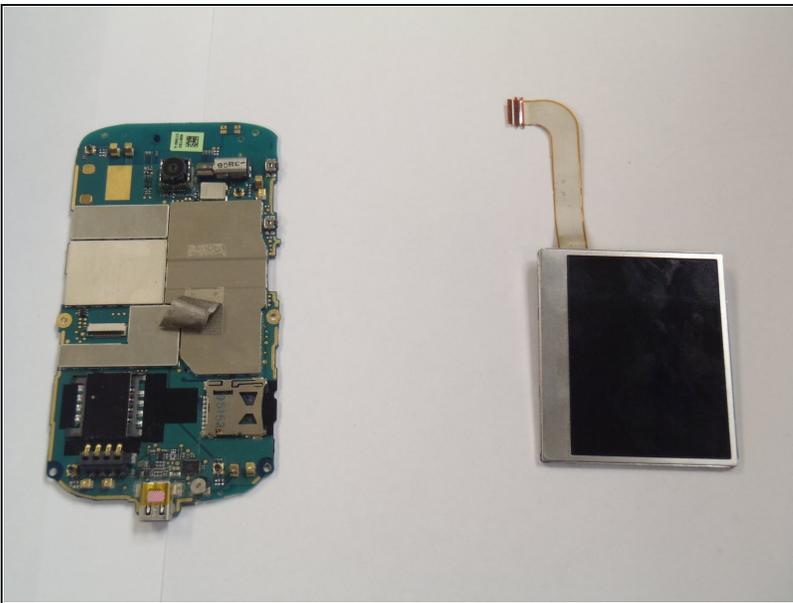



- Lift the Motherboard away from the LCD display.

Step 14 — Keyboard

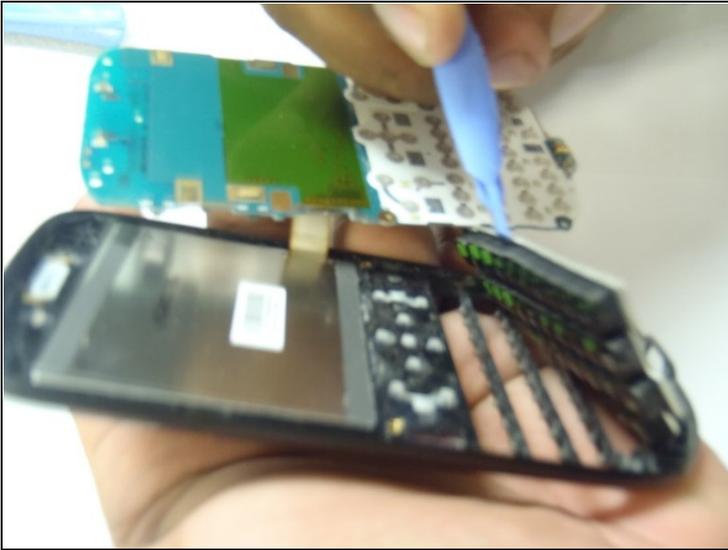


- Lift off main keyboard from front plastic case using plastic opening tool.

Step 15

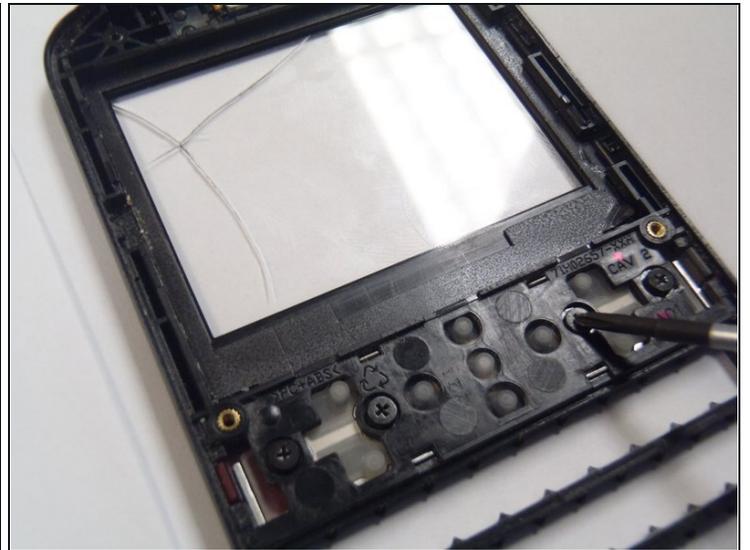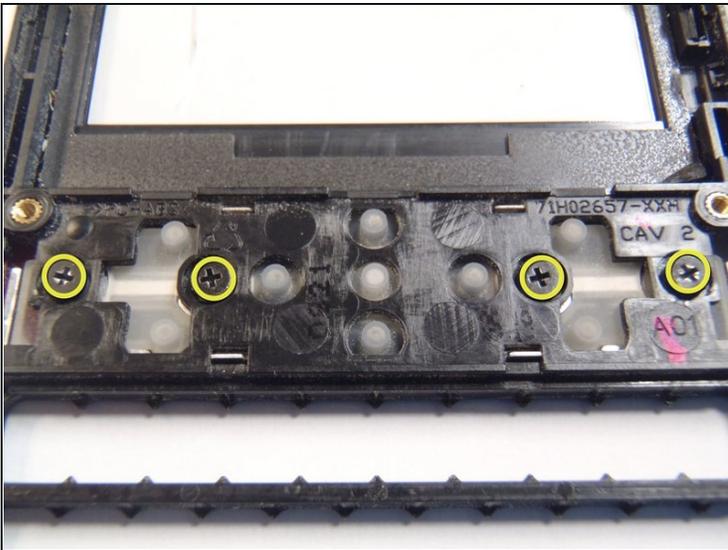

- Remove four Phillips #00 screws securing function keys.

Step 16

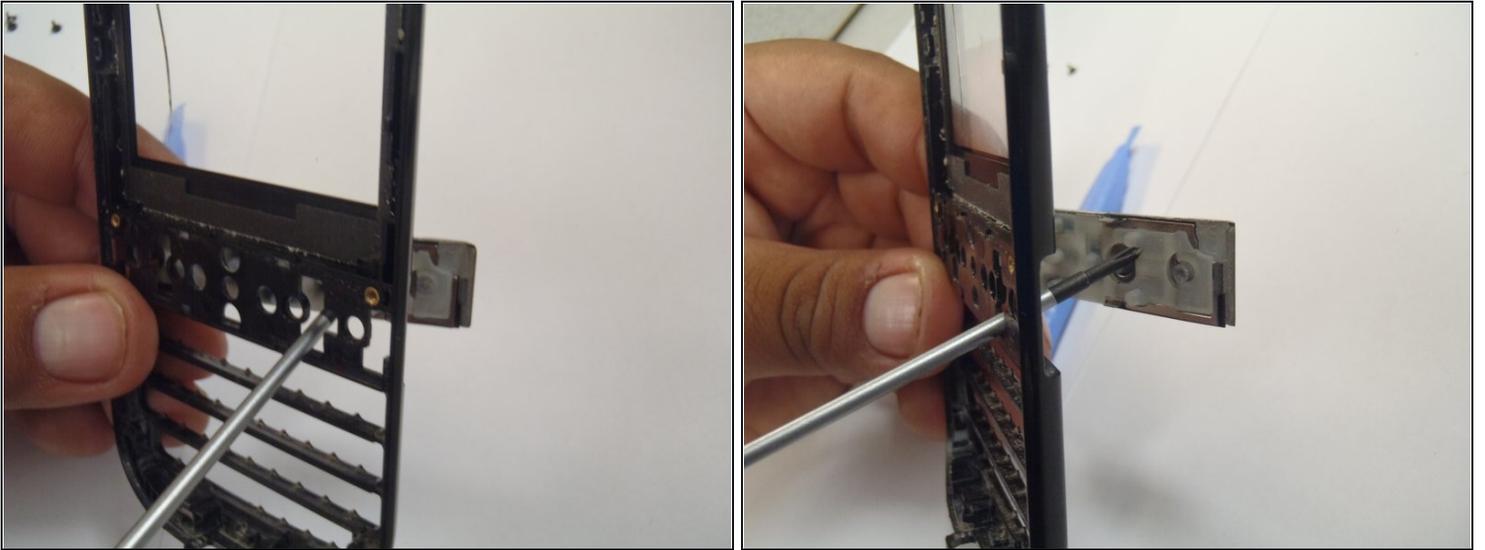

- Pop keys out by pushing keys from back of the phone.

To reassemble your device, follow these instructions in reverse order.