



Lenovo Thinkpad X220 Individual Keys Replacement

If you need a specific key on your keyboard you need replaced, this guide will help you replace it.

Written By: Mariska Gramlow







TOOLS:


- [Metal Spudger](#) (1)
-

Step 1 — Individual Keys

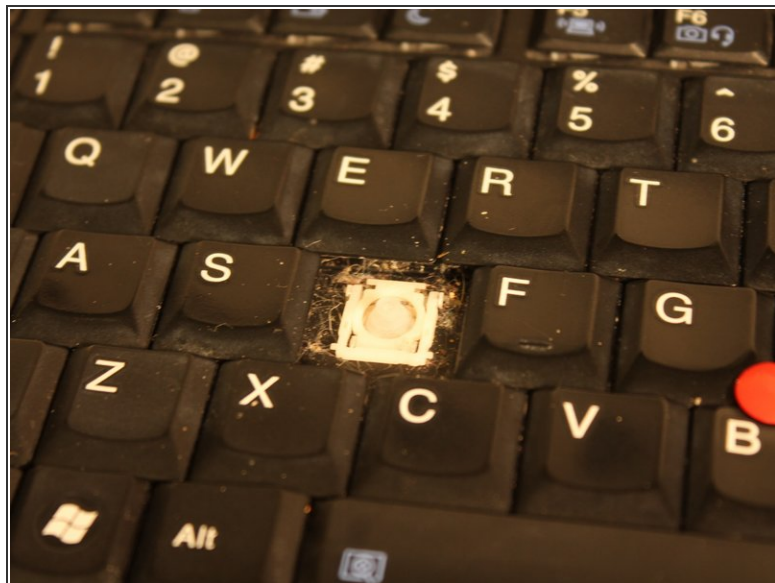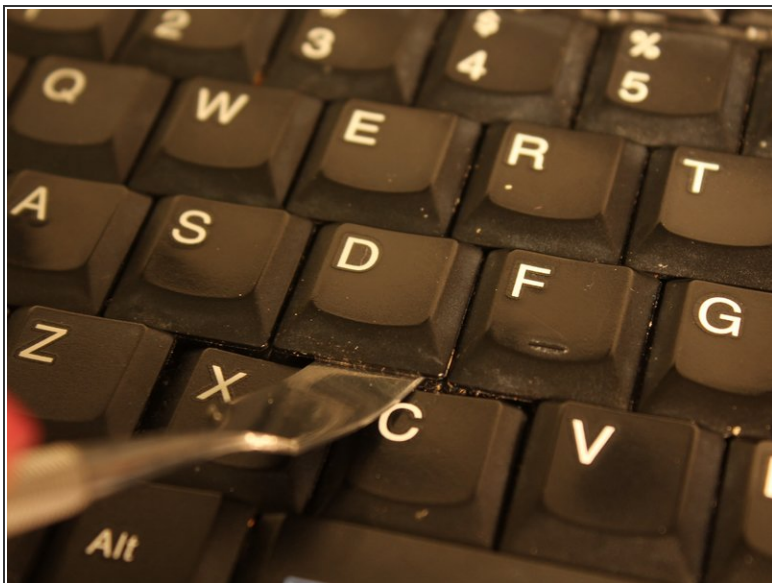

- Open laptop to expose the keyboard and screen.
- Find specific key that needs replacing.
- Grab the Metal Spudger.
- Using slight force, lift one side of the key to pop it off from its base to replace.
- The key should have been easily removable.

Step 2

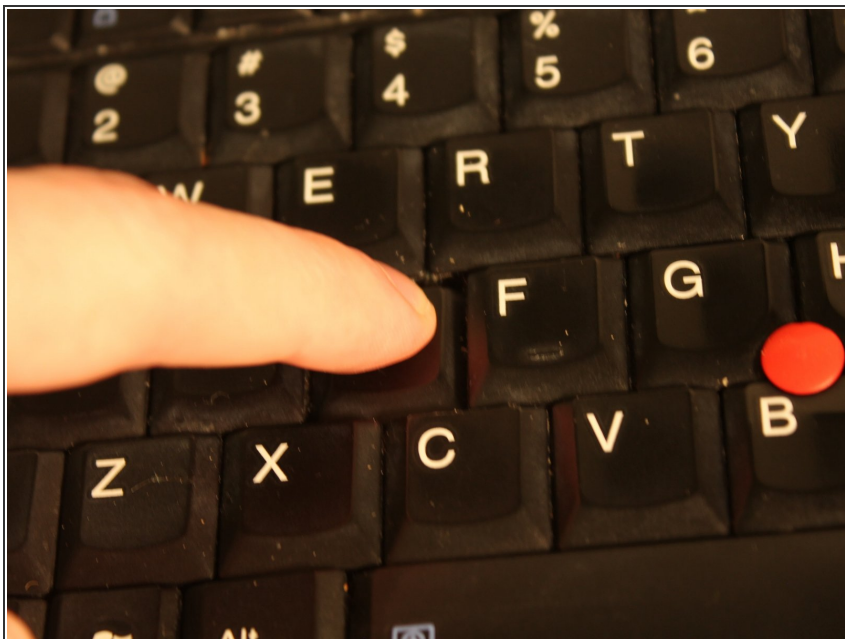

- With the new key replacement, align key with the keyboard and firmly push into place.
- The key should fit perfectly where the old one was removed.

Step 3



- Keyboard key is in place and ready to use.

To reassemble your device, follow these instructions in reverse order.