



Vornado Flippi V6 Teardown

Having trouble dismantling the Vornado Flippi V6 fan? This guide shows show you how to disassemble the fan step by step.

Written By: Johnny Tran



INTRODUCTION

Having trouble dismantling the Vornado Flippi V6 fan?

This guide shows show you how to disassemble the fan step by step.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Removing the base of fan




- Under the base of the fan, remove the four rubber slip guards by peeling them off with your finger tips.

Step 2




- Using the Phillips #1 screwdriver, remove the four 2mm screws underneath the slip guards.

Step 3

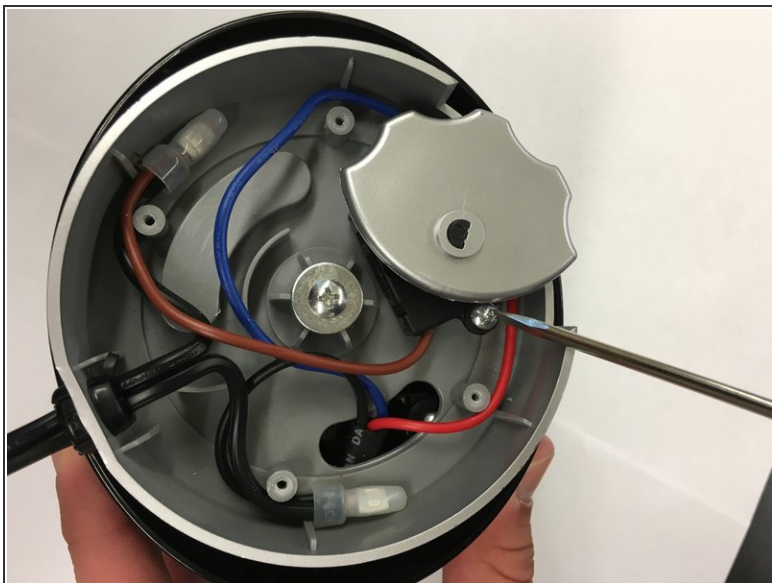


- After removing the base of the fan, remove the two screws located under the adjustable speed switch.

Step 4

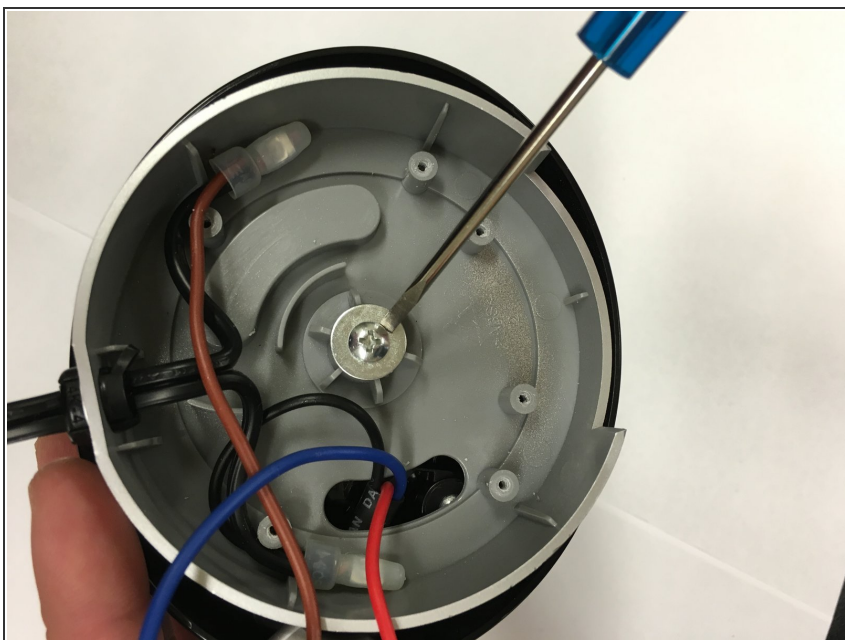


- Remove the 4mm screw next to the adjustable speed switch.

Step 5

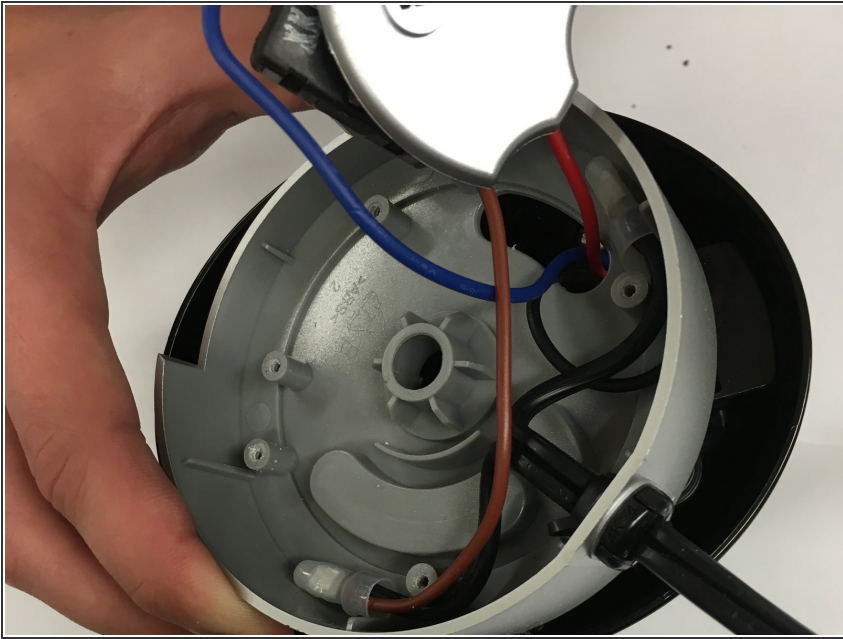

- Using one hand, pull out the other half of the base.

Step 6

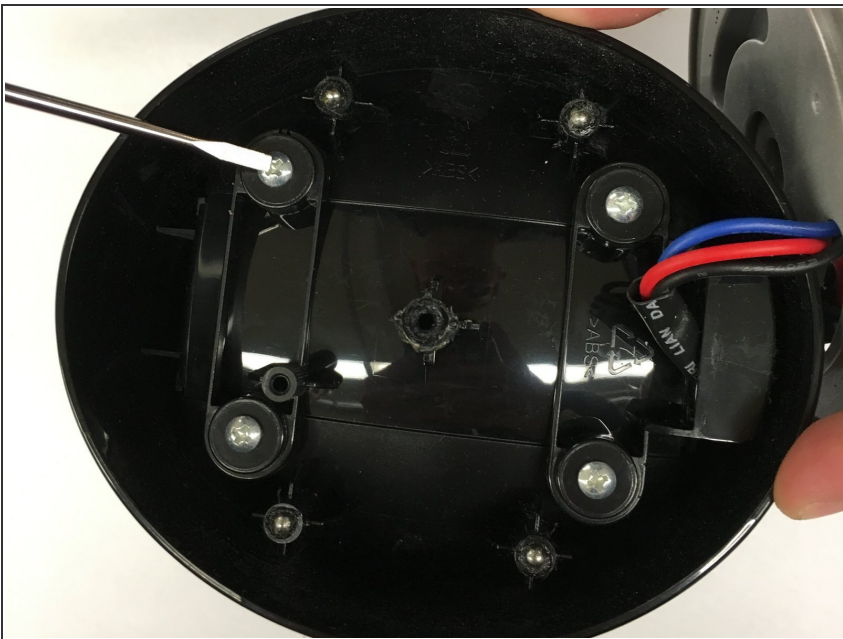

- Remove the four 2mm screws.

Step 7



- Gently pull out the bottom cover.

Step 8



- Using two hands, pull the sides out carefully. You will hear a "pop" noise, indicating the sides have come out.

Step 9





- Remove the fan cover using two hands.

Step 10



- Remove the two 2mm screws holding the blades.

Step 11

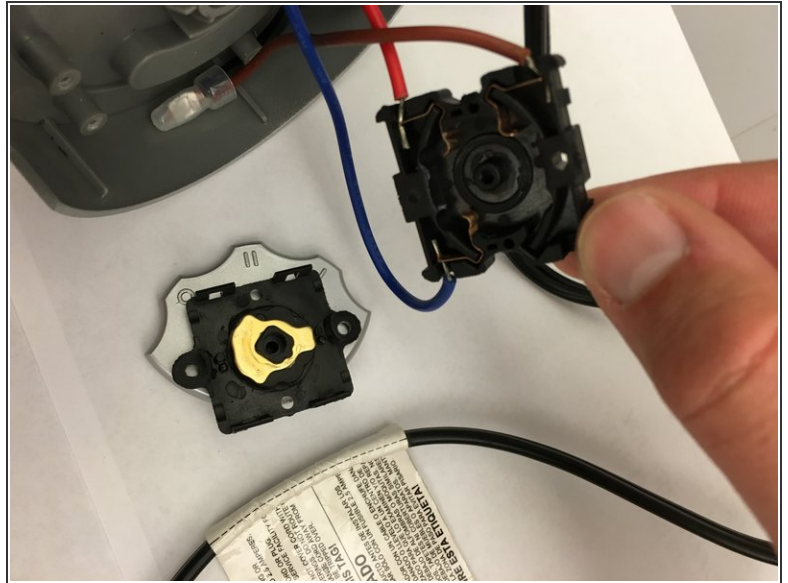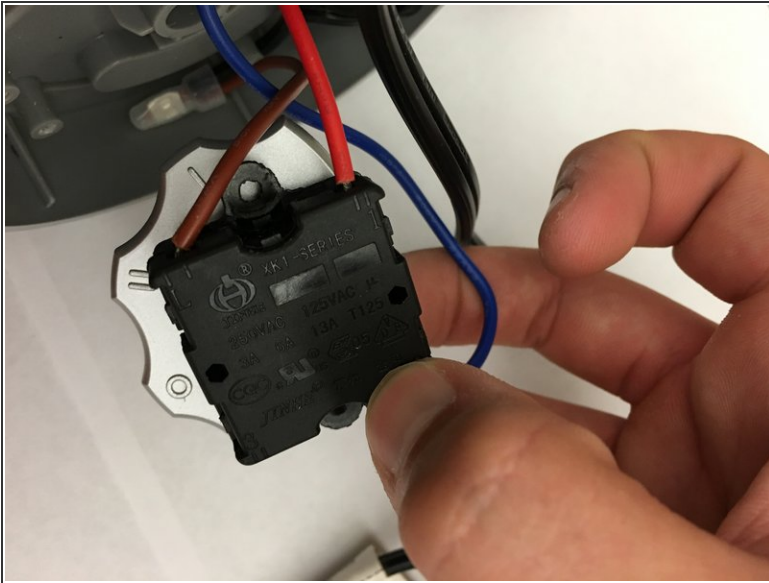

- To remove the adjustable speed switch cover, slightly pry off 6 clips located around the switch.