

Car and Drivers Auto HandHeld Vacuum Bagless Teardown

Car & Driver hand held car vacuum car charger a car adapter. With 16'Power cord with 12V vehicle power adaptor with 9'cord with bagless design.

Written By: kempc8



This document was generated on 2020-11-23 01:12:08 PM (MST).

INTRODUCTION

Teardown of Car and Driver Auto HandHeld Vacuum Bagless. Portable Vacuum .




TOOLS:

• Phillips #00 Screwdriver (1)

Step 1 — Car and Drivers Auto HandHeld Vacuum Bagless Teardown





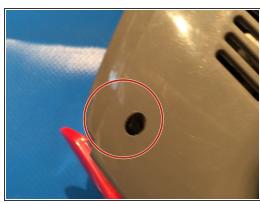

Guide ID: 60443 - Draft: 2016-06-22

- Locate the four screws locate outer gray shelll
- "I REMOVED THE SCREWS WITH PH #OO SCREWDRIVER FROM (IFIXIT)
- New PLace four screws to the side

Step 2



 Here are the four screws from vacuum

Step 3








- Remove the top grey shell of the vacuum
- Place a red tab to the side
- Let start looking at the 9volt motor with wire and on/off switch.
- I remove the outer shell . I remove the motor and wires and on/off switch.

Step 4

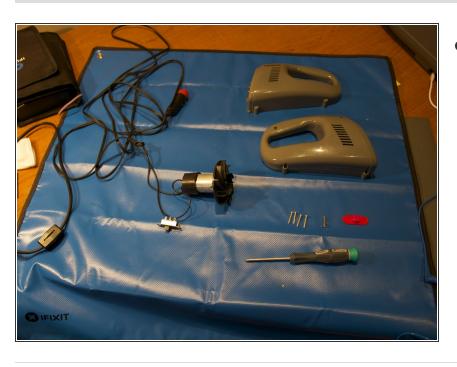

This it complete teardown on Car and Driver HandHeld Vacuum bagless!