


Samsung Galaxy S5 Sport Screen Replacement

This guide will show someone how to remove the...

Written By: Caroline Janiszewski

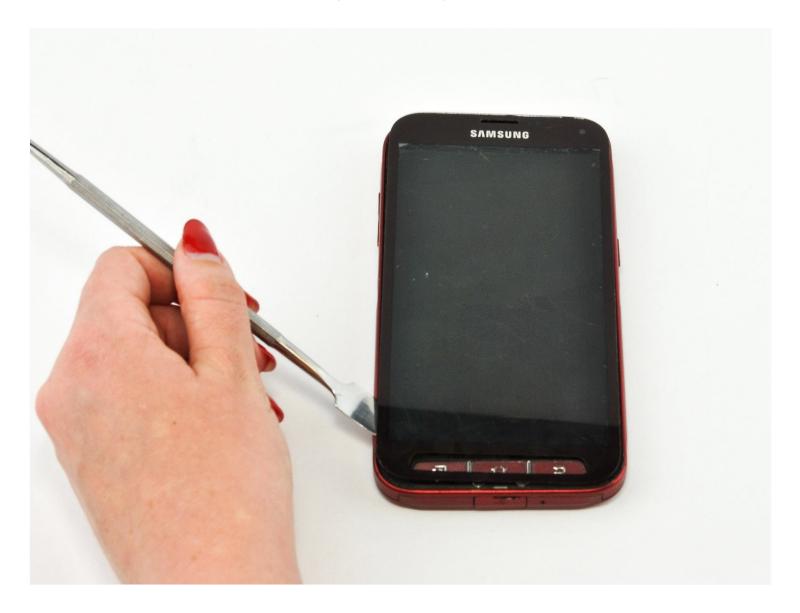

INTRODUCTION

This guide will show someone how to remove the screen from the phone. It does require several specialized tools, but the actual removal of the screen is relatively simple. However, because this is a waterproof device, removing the screen on this device WILL break the screen and make it unusable. Before beginning the removal process, be sure that you have a replacement screen.



Heat Gun (1)
Spudger (1)
iFixit Opening Tool (1)

PARTS:

Galaxy S5 Sport AMOLED and Digitizer (1)

Step 1 — Battery







• Remove the back casing of the phone using the notch located at the top.

Step 2







Lift up the battery using a plastic spudger or fingernail.

🛆 Damaging the battery may result in physical injury and/or damage to the phone.

Step 3 — Screen








 Using a plastic opening tool or spudger, pry up the screen after the adhesive has melted.

⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The metal spudger is great when you need serious prying power, but the regular black nylon spudger or a plastic opening tool should be used whenever possible.

Because it is a water-resistant phone, the screen cannot be taken apart without breaking.

Step 4



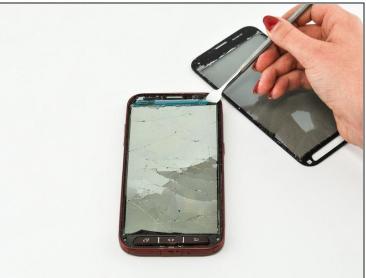

- The plastic cover of the phone may separate from the LCD screen. If so, also remove the LCD screen with the regular nylon spudger.
- (i) In the upper right area of the LCD screen, there is a connecting ribbon. Be careful not to rip its connection to the motherboard.

⚠ Do not hold the phone too close to your face or eyes. Small glass shards may dislodge or the metal spudger may slip.

To reassemble your device, follow these instructions in reverse order.