




Canon AE-1 Light Filter Foam Replacement

The steps to removing old foam and then replacing it with new light filter foam in your Canon AE-1.

Written By: Brad

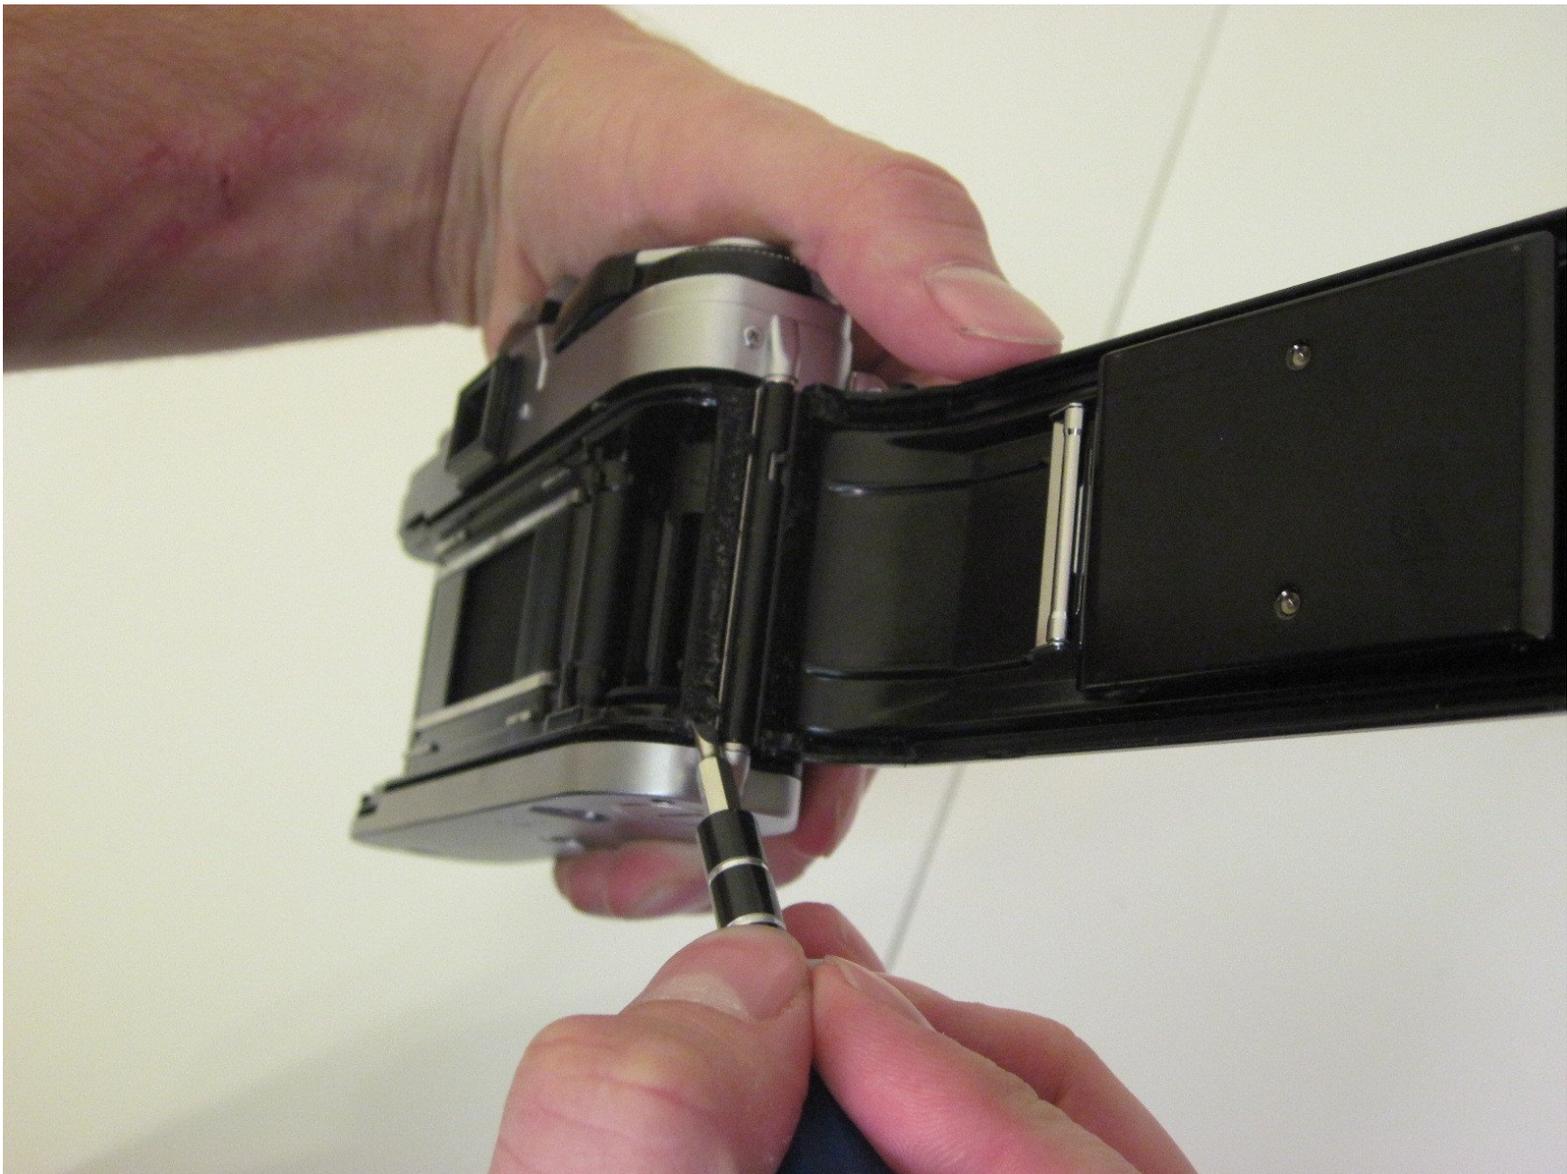

INTRODUCTION

We are removing the old light filter foam and replacing it with new foam in your Canon AE-1. This will help keep light out of the inner case so that it doesn't wreck the film.


TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)
- Isopropyl Alcohol (1)

PARTS:

- Light Filter Foam (1)
-

Step 1 — Light Filter Foam

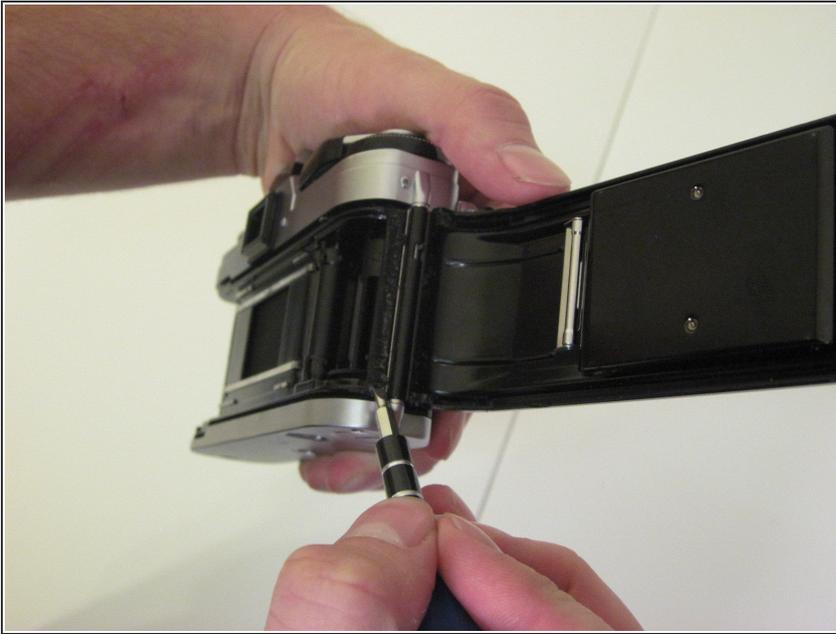

- Open the film compartment by pulling on the release pin.
- Use a 3mm slot screw driver to scrape old light filter foam cleanly off.
- Then use Isopropyl Alcohol to assist in removing the old light filter foam.

Step 2



- ⚠ Placing light filter foam improperly could result in light exposure on film.
- Cut the new light filter foam to size so it can fit in the slot.
- Place the sticky side of the new strip of light filter foam over old foams location.

To reassemble your device, follow these instructions.