




Apple AirPort Extreme Model A1034 Antenna Replacement

Guide to replacing the antenna on an AirPort Extreme A1034

Written By: Michael Garcia

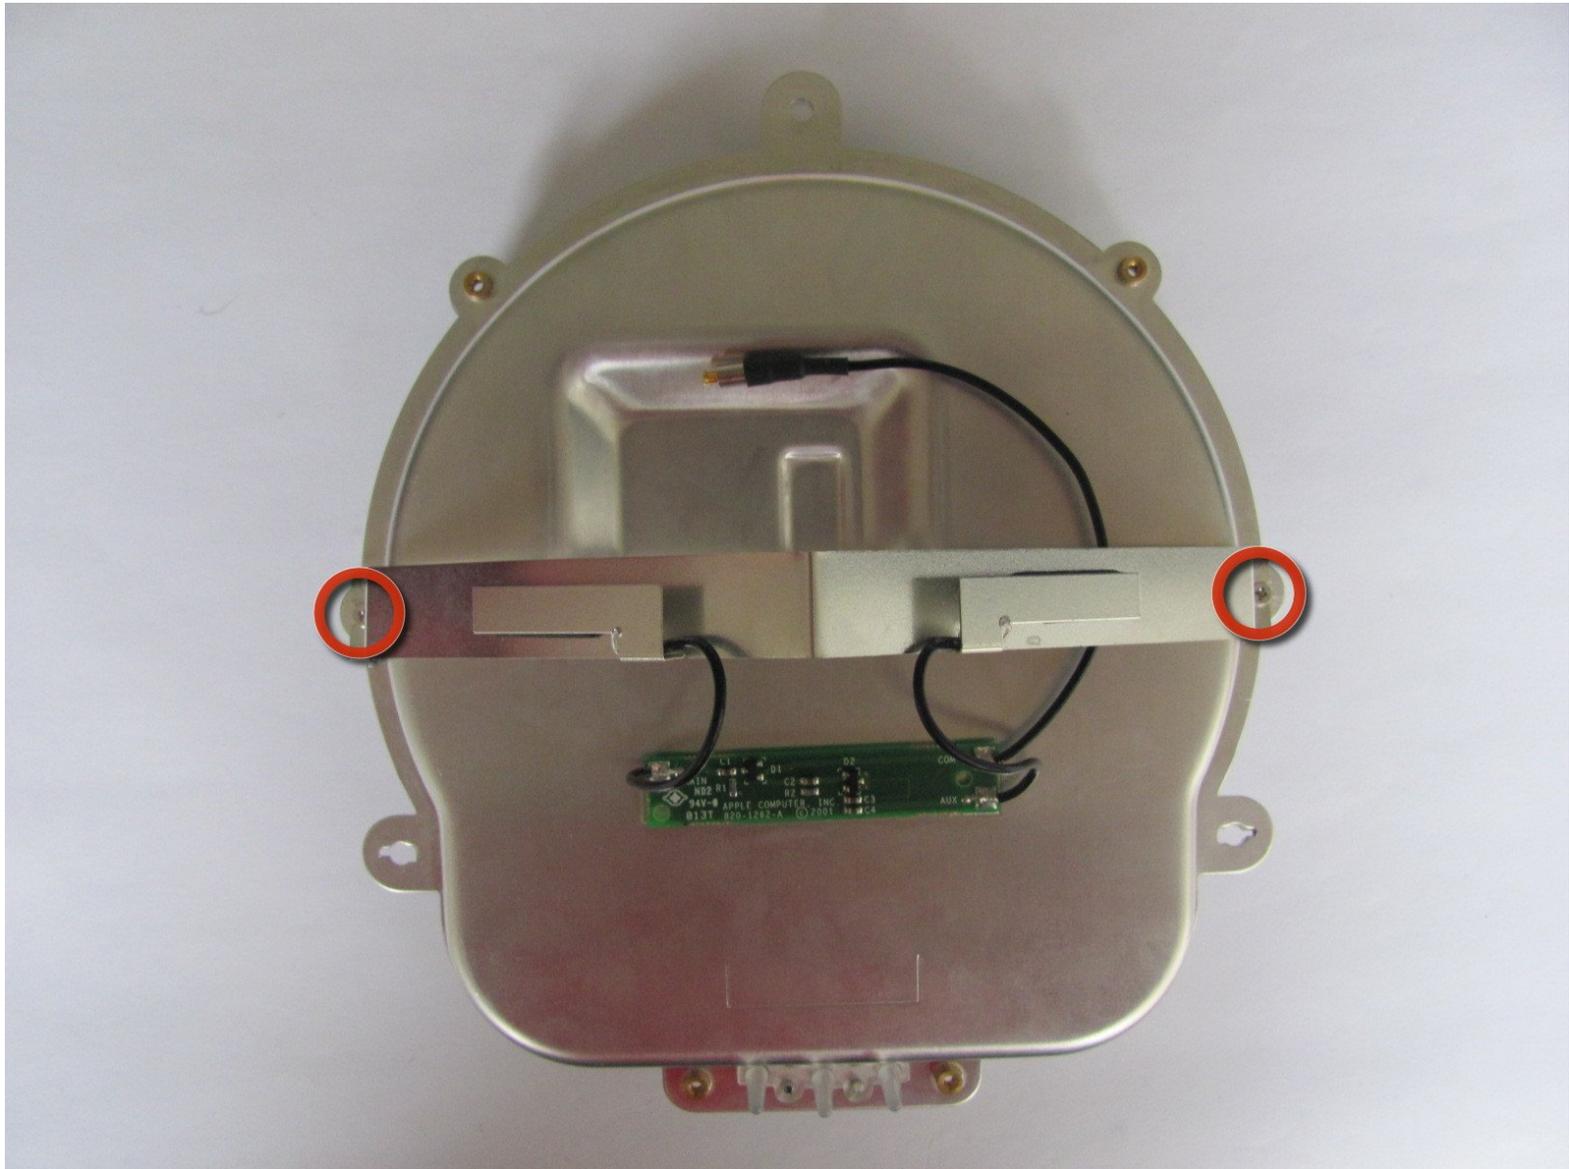

INTRODUCTION

Replace a faulty antenna on the AirPort Extreme Model A1034.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [T7 Torx Screwdriver](#) (1)
-

Step 1 — Outer Case



- Remove the three 14.3mm T7 Torx screws from the bottom of AirPort.

Step 2



- Remove the 5.1mm Phillips screw from the bottom of the AirPort. This screw is located under the identification sticker. You will have to remove the sticker or make a hole to remove it.

Step 3




- Lift the bottom and top casing straight apart and then lift metal casing straight up from the bottom plastic casing.

Step 4




- Unplug the black connector on the top of the metal casing by gently pulling horizontally.

Step 5 — Antenna

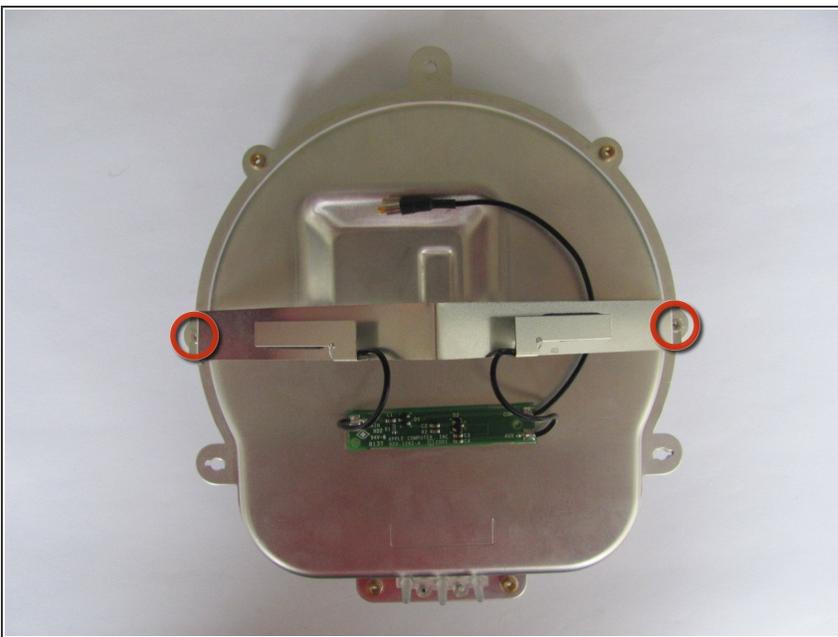

- Remove the two 4mm phillips screws to remove antenna.

Step 6

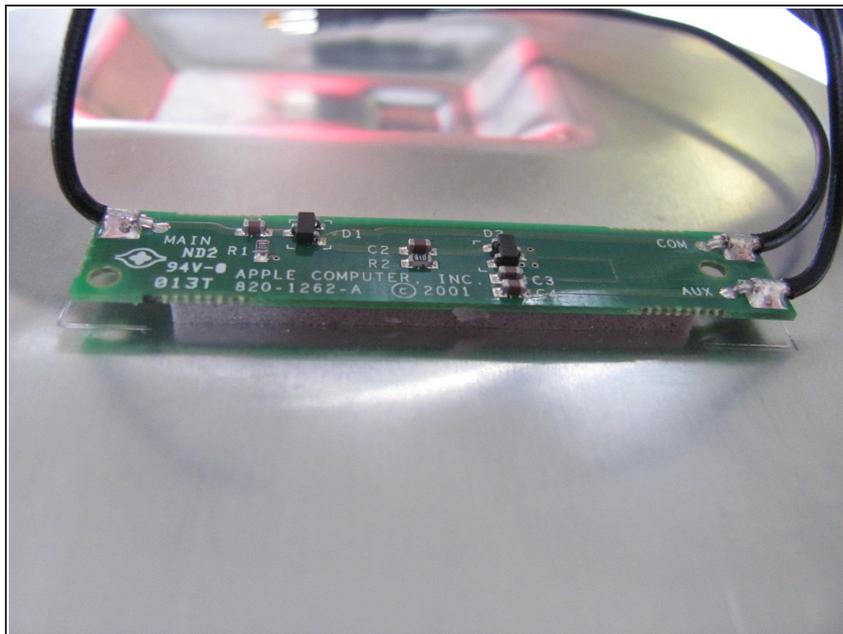

- The circuit board connected to the antenna is attached to the metal case with foam adhesive.
- Gently peel or cut the foam holding the circuit board with a knife and remove it from the AirPort.

To reassemble your device, follow these instructions in reverse order.