



HP Pavilion 11-n010dx Bottom Case Replacement

The guide will help a user to remove the bottom case of your device.

Written By: Joseph Lintz




INTRODUCTION

If the bottom case of your device become cracked or damaged, this guide will show you how to replace it.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Bottom Case

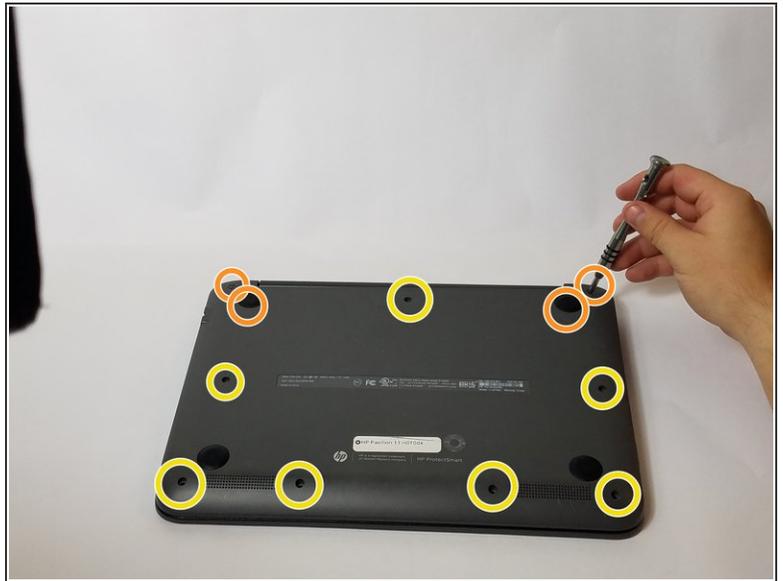

- Use the nylon spudger to remove the rubber pads near the hinge for the screen. Then remove the screws under the pads.
- Use Phillips #0 to remove four 9mm screws.
- Use Phillips #0 to remove seven 6mm screws.


Step 2



- Use the nylon spudger to pry the back casing near the hinges for the screen.
- Continue to pry along the edge of the back case until the back is ready to be removed.

⚠ Careful when beginning to remove the case. There is a cable attached between the bottom case and the motherboard that must be properly disconnected.

Step 3

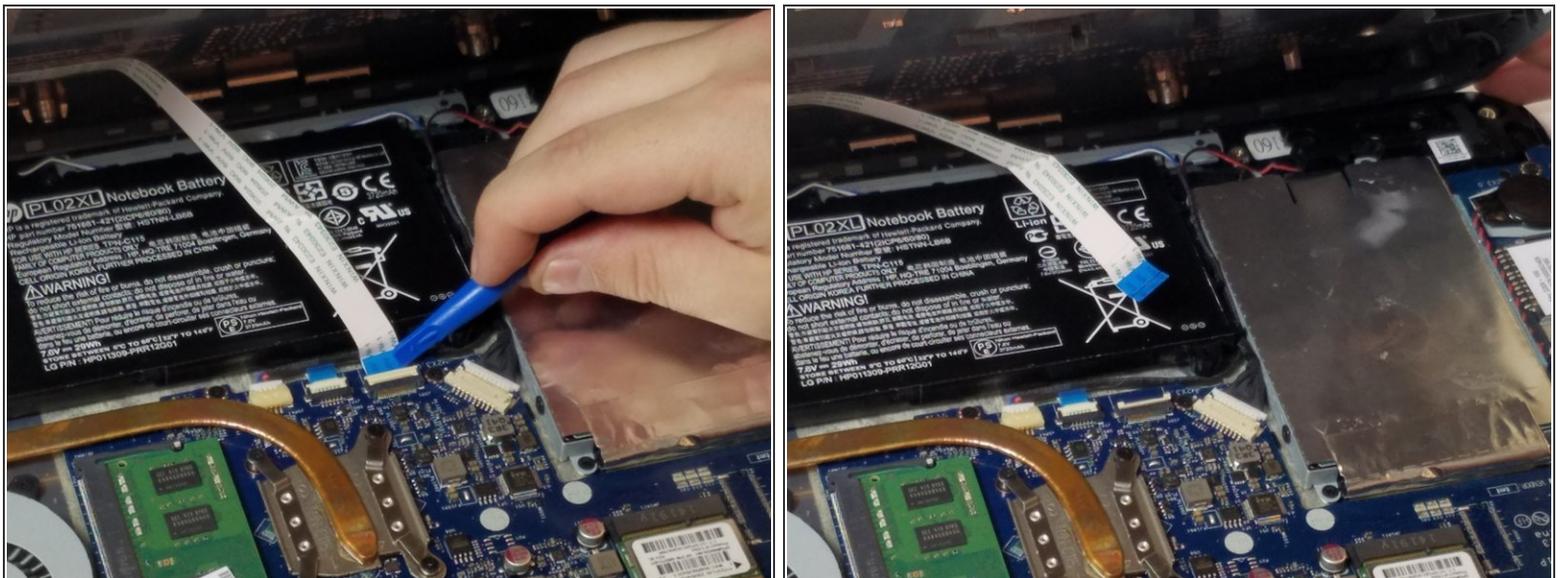

- Use the plastic opening tool to lift up on the white tab that is holding the cable in place on the motherboard.
- Now carefully pull the cable out of place and remove the entire back casing.

To reassemble your device, follow these instructions in reverse order.