



Acer Aspire 7736Z-4809 Back Panel Removal

Removing the back panel of the laptop is required in most component replacement.

Written By: Pnithan Jantarakolica



INTRODUCTION

Removing the back panel of the laptop expose the laptop to sensitive electronic components. Please be careful when you follow these procedures.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Acer Aspire 7736Z-4809 Repair Preparation



- Unplug and power off the laptop.
- ⓘ If the battery is still connected to the laptop, remove the battery.

Step 2




- Flip over the laptop so that the back panel of the laptop is facing up.

Step 3 — Back Panel




- Use the Phillips #1 screwdriver to remove the eight 6.5 mm Phillips #1 screws.
- ❗ Only the four screws in the center are removable, the four along the edges are held in by rivets but can be loosened.

Step 4

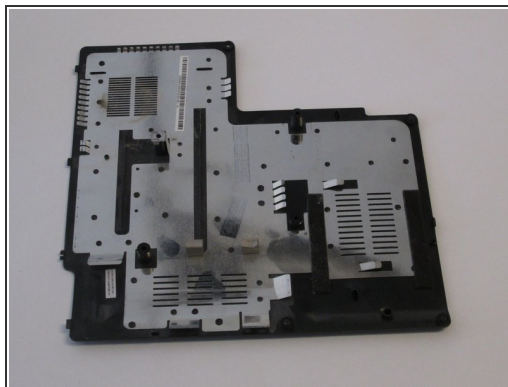

- Remove the back panel of the laptop.

Step 5

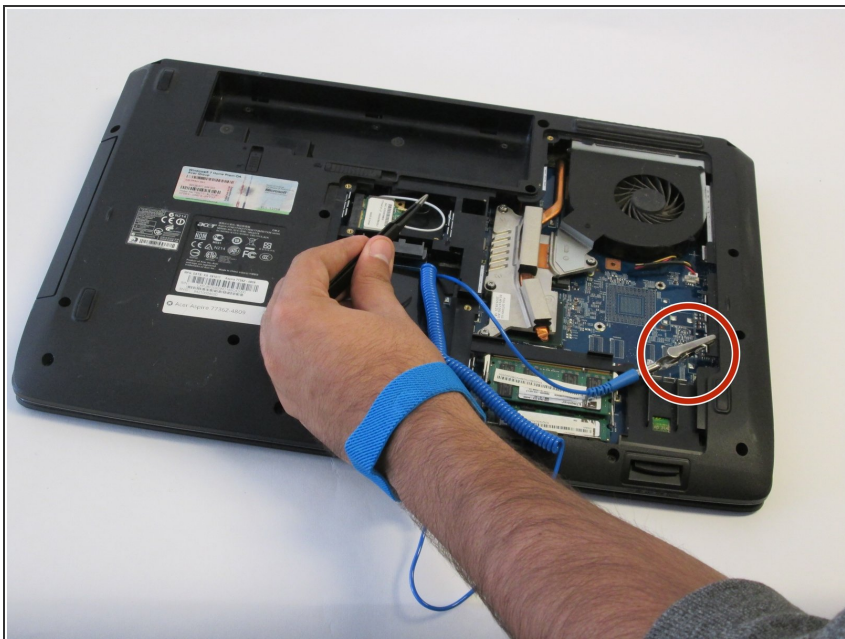

- Connect a grounding cord to a metal interface on the laptop.
- ⚠ Ground the laptop to prevent static electricity from damaging the electrical components inside the laptop.

To reassemble your device, follow these instructions in reverse order.