




# Acer Aspire 7736Z-4809 LCD Module Removal

## Preparation

This is a step for preparing to remove the LCD module

Written By: Pnithan Jantarakolica

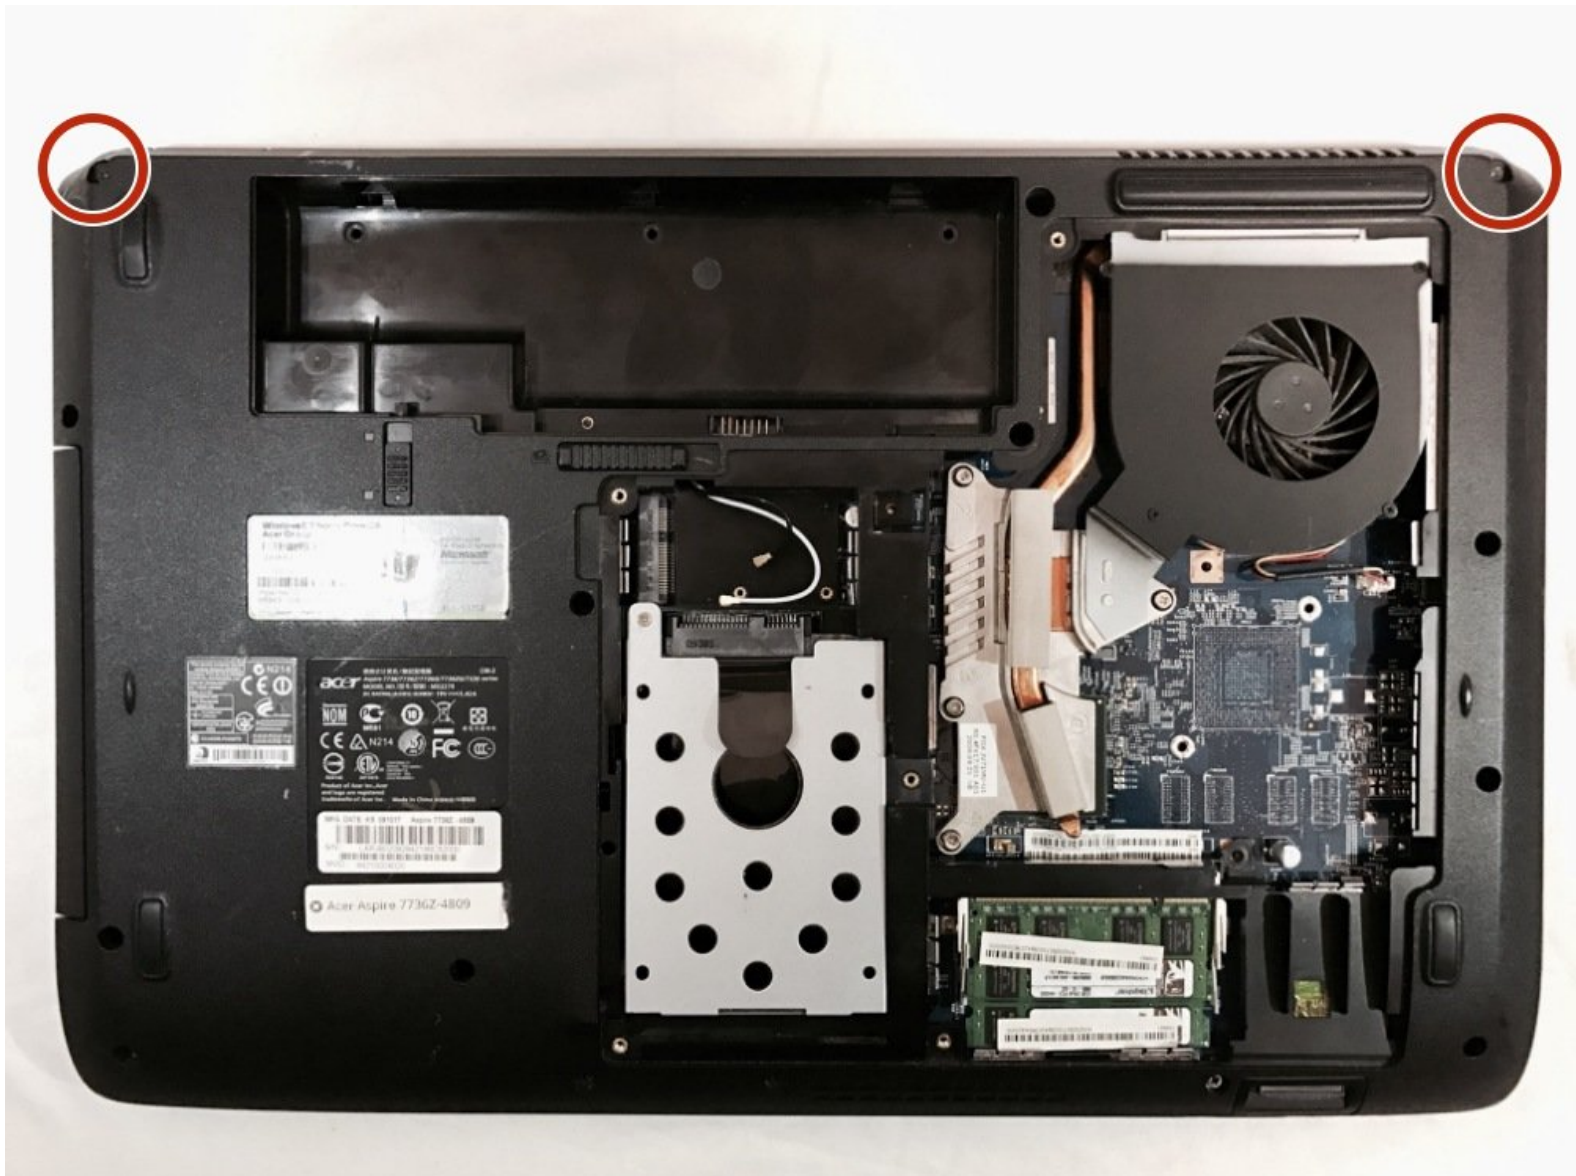




## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — LCD Module

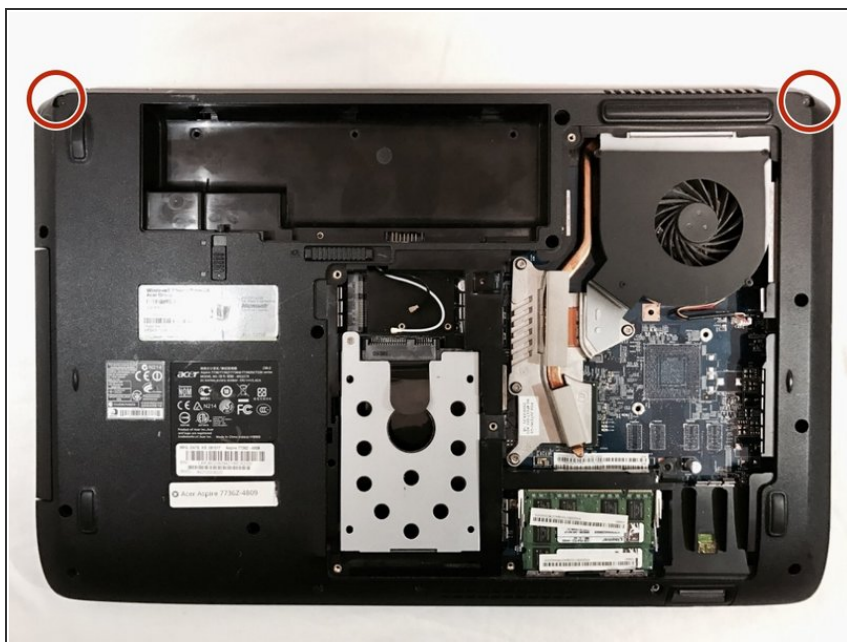

- Use the Phillips #1 screwdriver to remove the two 6.5mm Phillips #1 screws.

To reassemble your device, follow these instructions in reverse order.