



Shark Rotator NV502 Foam Filter Replacement

Replacing the foam and felt filters on the shark navigator NV502.

Written By: Samuel



INTRODUCTION

Low suction could mean that it's time to check the foam and felt filters. Once removed, the filters should be examined for dirt or damage and cleaned or replaced respectively. Dirt and damage can cause blockage in the suction of the vacuum resulting in the vacuum not being able to pick up dirt effectively.

Step 1 — Foam Filter




- Locate and press the tab on the top of the removable canister.
- Lift the canister away from the body of the vacuum.

Step 2



- Look inside the tall hole to locate the foam filter inside.
- Pull out the foam filter.

Step 3

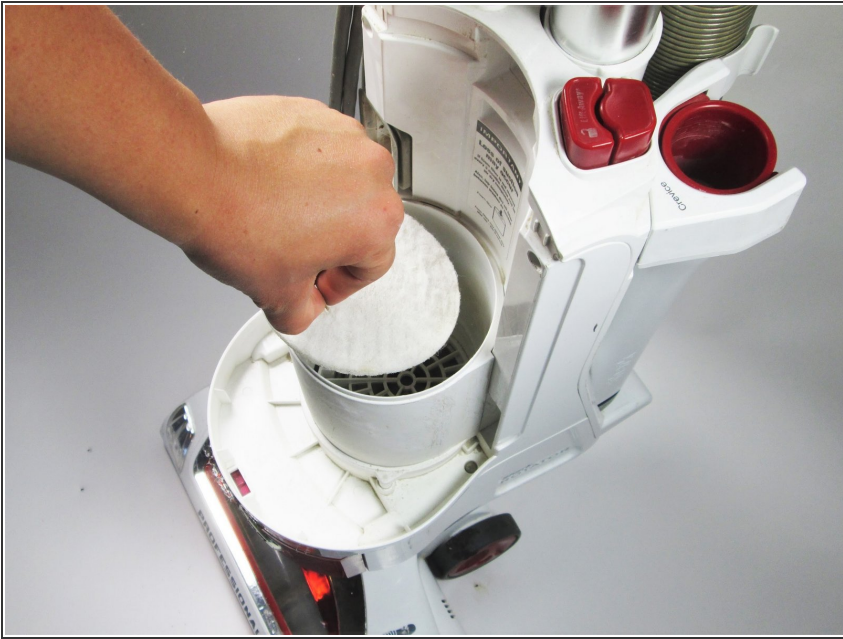

- Remove the felt filter just below the foam filter
- ⓘ Clean or Replace the filters. Let the filter dry before reinserting.

To reassemble your device, follow these instructions in reverse order.