



Lenovo Thinkpad x230 Bezel Replacement

Users will learn how to remove the bezel from a...

Written By: Lino Virgen



INTRODUCTION

Users will learn how to remove the bezel from a Lenovo Thinkpad x230.

TOOLS:

Phillips #0 Screwdriver (1)

iFixit Opening Picks (Set of 6) (1)

Step 1 — Preparations



- ⓘ Before you begin, be sure to turn off your laptop and unplug it from the outlet.

Step 2 — Locate the battery



- Flip the computer upside down.
- The red rectangle shows the location of the battery.

Step 3 — Unlock the left switch



- Locate the two switches that lock the battery. Push the left-hand switch outward into the "unlocked" position.

Step 4 — Remove the battery




- Now push and hold the right clip to the right while using your other hand to gently slide the battery away from the computer.

Step 5 — Bezel



- Remove the plastic screw covers with an iFixit opening pick.

Step 6

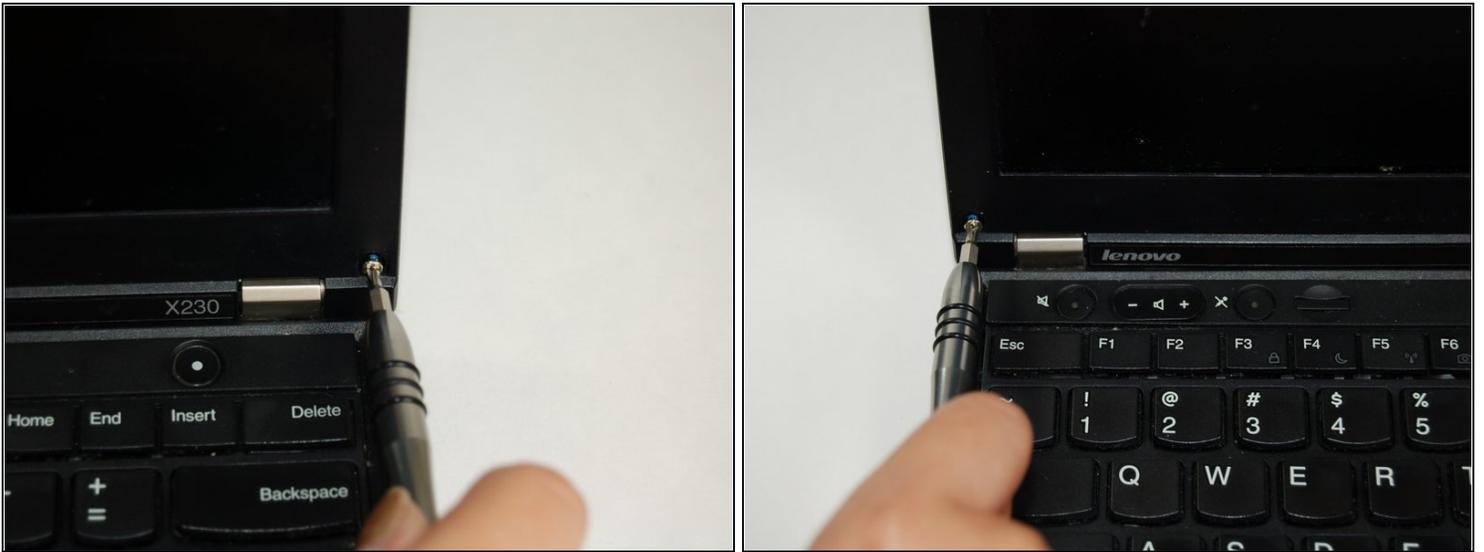

- Remove the screws (0.4, 0.5 cm) from the bottom corners of the bezel using a Phillips #0 screwdriver.

Step 7



- Carefully remove the plastic bezel cover using an iFixit opening pick.

To reassemble your device, follow these instructions in reverse order.