




Nerf N-Strike Deploy CS-6 Battery Replacement

This guide will show to properly take out faulty batteries from their compartment and to replace them in the correct order.

Written By: Brenda

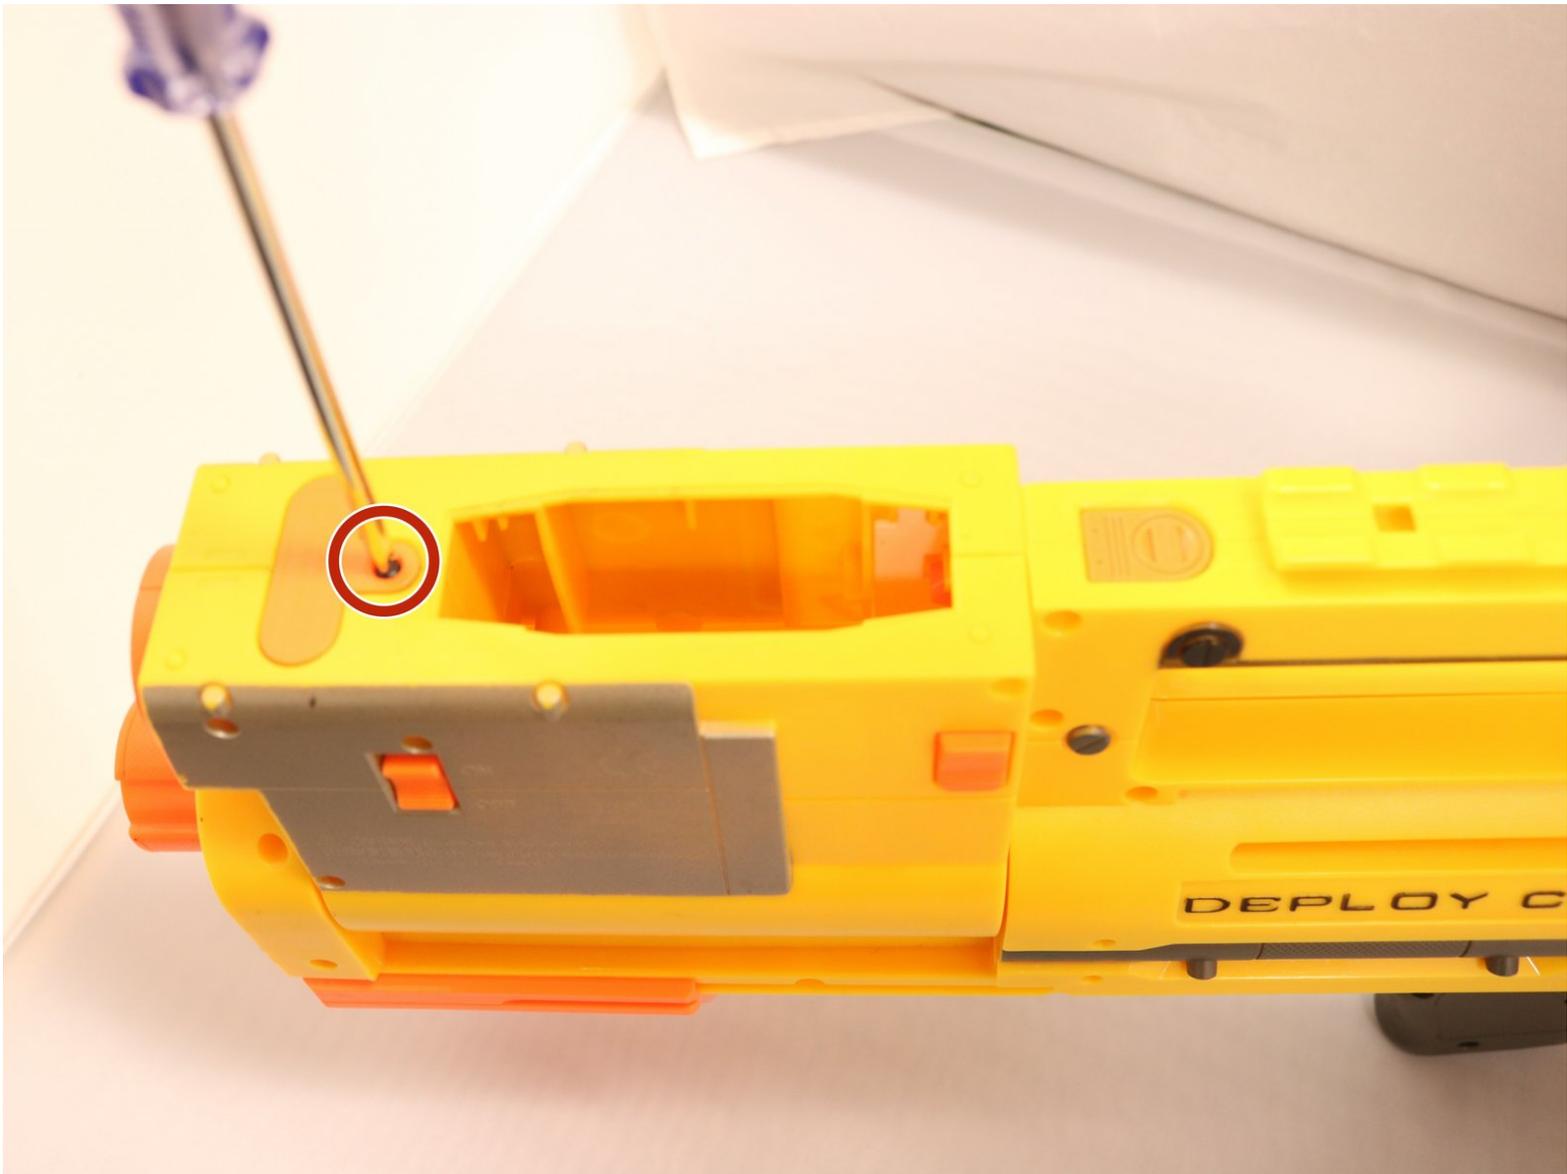

INTRODUCTION

The device is accompanied with a flashlight in order to be used effectively in the dark. The light will only turn on if using the proper batteries. This guide will show you how to remove the batteries from their compartment and properly place in **three** Triple A batteries. Following these steps will allow the flashlight to function properly.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Place the screwdriver on the screw and begin taking it out.
- ⓘ Turn the screw counter-clockwise.

Step 2

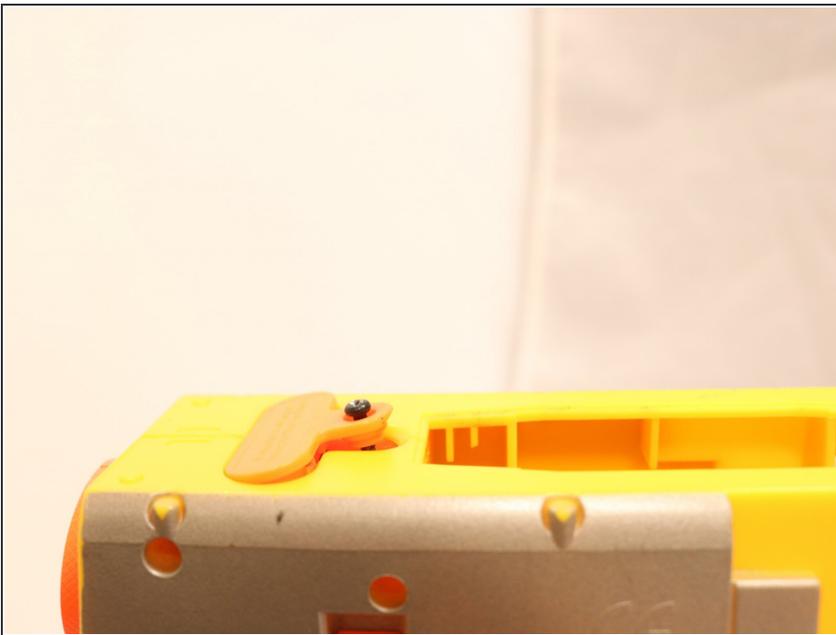

- The lid that covers the batteries should then rise up slightly, allowing it to be pulled off.

Step 3



- Remove the batteries.

To reassemble your device, follow these instructions in reverse order.