



# Dell Inspiron E1505 Battery Replacement

The lifespan of a battery decreases with time and use. Roughly every two to three years a laptop's battery will need to be replaced.

Written By: Anthony Toscano



## INTRODUCTION

Replacing the battery of a laptop is a rather straight forward process that takes a small amount of time. This guide will show you how to replace your laptop's old battery with a new one.

## Step 1 — Battery




- Before any work can be done ensure that the laptop is powered off.
- Use either the power button on the computer or issue a shutdown from the operating system.
- Once the device is off place the laptop on a flat surface and flip it so that the bottom is facing upwards.

## Step 2



- Locate the battery release switch on the bottom of the laptop.
- Once located slide the switch into the unlock position.

### Step 3

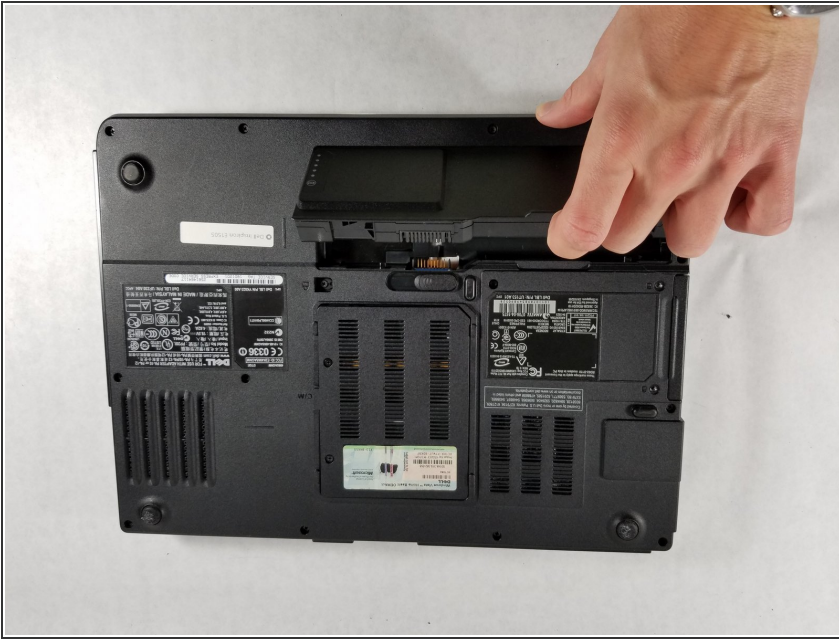

- Locate the “lip” on the laptop to lift the battery outside of the compartment.
- Once the battery is out, you will be able to find the replacement part number in order to purchase a new battery.

### Step 4



- Once the new battery has been acquired take the battery and place it in the empty battery slot.
- Slide the switch into the lock position to secure the new battery.

To reassemble your device, follow these instructions in reverse order.