


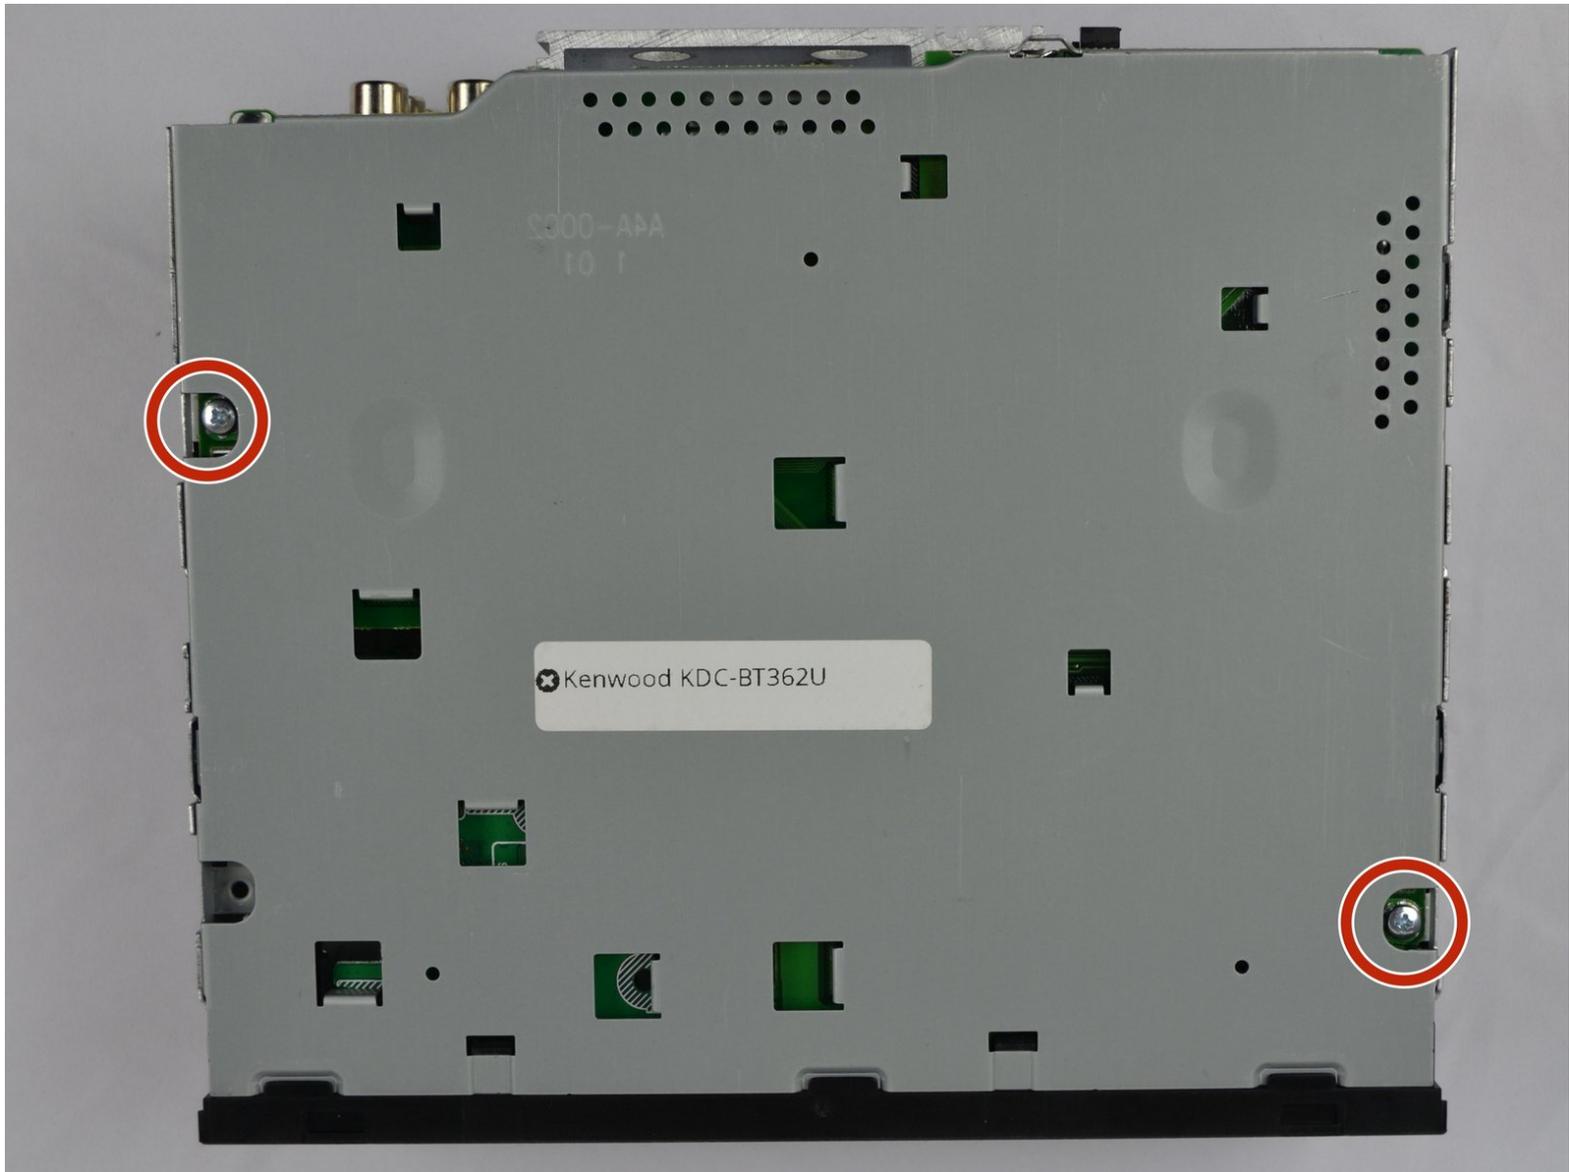

Kenwood KDC-BT362U Metal Case Separation

Written By: Pablo Cabrera



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Front Panel



- Locate the face-plate eject button.

Step 2



- Press the eject button with your forefinger.
- Remove the face-plate.

Step 3



- Starting on the top side, pop the front panel frame out.
- Remove the face-plate frame.

Step 4





- Use the plastic opening tool to pry open the tabs.
- Repeat on the opposite side.

Step 5



- Remove the front panel.

Step 6 — Metal Case

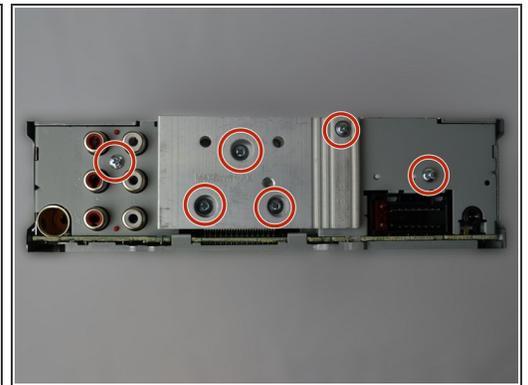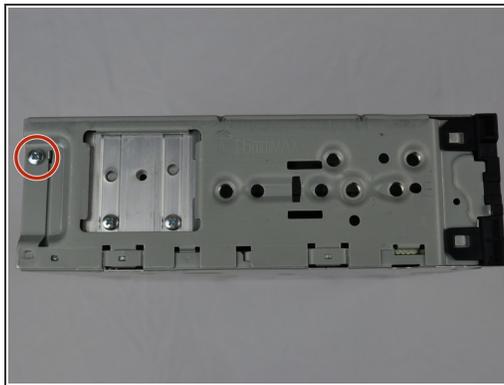

- Use the Phillips #0 Screwdriver to remove the screws off of the metal case.

Step 7



- Carefully separate the top and bottom halves of the metal case apart.
- ⓘ Do not separate the metal case halves completely.
- Carefully pull the DVD-Drive ribbon cable from the motherboard.

To reassemble your device, follow these instructions in reverse order.