




HP G60T-600 CTO Hard drive Replacement

This guide will show you how to remove your hard drive from your device.

Written By: Dominic DeSantis

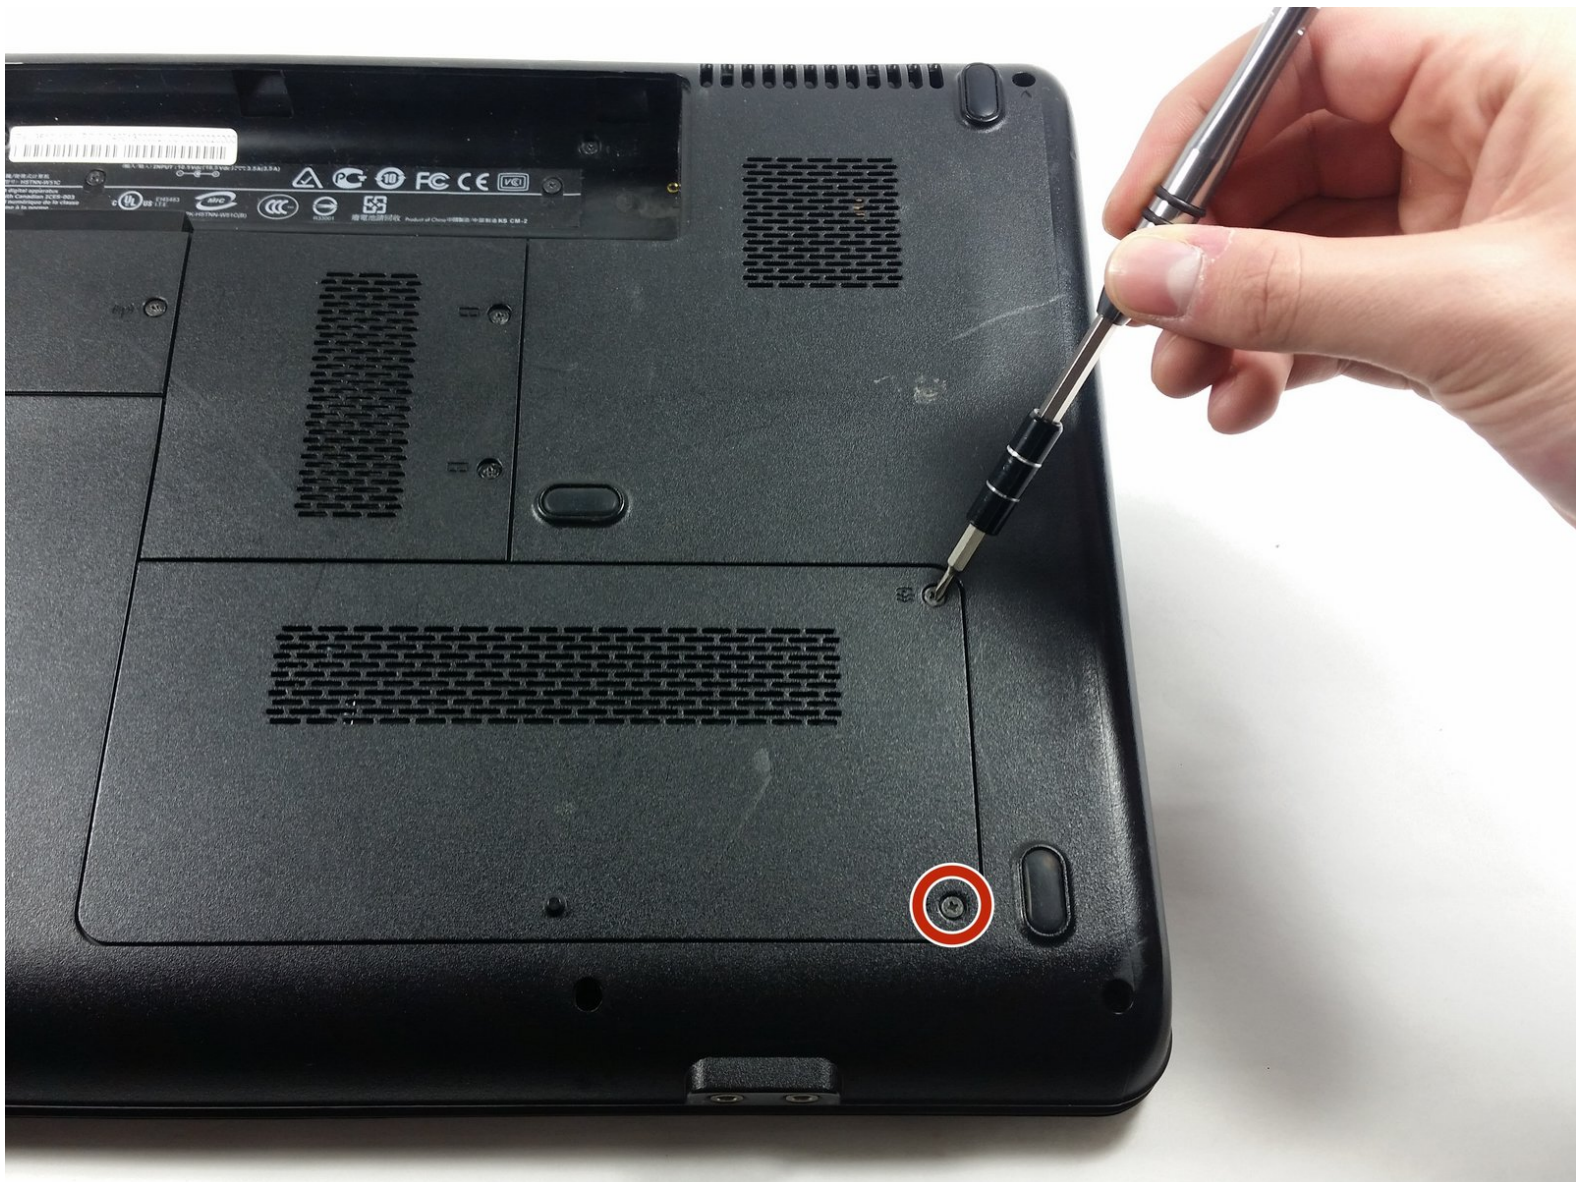

INTRODUCTION

You will learn how to remove your full or defective hard drive and replace it with another. It may be beneficial to watch a video of a hard drive being taken out to familiarize yourself with this step, since there was no hard drive to take out on this example.




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



 Failure to remove the battery before performing any replacement guide may result in electric shock.

- Close your device, then turn it over.

Step 2




- Place your index finger on the ridged tab.

Step 3




- Apply moderate pressure to the tab and slide it to the right.
- While the tab is on the right, you should be able to gently slide your battery out of your device.

Step 4 — Hard drive

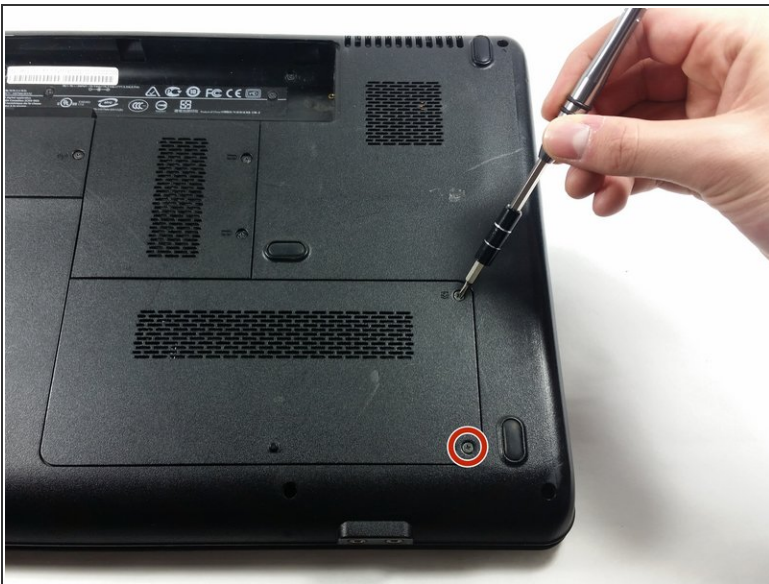


- Remove the 5cm screws with a #00 Phillips screwdriver.
- Take the cover off.

Step 5

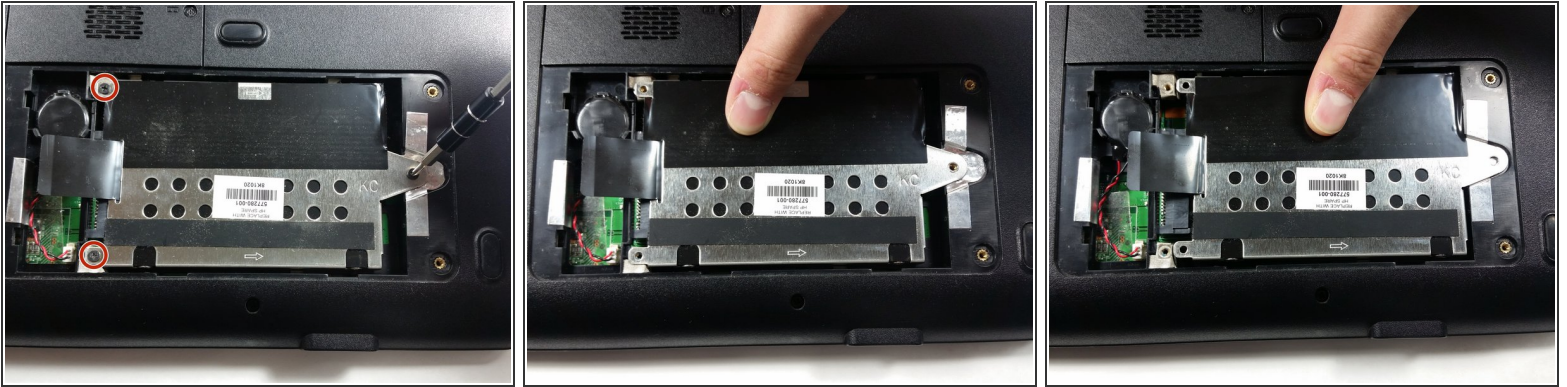

- Remove the following .5cm screws with a #0 Phillips screwdriver.
- Slide the hard drive cover to the right with light-medium force.

Step 6

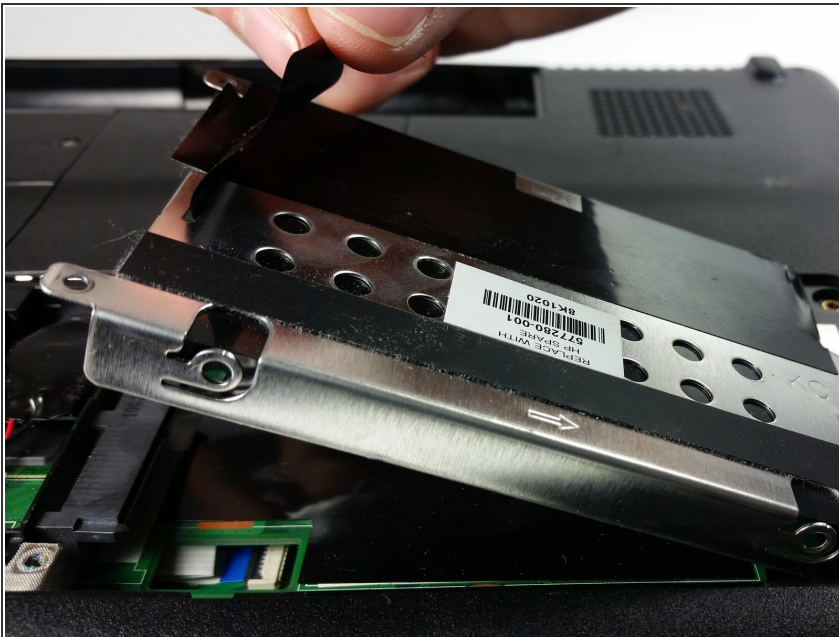

- Pull up on the little black tab on the hard drive case to remove it.
- From here you will be able to carefully slide your hard drive out.

To reassemble your device, follow these instructions in reverse order.