


# **LG VX8700 Keypad Replacement**

The guide outlines the steps necessary to...

Written By: tnscholz

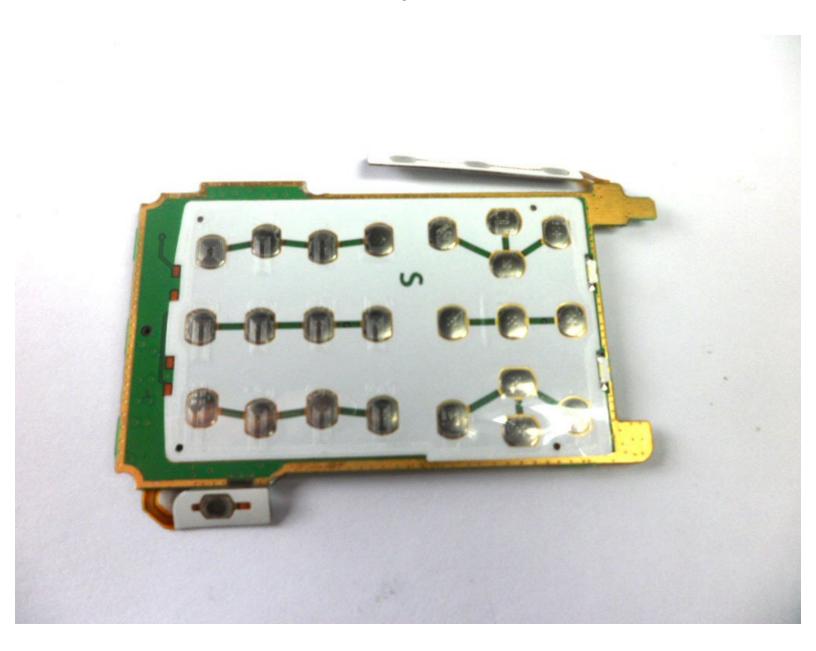

## **INTRODUCTION**


The guide outlines the steps necessary to replace the keypad on the LG VX8700. The keypad is used to to help direct actions on the phone.



## **TOOLS:**

- Phillips #0 Screwdriver (1)
- iFixit Opening Tool (1)

## Step 1 — Battery

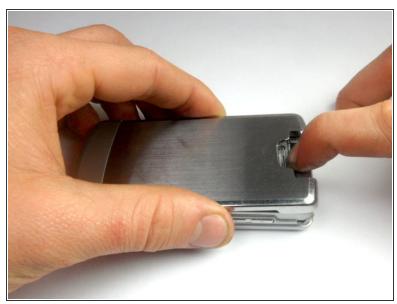



Make sure the phone is completely off.

Remove the back cover by sliding the tab away from the phone using one finger.


## Step 2





- Lift one side of the battery using a plastic opening tool or your fingers.
- Carefully remove the battery and set it aside.
- Mhen installing the new battery, make sure to align the metal pins with those of the phone.

#### Step 3 — Keypad

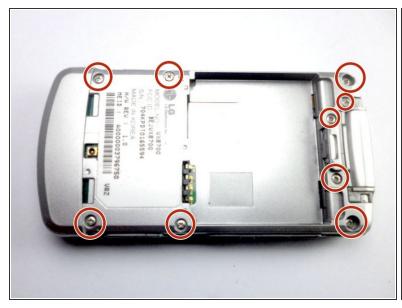



• Remove the nine 4 mm screws from the back cover with a Phillips #0 screwdriver.

#### Step 4





- Insert the tip of the iFixit opening tool into the small notch on the side of the case.
  - Slide the opening tool along the seam and around the edge of the phone to separate the case.


## Step 5




- Separate the two halves of the phone.
  - The back of the phone, which houses the motherboard and keypad, is displayed on the left.
  - The plastic casing is displayed on the right.

## Step 6




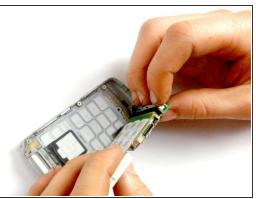


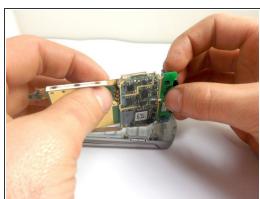

- Hold the phone casing with one hand and the keypad assembly with the other.
- Separate the phone casing from the keypad/motherboard.

#### Step 7

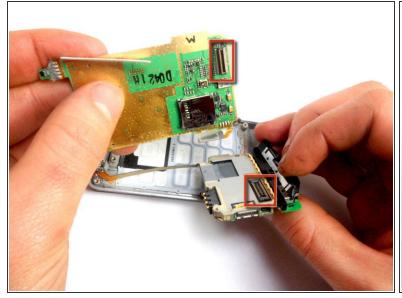

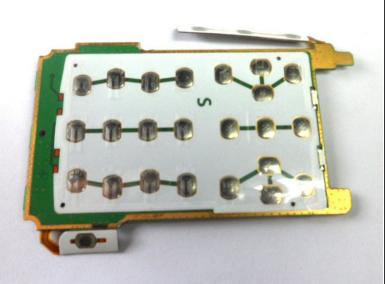

Pull the two boards apart to separate the keypad from the motherboard.

To reassemble your device, follow these instructions in reverse order.