



HP Pavilion G60-235DX Ram Replacement

This guide will show how to replace the ram on your computer.

Written By: James de Fremery



INTRODUCTION

This will show you how to replace the ram in your G60 laptop.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Ram



- Lay the computer so that the backside is facing you and locate the screw in the picture.

Step 2



- Remove the screws.

Step 3




- Remove the cover that was held in by the screws that you just removed.

Step 4



- Push this slide over in order to remove the battery. This is safe when working with your computers memory.

Step 5

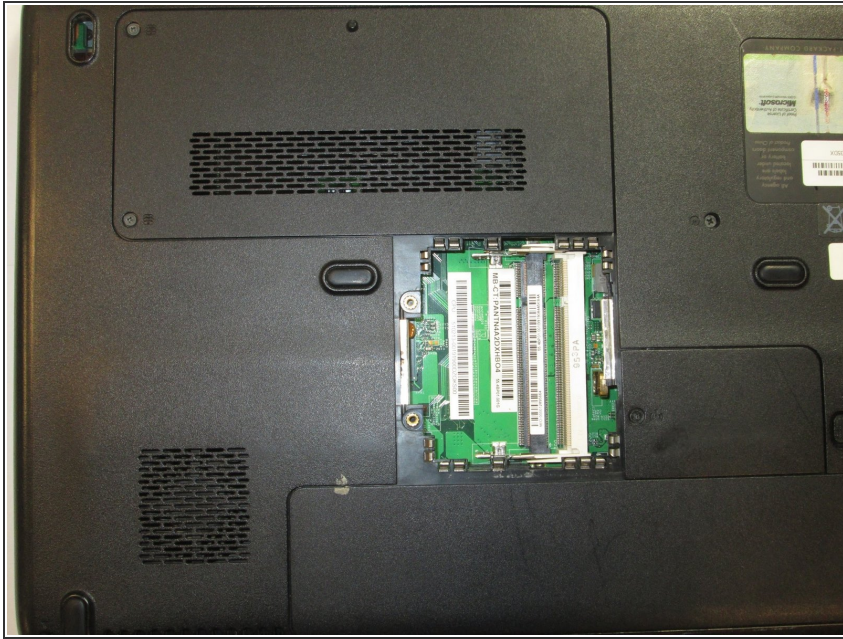

- Remove each one of the rams so that the computer looks like this. You can do so by squeezing tabs on each side of the ram.

To reassemble your device, follow these instructions in reverse order.