




Sony Xperia T2 Ultra Dual Top Speaker Replacement

This guide is to show how to remove and replace the top speaker of Sony Xperia T2 Ultra Dual.

Written By: Shiqing Wang

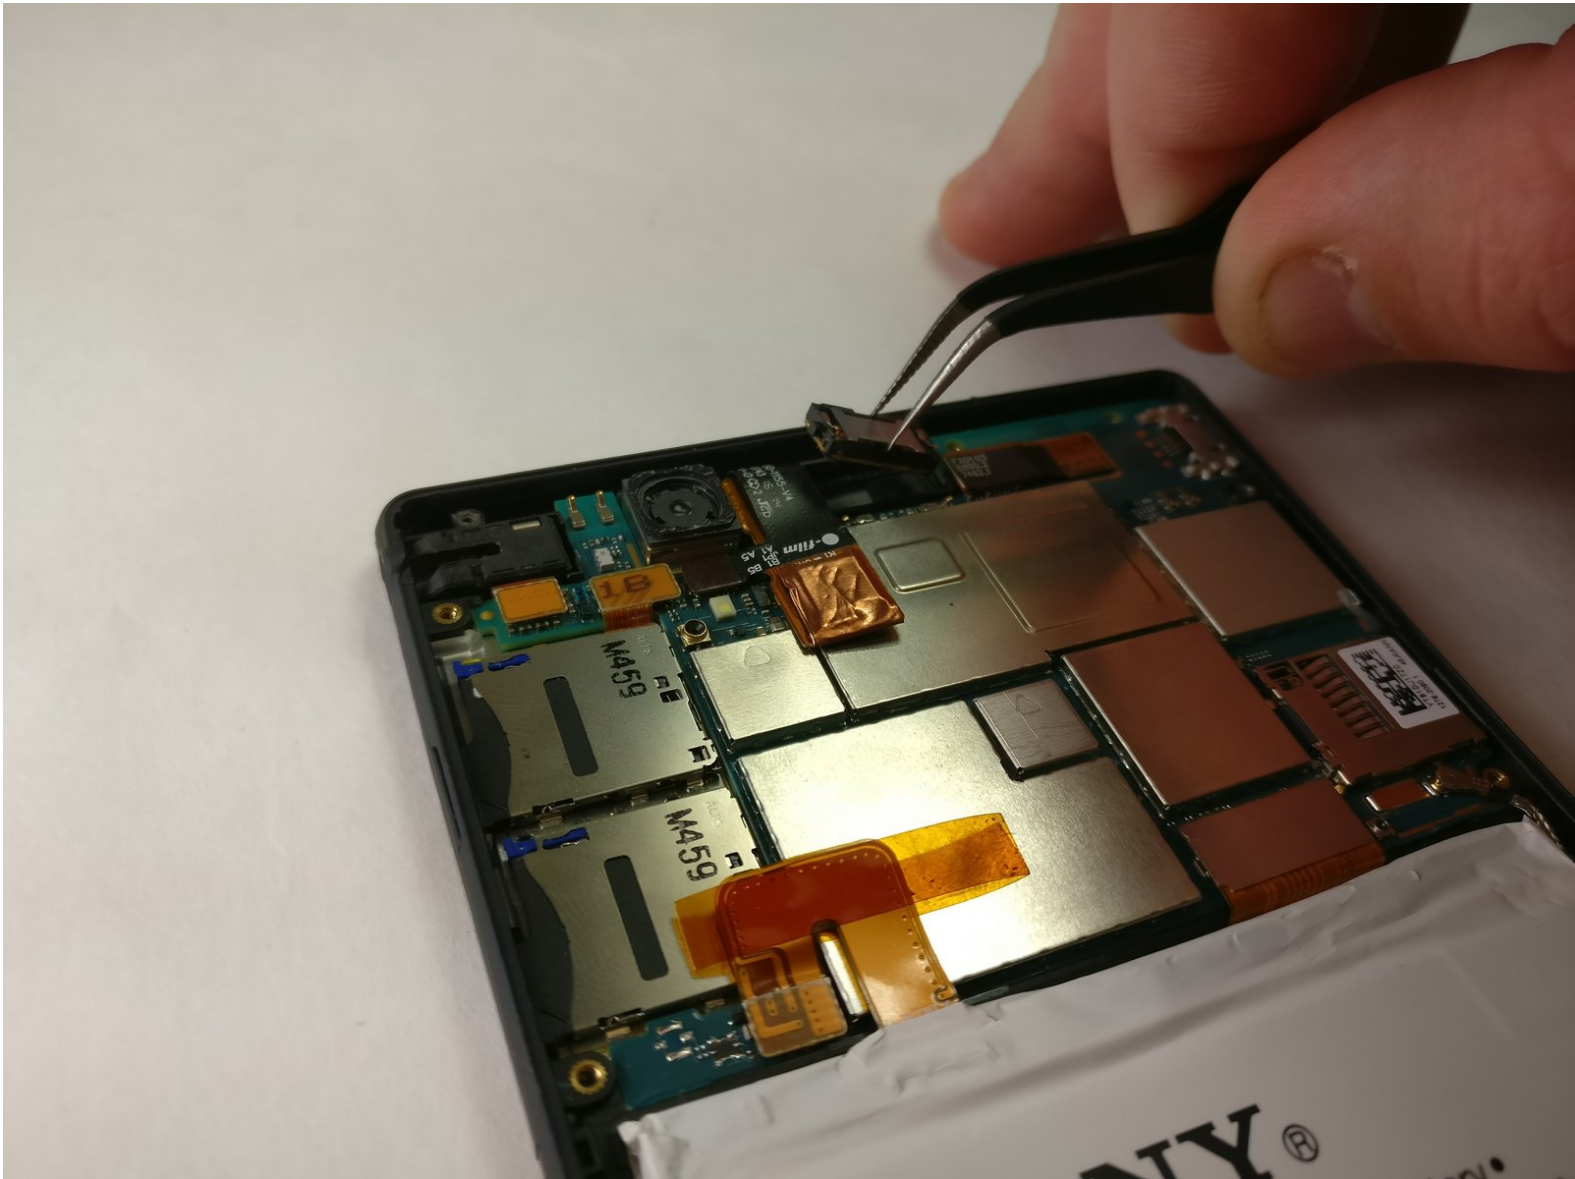


INTRODUCTION

This guide shows how to replace the top speaker of the phone. If you are having trouble hearing any audio out of the top speaker, then your top speaker must be replaced.

TOOLS:

- [Tweezers](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case

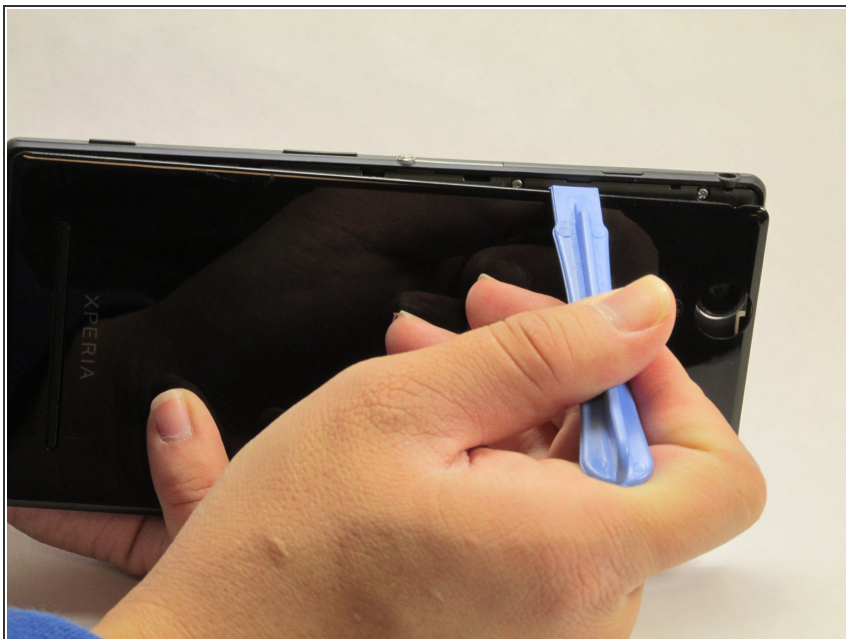


- Using the spudger, pry open the back cover by starting alongside the edge of the back cover.

Step 2




- Once the part of the back cover has been opened up. Slide the spudger to pry completely detach the cover from the phone.

Step 3 — Removing the internal cover

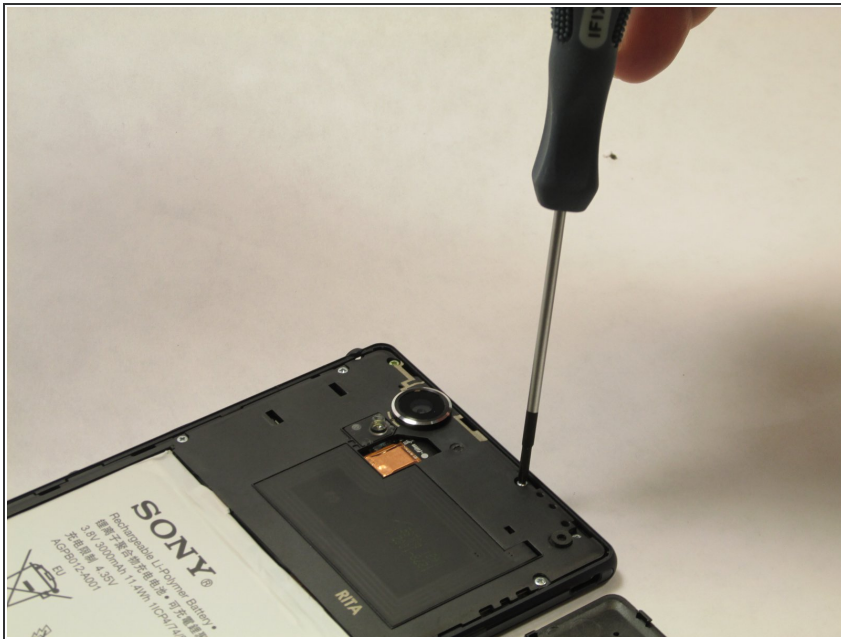


- Using the Phillips #00 Precision screwdriver, take out 8 silver screws (3.15mm) and 5 gold screws (3.9mm) for a total of all the screws attached to the flat plate. 3 of the gold screws are located at the top of the phone and the other 2 screws are located at the bottom of the phone.

Step 4

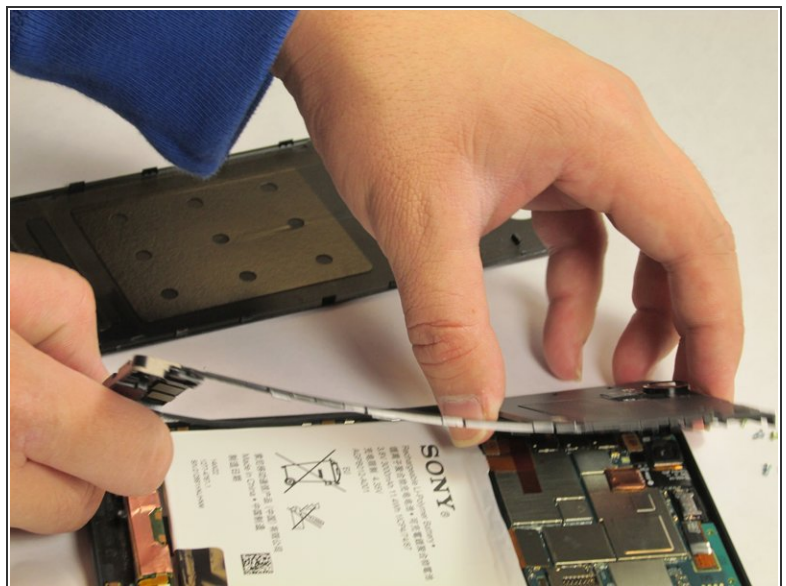

- To remove the internal cover, use the plastic spudger tool and pry the cover from the phone as shown in the picture.

Step 5 — Top Speaker

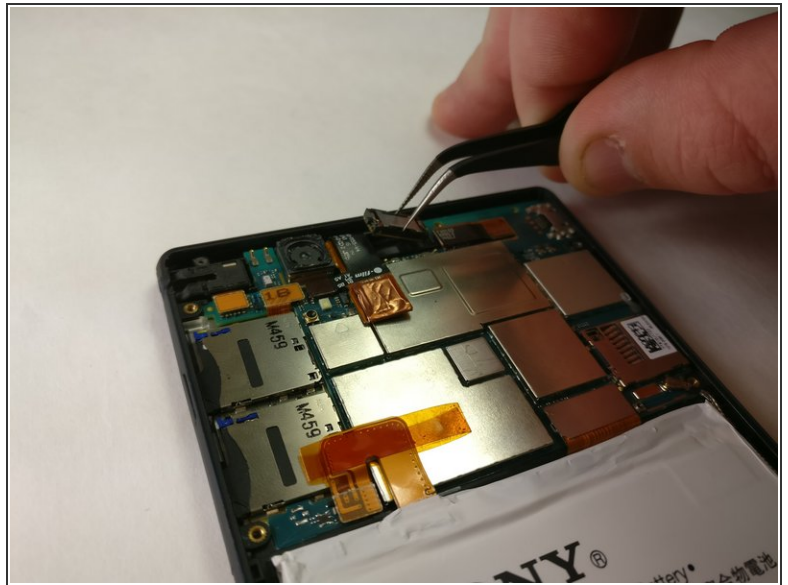

- Use the tweezers to remove the top speaker carefully.

To reassemble your device, follow these instructions in reverse order.