




PlayStation Vita Speakers Replacement

Install speakers in the PlayStation Vita.

Written By: Brittany McCrigler

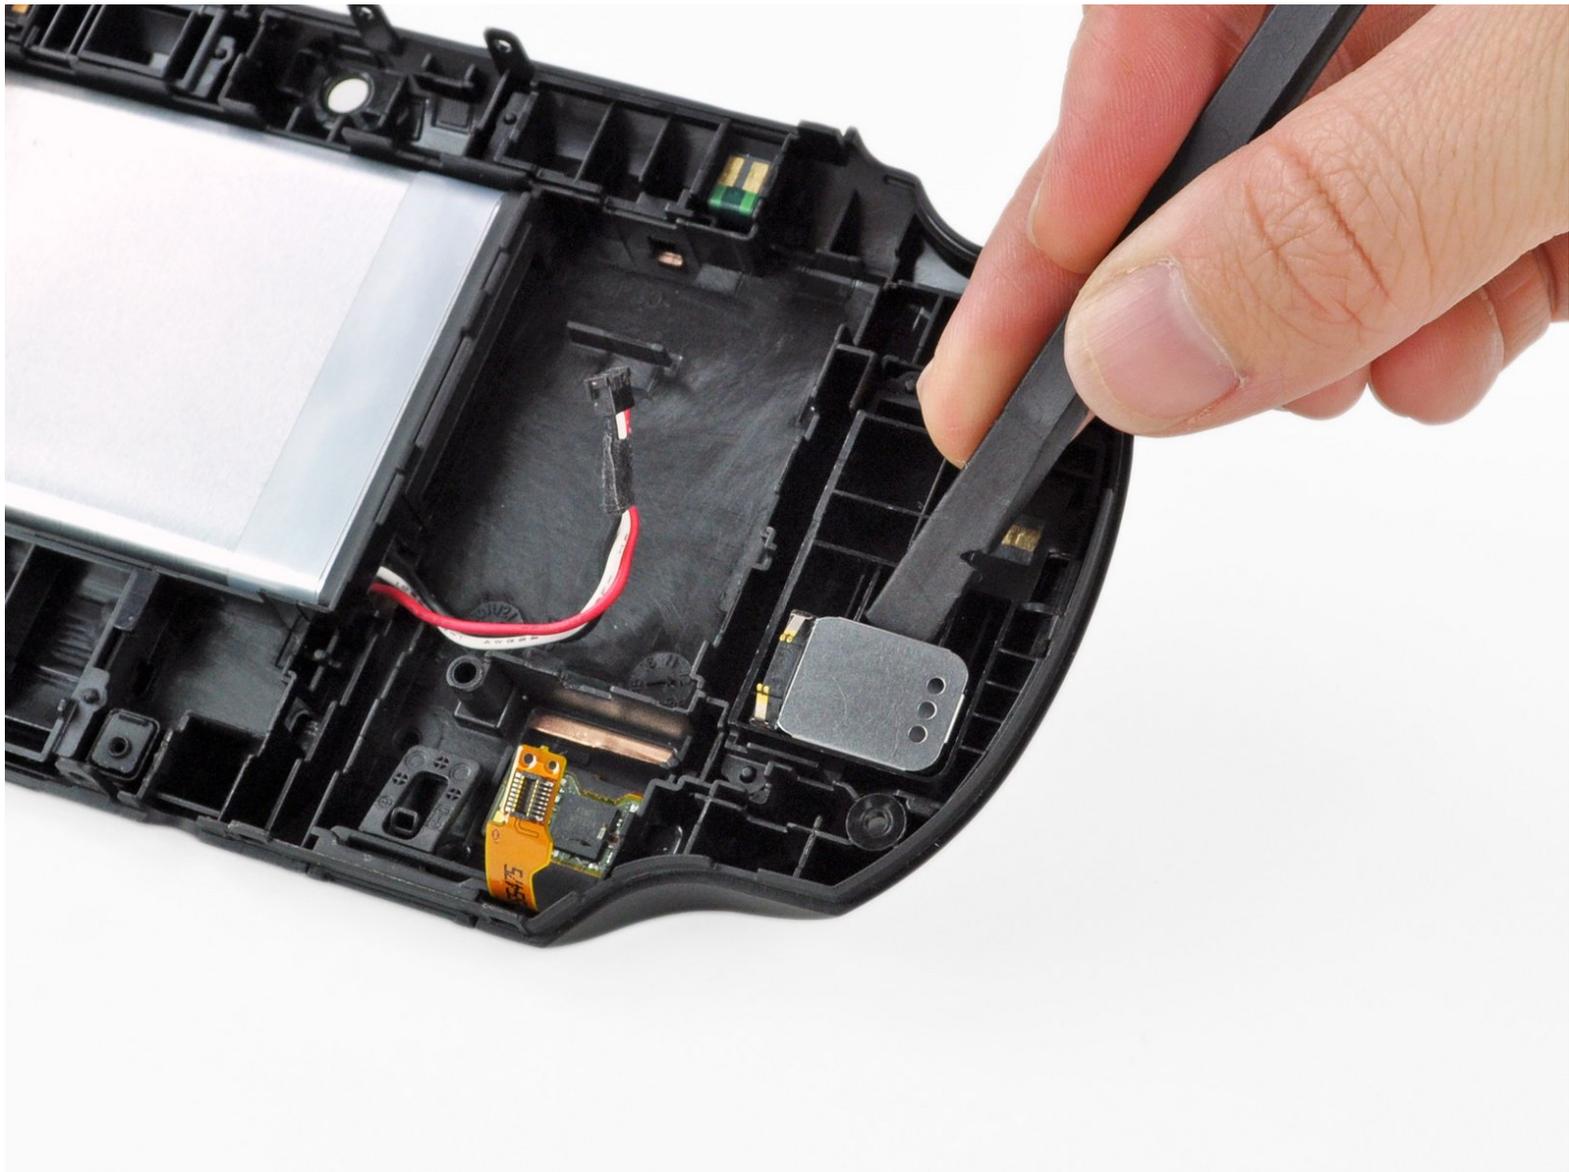

INTRODUCTION

This guide takes you through installing the speakers in the PlayStation Vita.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Case Separation



 Power off and remove the memory card.

- Using a Phillips #00 screwdriver, remove the four 6.4mm screws on the back casing.

Step 2



- Using your fingernail or a spudger, pry open the accessory port cover on the top of the device.
- Using a Phillips #00 screwdriver, remove the two 5.4mm screws hidden beneath the accessory port cover.

Step 3



- Remove the two 5.4mm Phillips #00 screws on the bottom of the device near the charging port.

Step 4



- Beginning at the sides of the device, use a plastic opening tool to separate the front and rear cases.
- Continue working your way around the device gently prying it open.


⚠ There are still wires holding the front and rear cases together. You may damage the connections if you yank the cases completely apart.

Step 5




- Gently separate the two cases, minding the battery and the touch screen controller connectors holding the two cases together.

Step 6

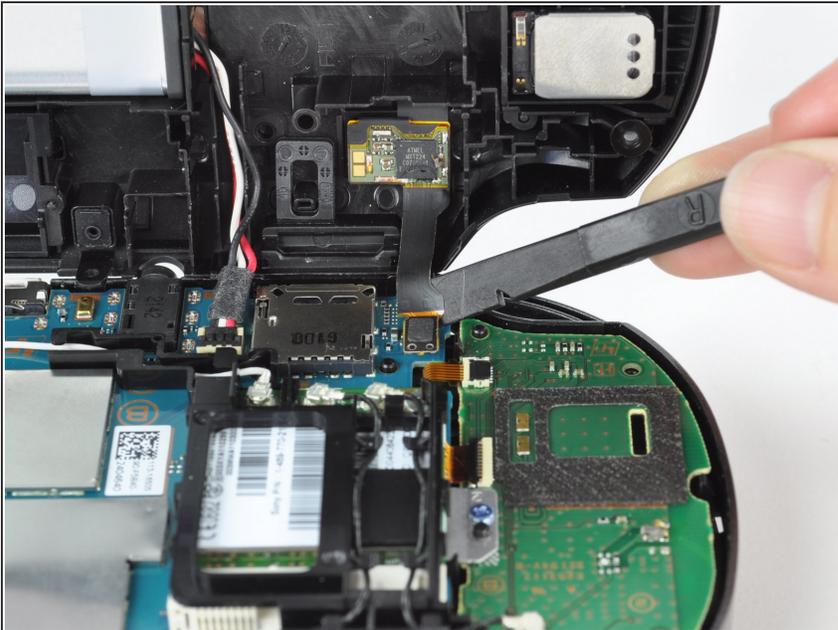

- Using a spudger, free the touch screen controller flex cable by gently prying up the connection.

Step 7

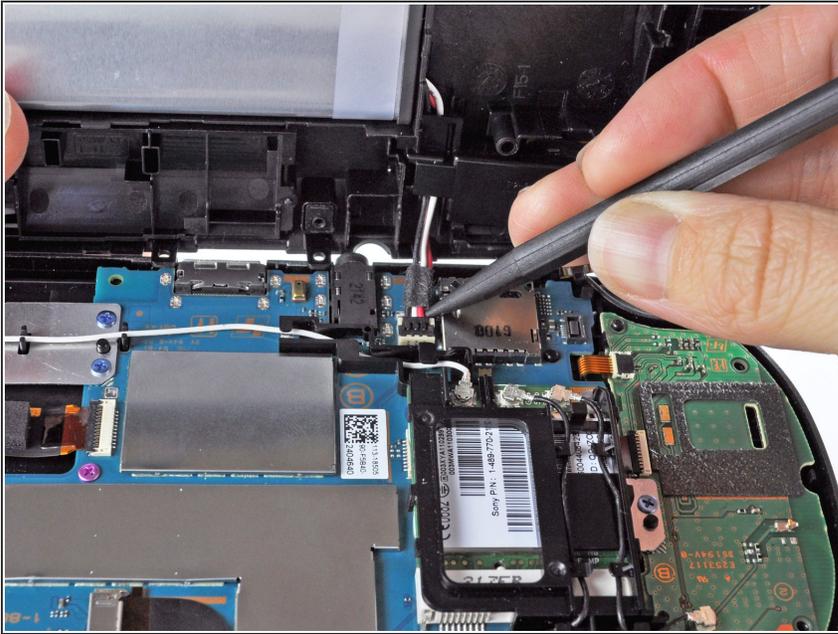


- Free the battery cable by gently prying up on the connection with a spudger.

Step 8



- Separate the front and rear cases.

Step 9 — Speakers

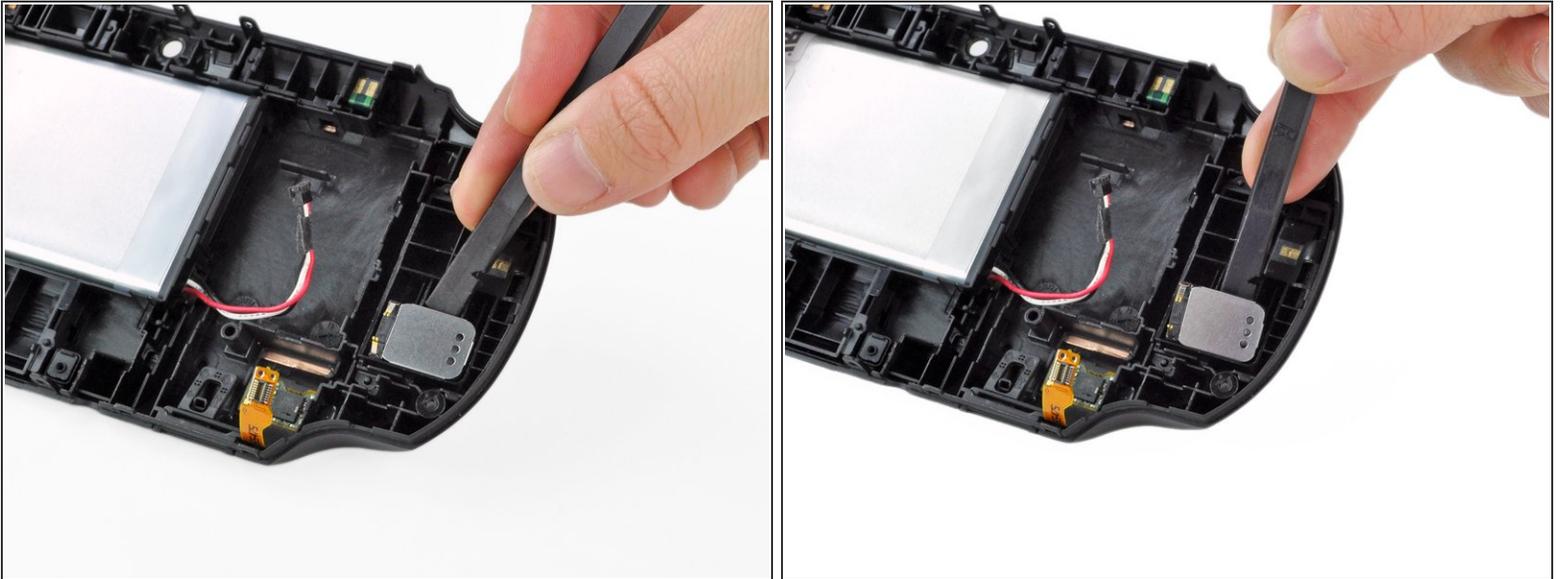

- Gently insert a spudger along the side of the speaker on the back casing assembly. Pry the speaker off the casing and remove it.
- ⓘ The speaker is adhered to the casing with light tape, which may give the speaker light resistance.

To reassemble your device, follow these instructions in reverse order.