


Samsung Galaxy Note 10.1 2014 Loudspeaker Modules Replacement

Use this guide to replace the loudspeaker modules in your Samsung Galaxy Note 10.1 2014 edition.

Written By: Joseph Rasico

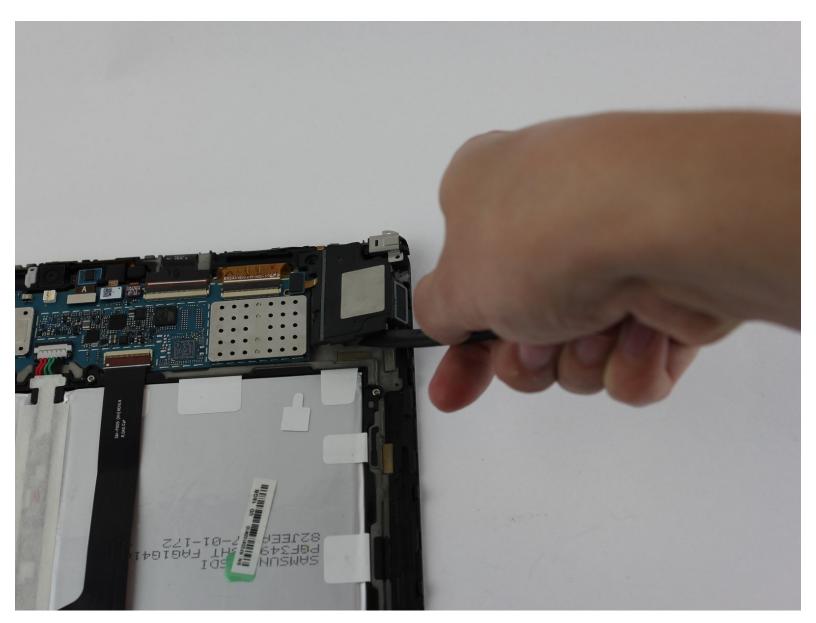

This document was generated on 2020-11-27 03:03:36 AM (MST).

INTRODUCTION

This guide will teach you how to replace the defective or nonfunctional battery in your Samsung Galaxy Note 10.1 2014 edition.



TOOLS:

- Metal Spudger (1)
- Black Nylon Spudger (1)
- Phillips #000 Screwdriver (1)



PARTS:

- Galaxy Note 10.1 (2014, Wi-Fi) Left Speaker Assembly (1)
- Galaxy Note 10.1 (2014, Wi-Fi) Right Speaker Assembly (1)


Step 1 — Case






- Using the <u>nylon spudger</u> or <u>plastic opening tool</u> along the edges of the screen, separate the back case off of the device.
- (i) If possible, consider using the black nylon spudger for a gentler separation.

Step 2 — Loudspeaker Modules

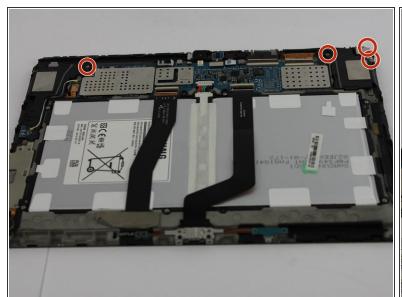

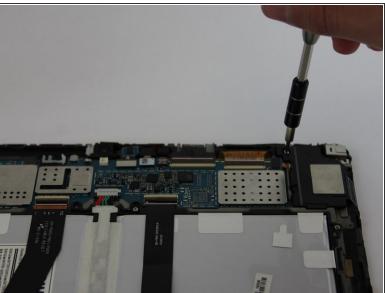

- Remove the three 3mm screws on the top right side of the device with the Phillips PH000 screw head.
- Remove the one 3mm screw on the top left side of the device with the same method.

Step 3 — loudspeaker - remove right speaker









- Remove the gray rubber piece.
- Use a spudger or fingernail to disconnect the blue antenna cable from the motherboard.
- Remove the right speaker unit.

Step 4

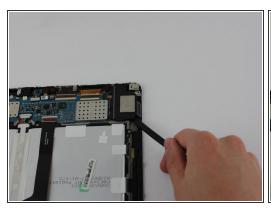

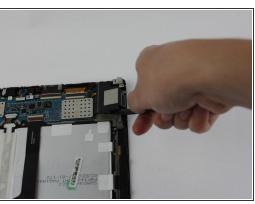



- Remove the loudspeaker modules located on the parts where the screws were removed by using the black nylon spudger.
- They are the black pieces at the top left and right corners of the device that have metal squares on them in the middle.

To reassemble your device, follow these instructions in reverse order.