




Casio Exilim EX Z55 Front Case Replacement

How to replace or remove the front case of the Casio Exilim EX Z55 camera.

Written By: Patrick Stalwick

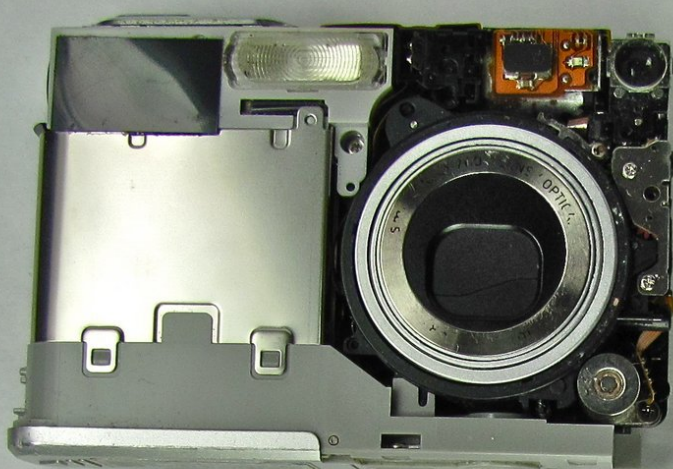


INTRODUCTION

This guide shows how to remove the front case from the rest of the Casio Exilim EX Z55 camera. You may have to do this to replace a damaged front cover or to access the inner parts of the camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Case

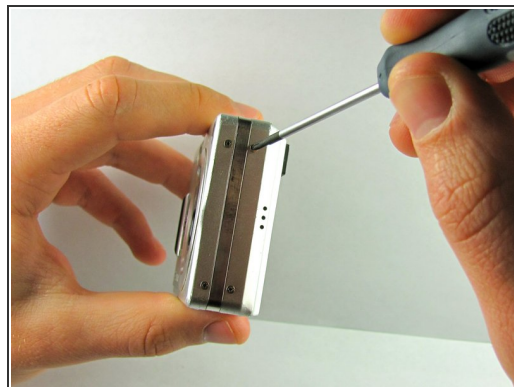

- Remove eight 1.8 mm screws from the left and right sides of the camera using a Phillips #00 screwdriver

Step 2



- Remove the four 3.7 mm screws from the bottom of the camera using a Phillips #00 screwdriver.

Step 3



- Separate the front case from the body of the camera.

To reassemble your device, follow these instructions in reverse order.