




Dell Inspiron 15-7569 RAM Replacement

This guide will help you replace your RAM in a Dell Inspiron 15-7569.

Written By: Kevin Sanchez

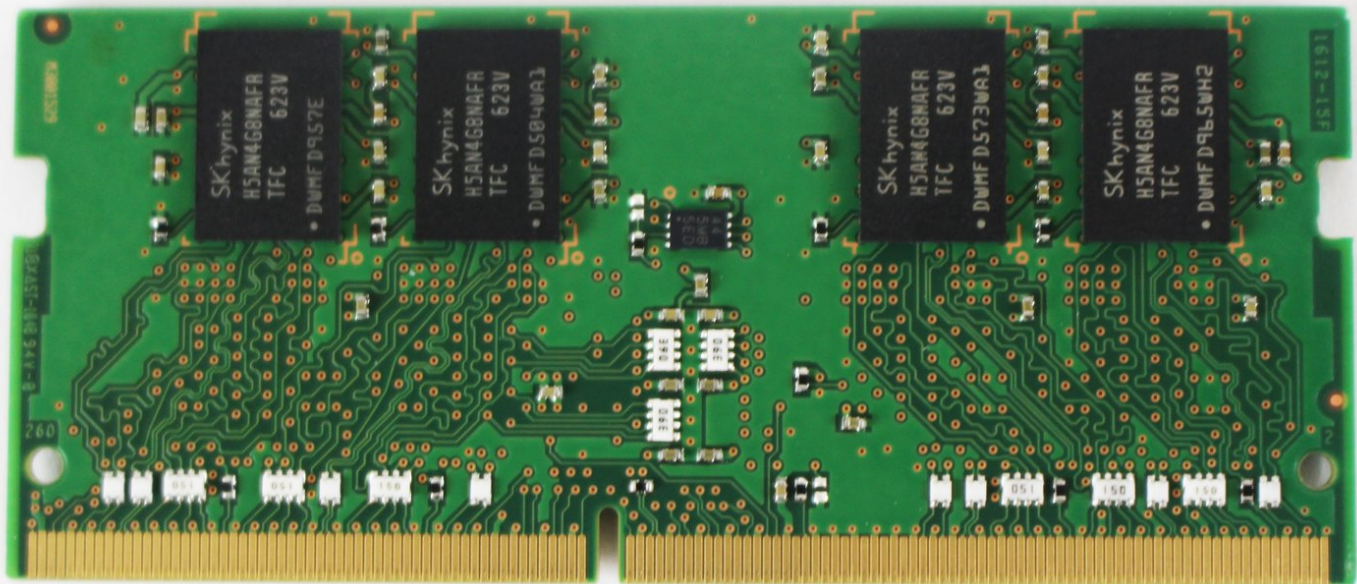

INTRODUCTION

You can follow this guide to replace your Dell Inspiron 15-7569's RAM if you would like to improve performance speed.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)



PARTS:


- [8GB DDR4-2666 SODIMM](#) (1)

Step 1 — Back Cover






- Remove the (10) P58F black screws on the back cover using the Phillips #0 screwdriver.
- After removing the screws, remove the back cover using a plastic or metal spudger.

Step 2 — RAM

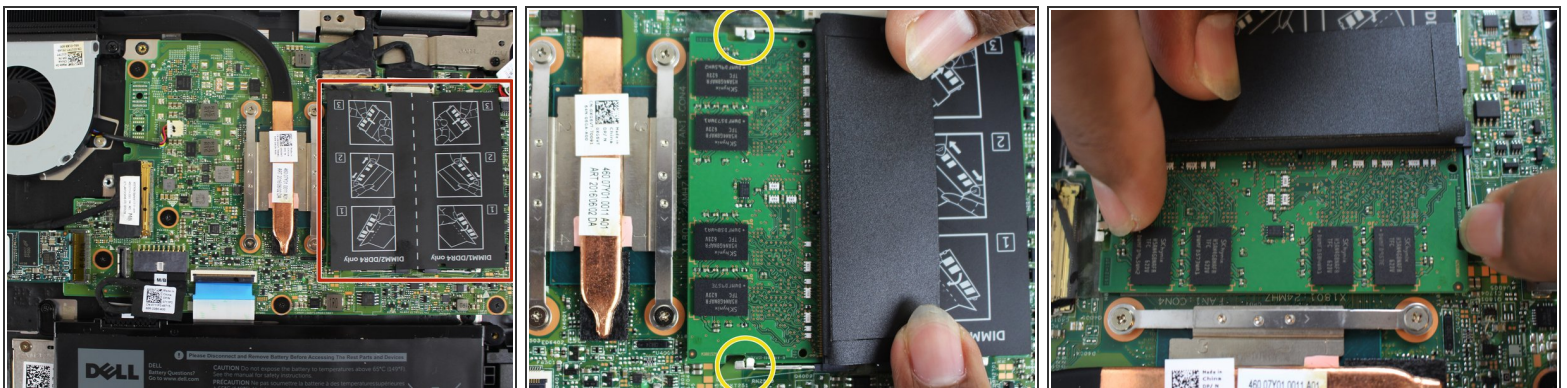

- Locate the two black RAM "flaps" (pictured)
- Lift each flap and push out on the metal clamps holding the RAM
 - The RAM will "pop" and "rise" when properly removed

Step 3

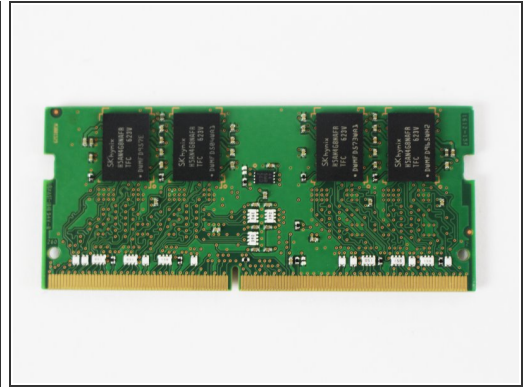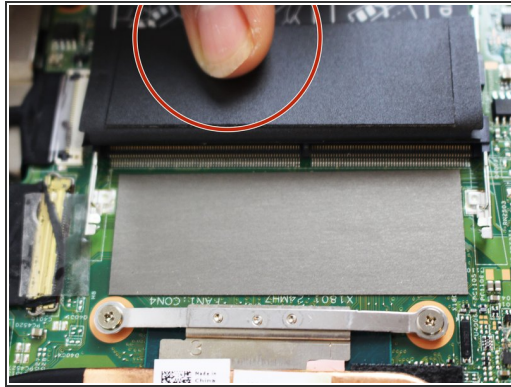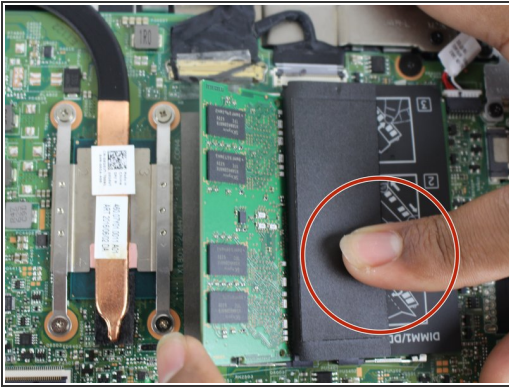

- Gently remove the RAM by the edges.

To reassemble your device, follow these instructions in reverse order.