




Lenovo Yoga 710-15IKB Battery Replacement

Removing the battery is useful in replacing faulty or damaged hardware.

Written By: Stephanie Alexander

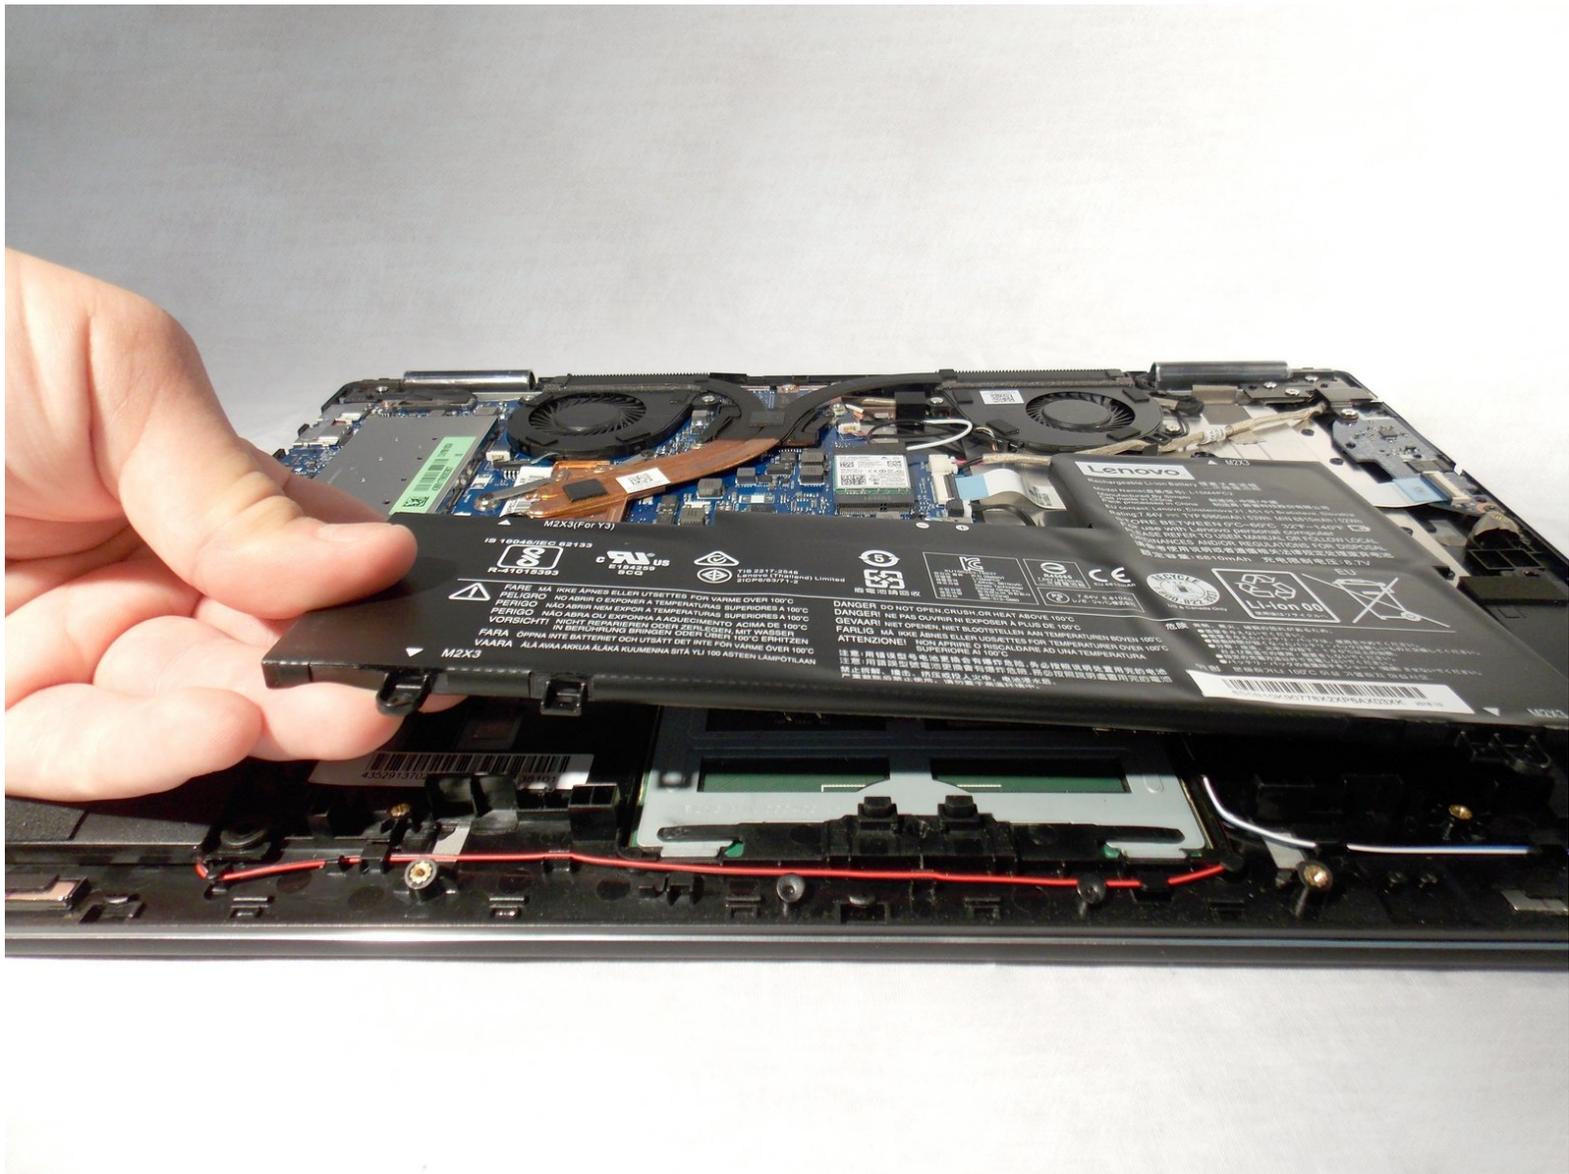

INTRODUCTION

Use this guide to replace or remove the battery in your Lenovo Yoga 710. Battery removal is also essential prior to removal of any connected hardware. Removing the battery can help protect the person and computer from electrical harm during the replacement of other hardware.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [Tweezers](#) (1)
- [Phillips Head Screwdriver: Size PH1](#) (1)

PARTS:

- [Lenovo Yoga 710 14" and 15" Battery](#) (1)

Step 1 — Battery



i Ensure your computer is completely OFF before starting this guide.

- Remove the ten 3.3 mm T5 screws from the base cover.

! The screws aren't all the same length. Be sure to keep the screws sorted as you work.

Step 2




- Slide an opening tool between the base and back cover and work your way around the entire device to release the back cover.

Step 3




- Lift and remove the back cover.

Step 4

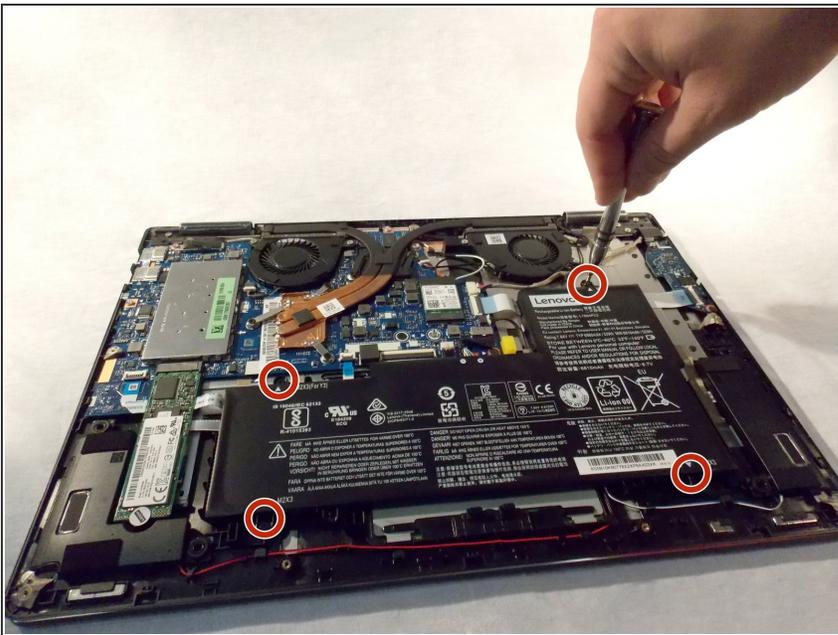


- Remove the four 3.5 mm screws around the battery using a Phillips #1 screwdriver.

Step 5

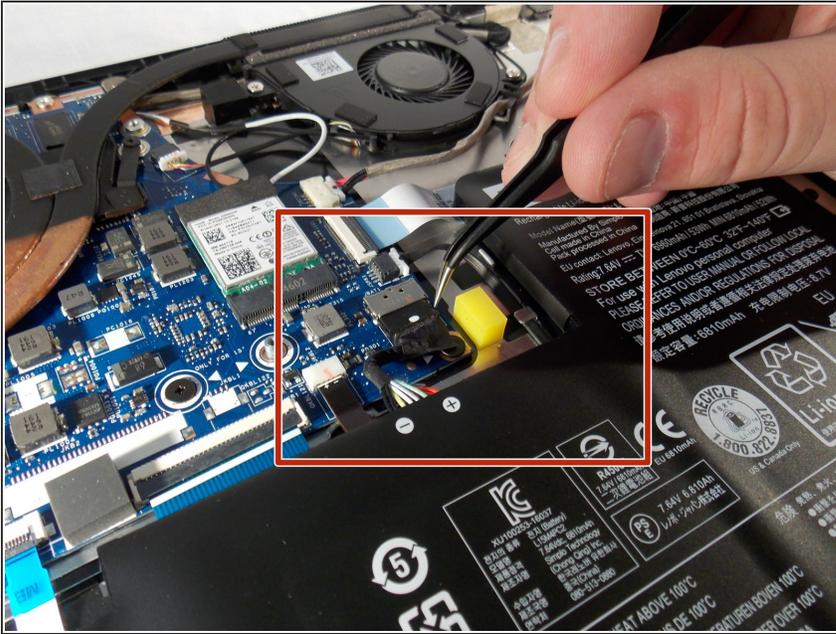

- Disconnect the battery by pulling its cable away from the hinge with a pair of tweezers or your fingers.

Step 6

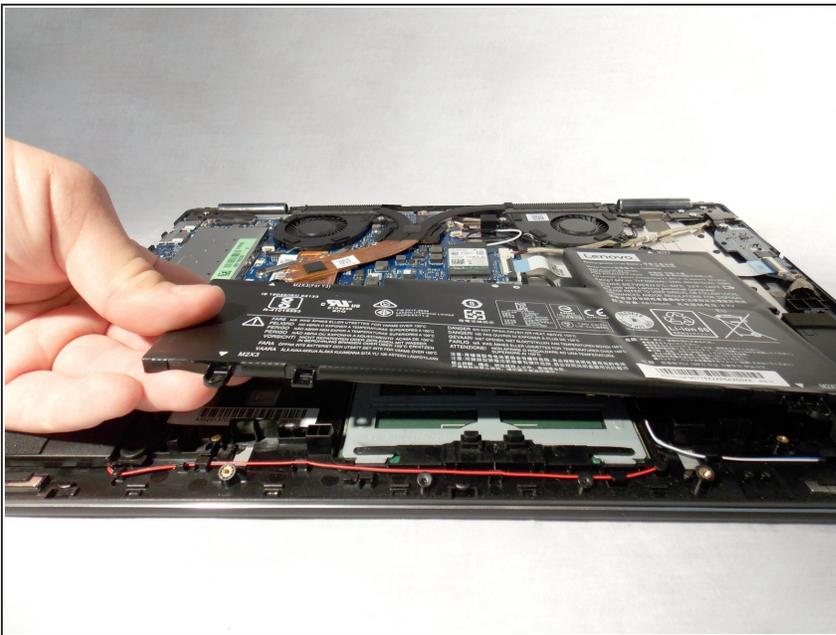

- Gently lift and remove the battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).