




Dell Inspiron 13-5368 Battery Replacement

A simple guide on how to remove and replace your Dell Inspiron 13-5368 Battery.

Written By: Matt Sugrim

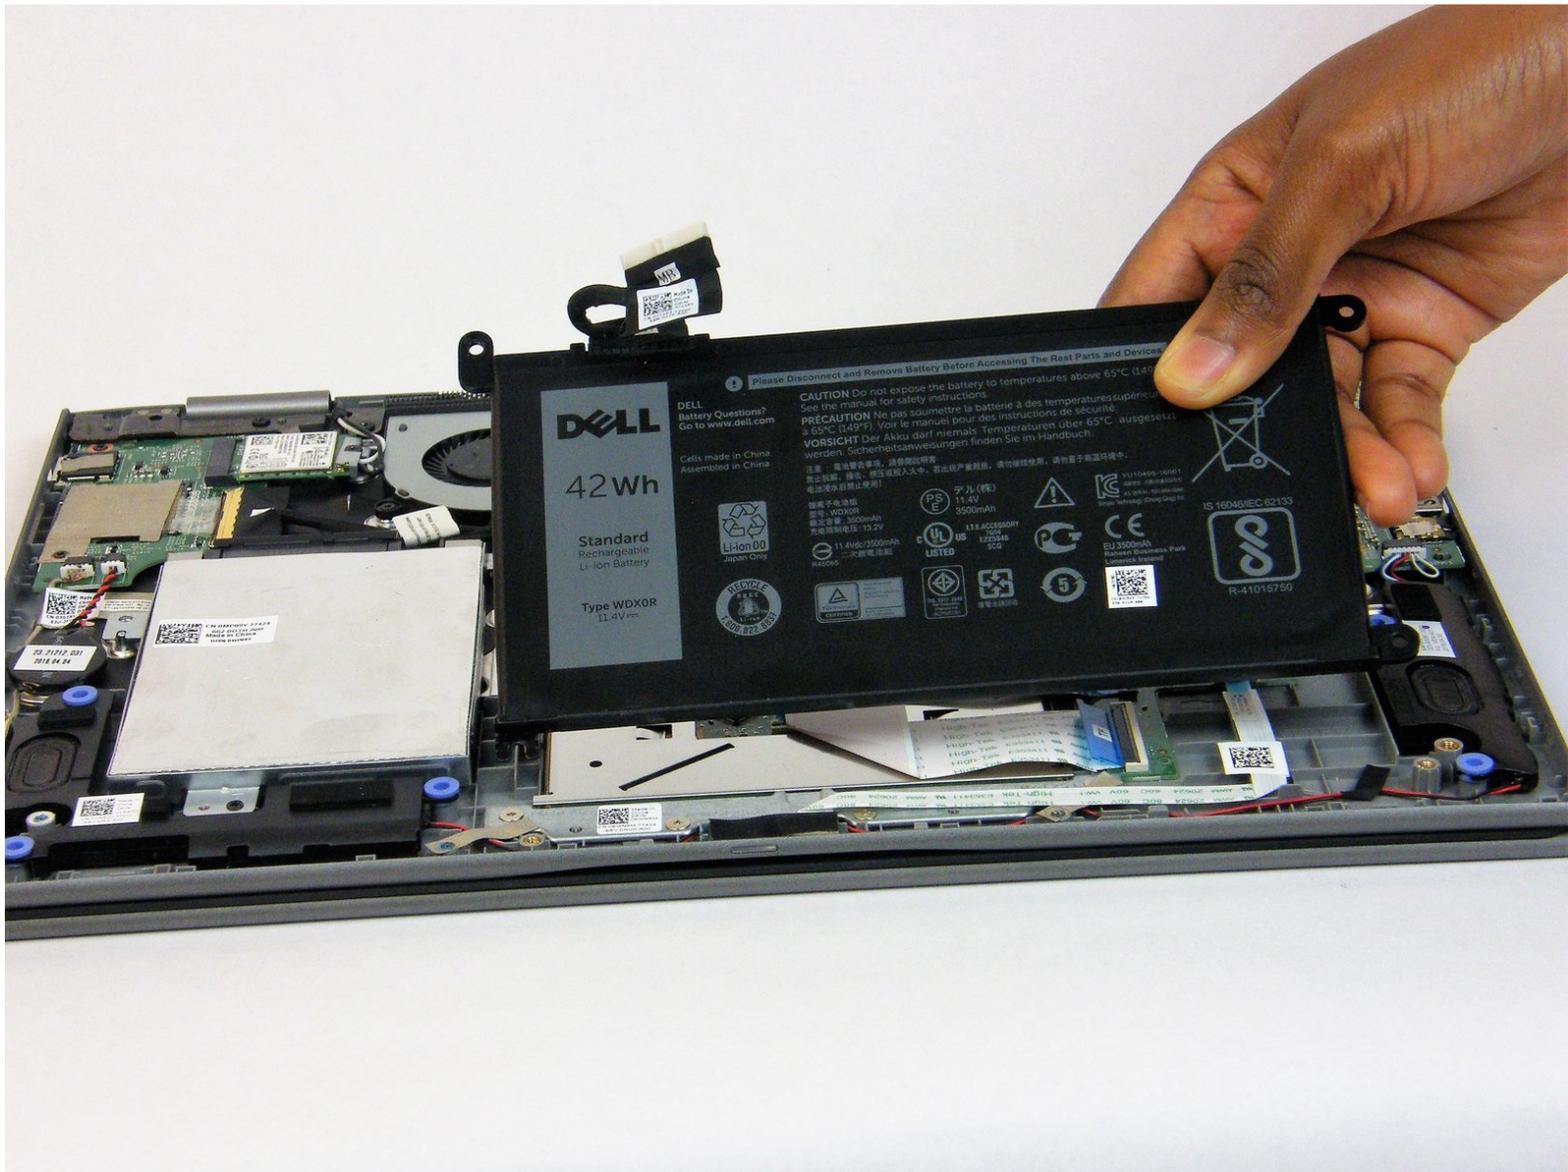

INTRODUCTION

This is a simple step-by-step guide on how to remove and replace a battery for a Dell Inspiron 13-5368. You will need a Philips Head J-0 screwdriver and a pry tool in order to perform this task. It is very easy to do and will only take about 5 minutes.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [Dell WDX0R Replacement Battery](#) (1)

Step 1 — Battery

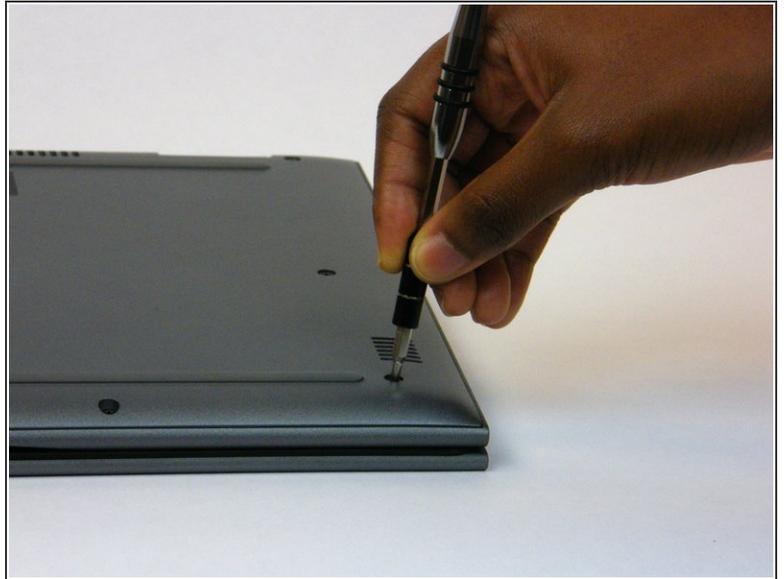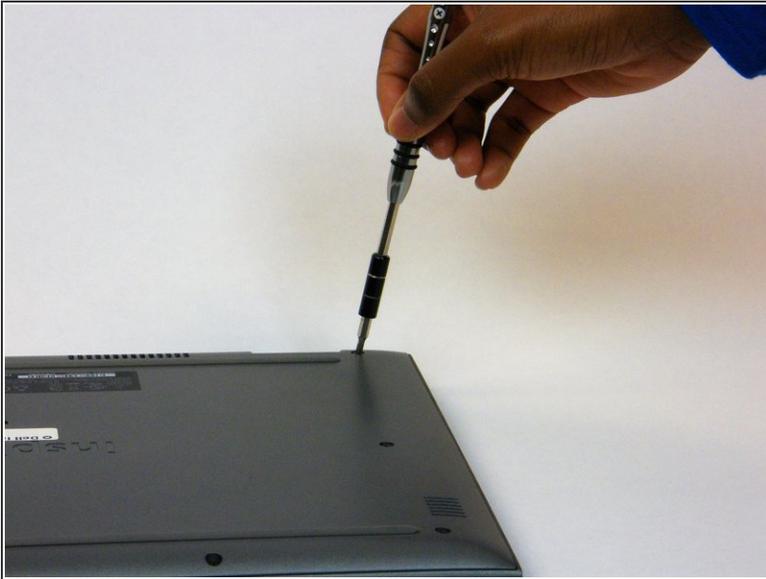


- Remove the nine 6mm Phillips #0 screws that secure the back cover of the laptop.

Step 2

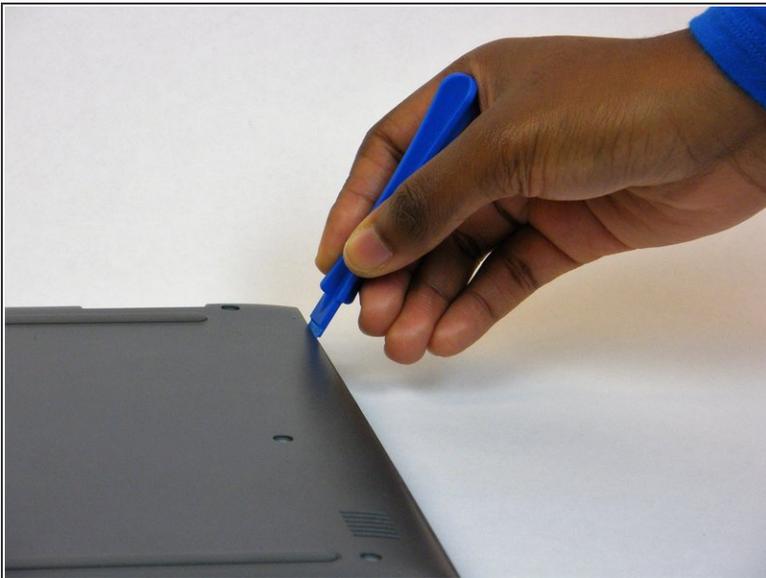


- Use a spudger to pry up and remove the back cover.

Step 3

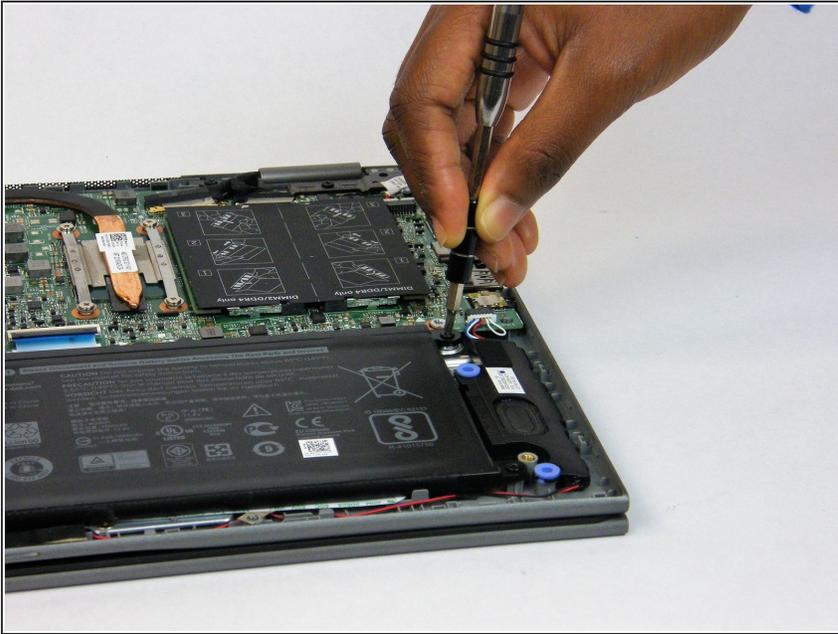


- Remove the four 3mm Phillips #0 screws at the corners of the battery that secure it to the laptop.

Step 4

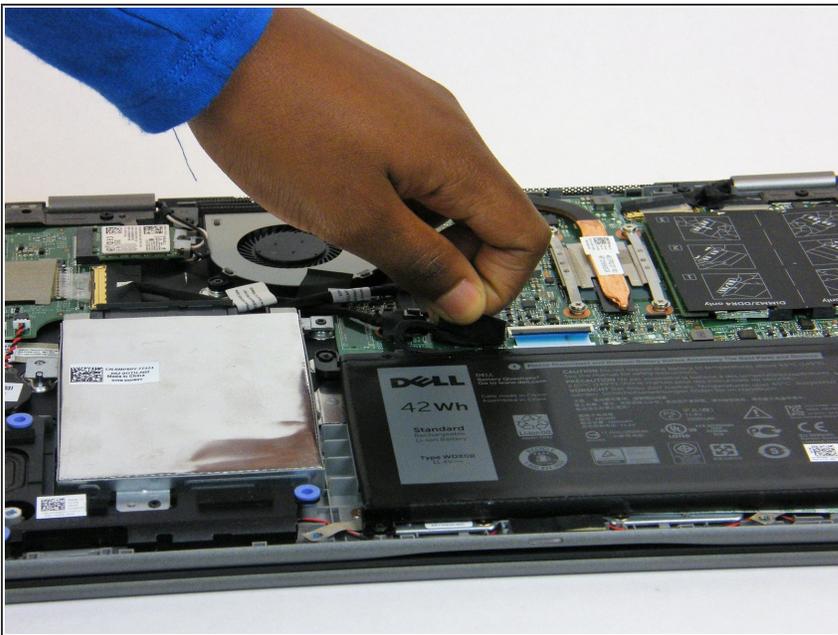

- Pull the battery cable's black tab towards the battery to disconnect it from the motherboard.
- ⚠ Pull the tab parallel to the motherboard, not straight up.

Step 5

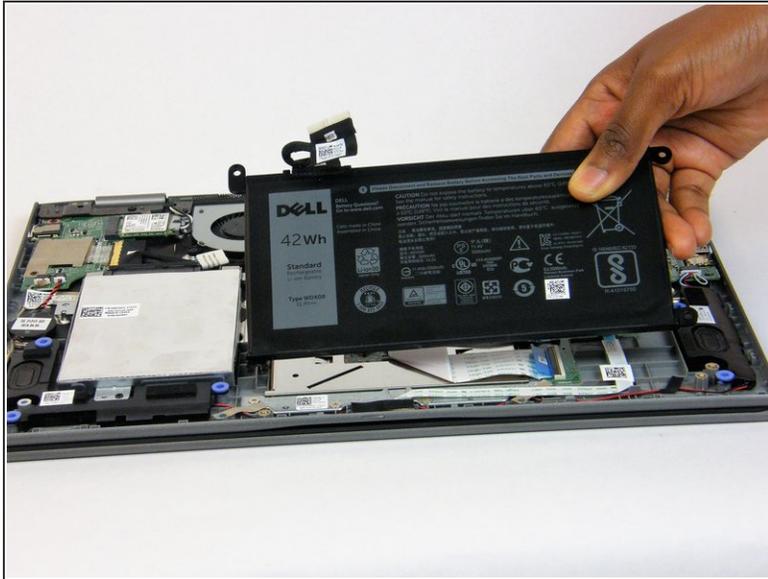

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.