



Trio AXS 3G Battery Replacement

If your tablet's battery no longer holds a...

Written By: Michaela Causey



INTRODUCTION

If your tablet's battery no longer holds a charge, this guided will show you how to replace it with a new one.

TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #000 Screwdriver](#) (1)

[Soldering Iron 60w Hakko 503F](#) (1)



[Plastic Cards](#) (1)

Step 1 — Back Case



- ① On the back of the device there is a white SD card case that shelters the screws that attach the back panel to the tablet.
- Use your thumbs to slide up and off the small SD card case.

Step 2

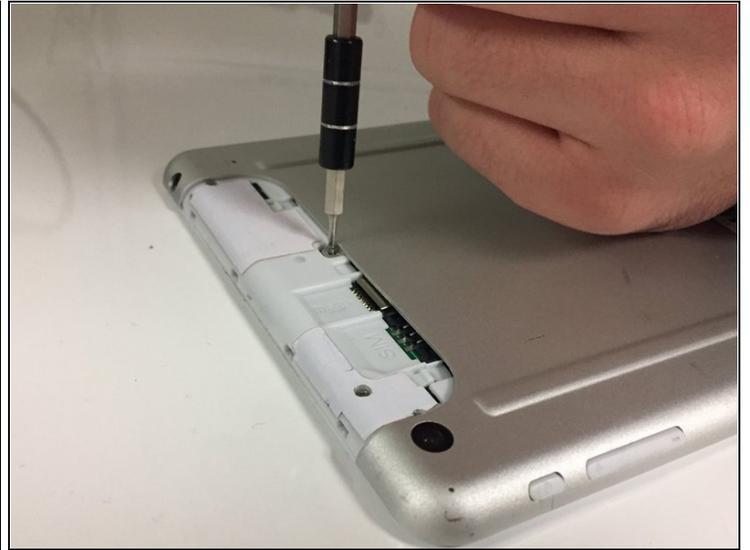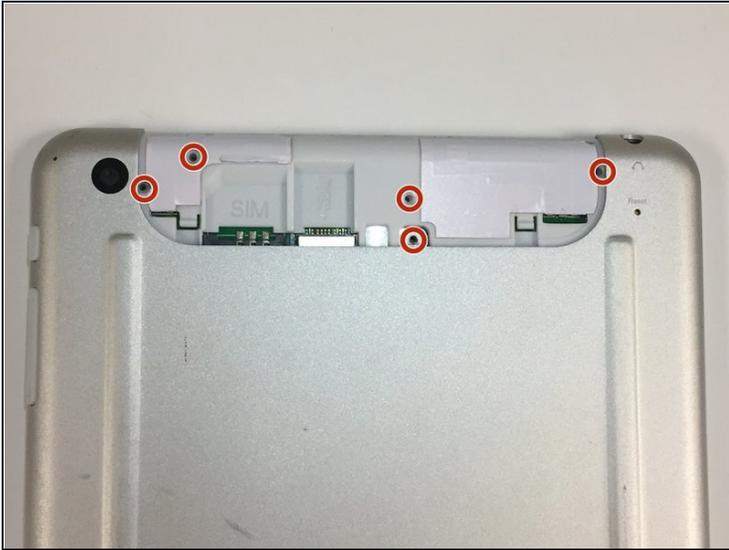

- Using the Phillips Head #000, unscrew the 5 4mm and 3mm screws at the top.

Step 3




- Insert a plastic opening tool between the back panel and the front of the tablet, and gently pry it away from the tablet.
 - ⚠ Do not pry too hard as the screen is fragile and might crack.
 - ⓘ It is best to start at the bottom of the tablet when prying the back panel off.
 - ⓘ The volume piece will also dislodge when the back panel is removed.

Step 4 — Battery



- ① The battery is the large, silver square inside the tablet. It is connected to the motherboard by two wires.

Step 5

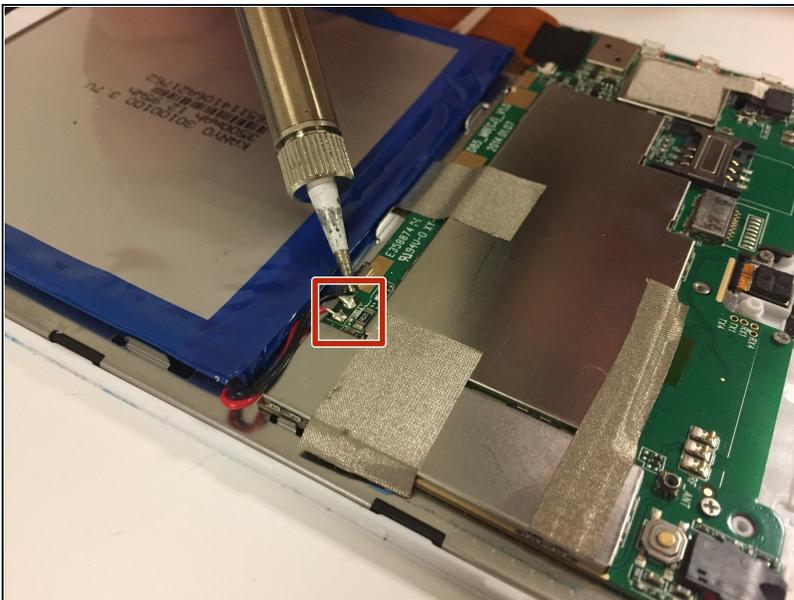

- Use the soldering iron to remove the two metal ends that connect the battery to the motherboard.

Step 6



- Use the [plastic card](#) to pry the battery away from the device.
- ⓘ The battery is attached to the tablet by glue.

Step 7



- Peel off the battery from the device to completely remove it.

To reassemble your device, follow these instructions in reverse order.