



HP Pavilion 13-P110NR Keyboard Replacement

This guide will walk you through the steps on how to replace your keyboard.

Written By: Matthew "Cole" Corson



INTRODUCTION

Replace your defective keyboard and restore the ease of being able to use your device. This guide provides a detail explanation of how to replace your device's keyboard. Before you begin, make sure you have adequately troubleshooted your broken keyboard using this [Troubleshooting Page](#). In addition, make sure you have read through all the steps required and understand what you will be doing. Use caution when replacing the the keyboard, some of the parts have sharp edges and could be harmful. If you don't understand or feel comfortable completing any of the steps, find someone with more experience to assist you with this guide.



TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [HP Pavilion 13-P110NR Keyboard](#) (1)

Step 1 — Keyboard




- Remove the two rubber feet closest to the black hinge.

Step 2




- Remove two 6.0 mm Philips #00 screws from the back casing.
- Remove four 5.0 mm Philips #00 screws from the back casing.

Step 3

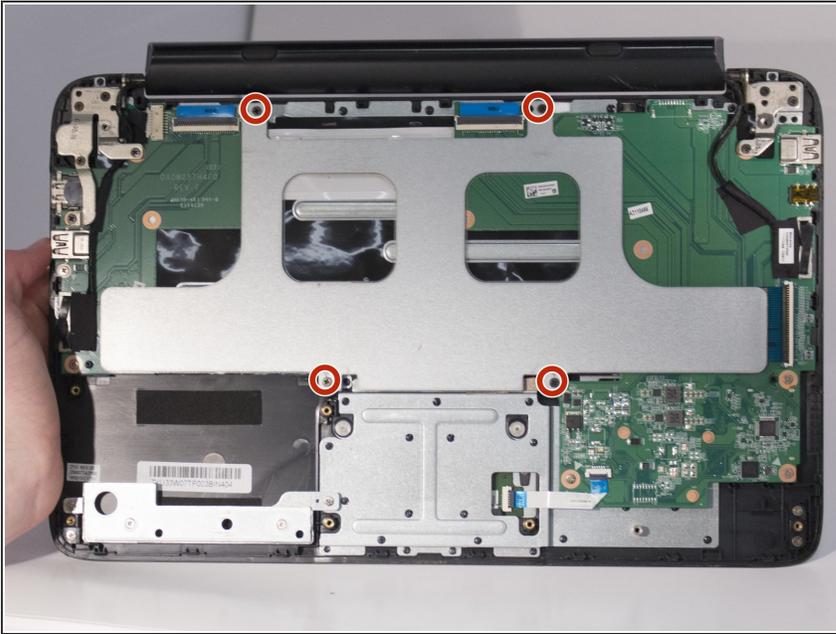



- On the silver metal brace, remove the four 6.0 mm Phillips #00 screws.

Step 4

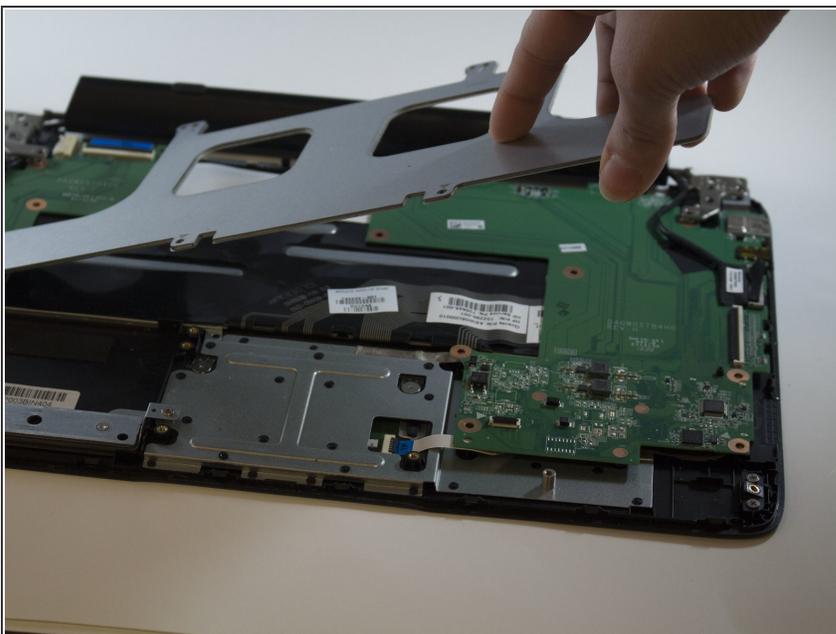



- Lift the metal brace and remove it from the device.

Step 5

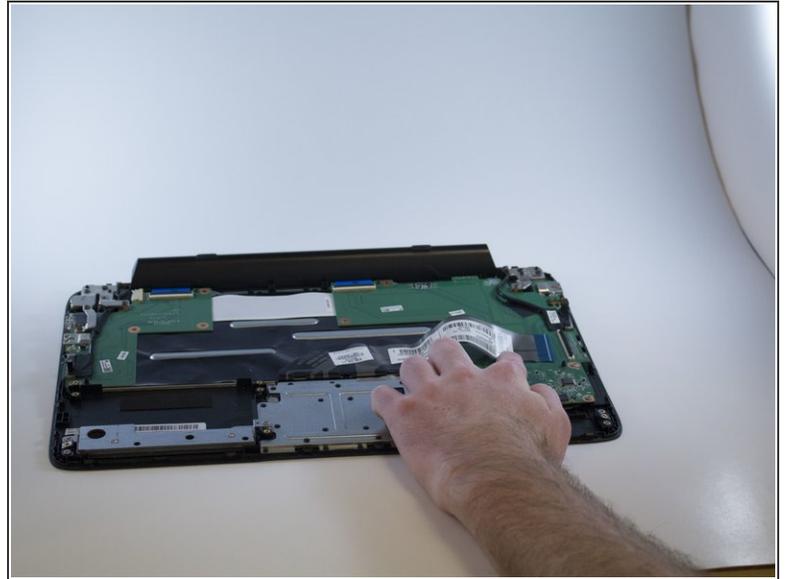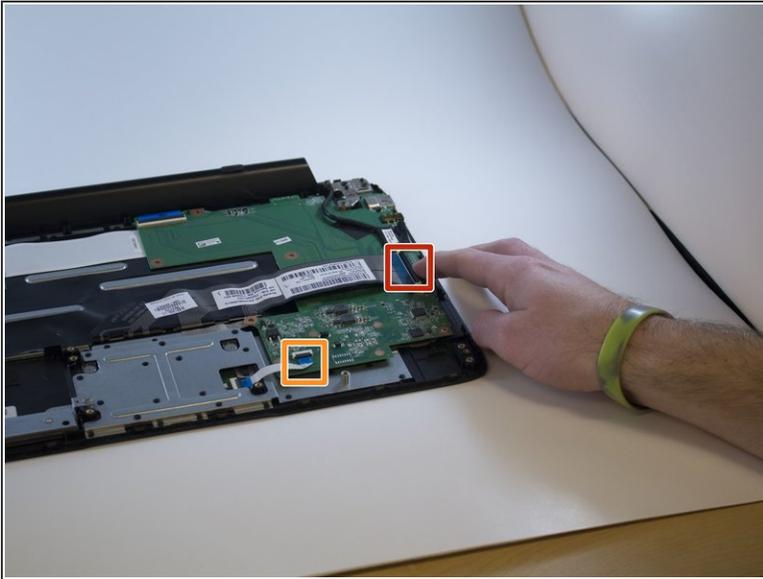

- Unflip the lock on the wire tape and lift that end of the tape away.
- Do the same for the small white piece of tape on the circuit board.

Step 6

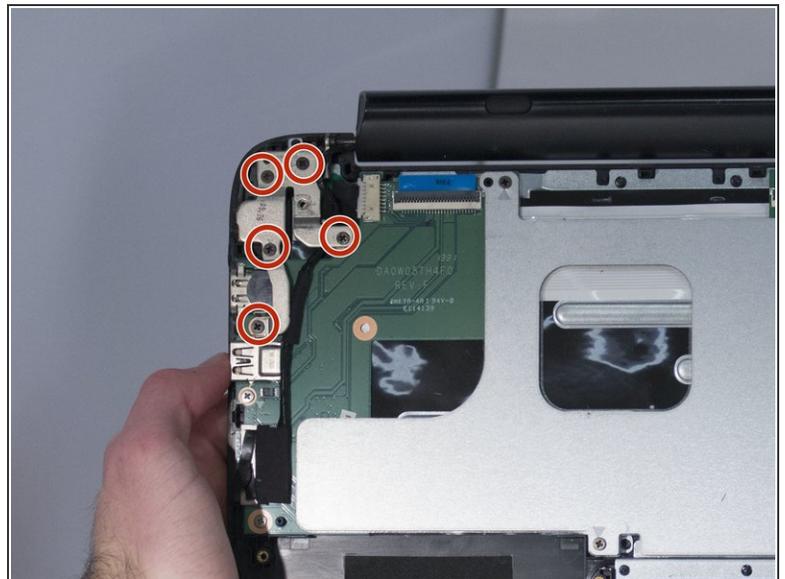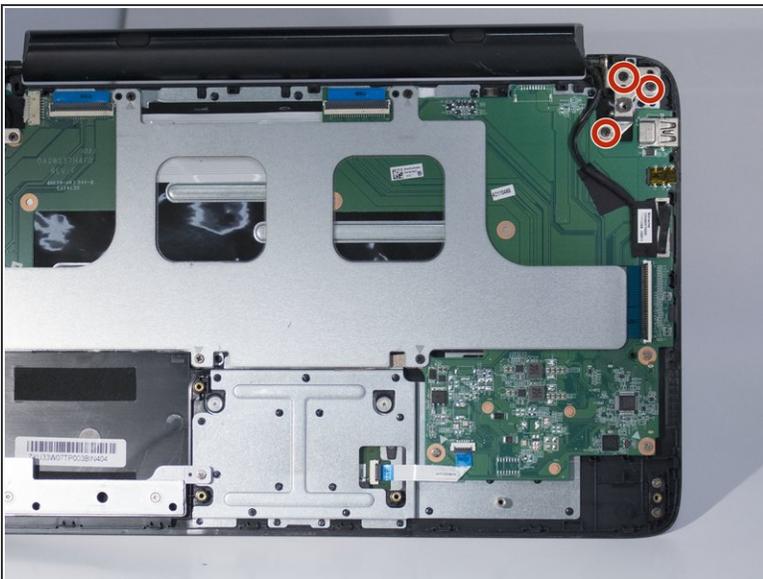



- Remove the eight 6.0 mm Philips #00 screws from the two silver holds.

Step 7



- Remove five 5.0 mm Philips #00 screws from the green circuit boards.

Step 8

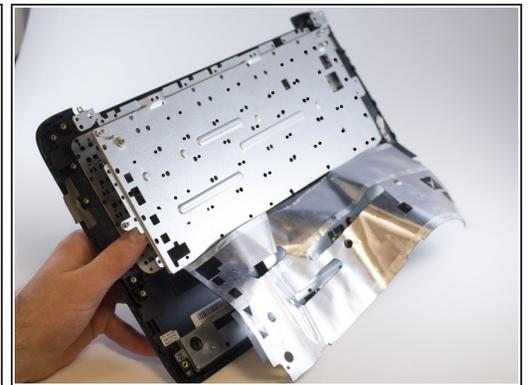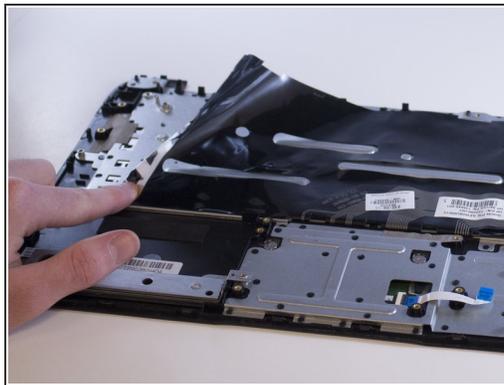


- Lift the white pieces up.
- Once lifted, peel the black film away to reveal a metal plate with many black glue pieces.

Step 9



- Using the spudger, pry each glue piece off of the metal brace. All glue pieces must be removed.
- ⚠ Use caution, the pieces may fly when they are forced out.

Step 10

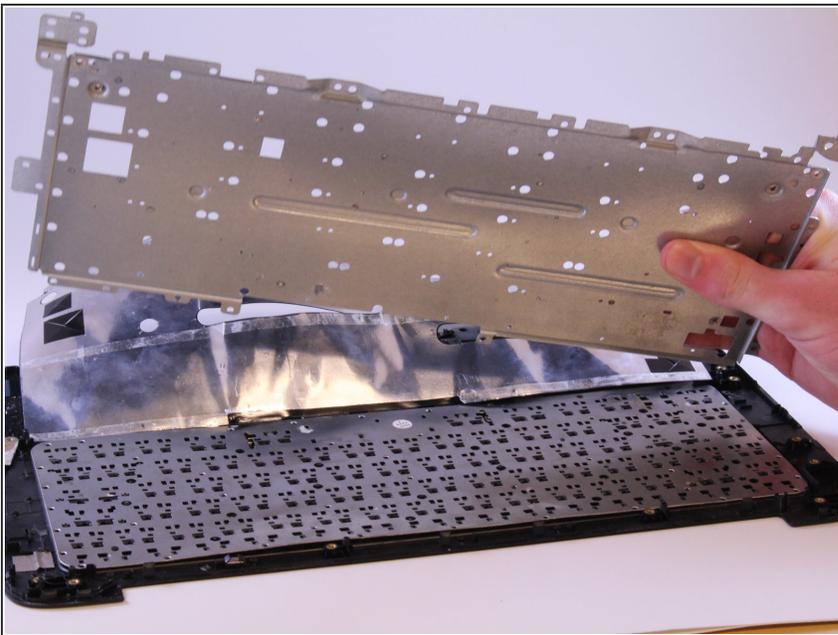

- Remove the metal plate to reveal the keyboard.

Step 11



- Remove the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.