




American Sanders EZSand Orbital Sander 07163A 2017 Dust Fan Replacement

Remove or replace the dust fan in an American Sanders EZSand Orbital Sander 07163A 2017.

Written By: Adam O'Camb

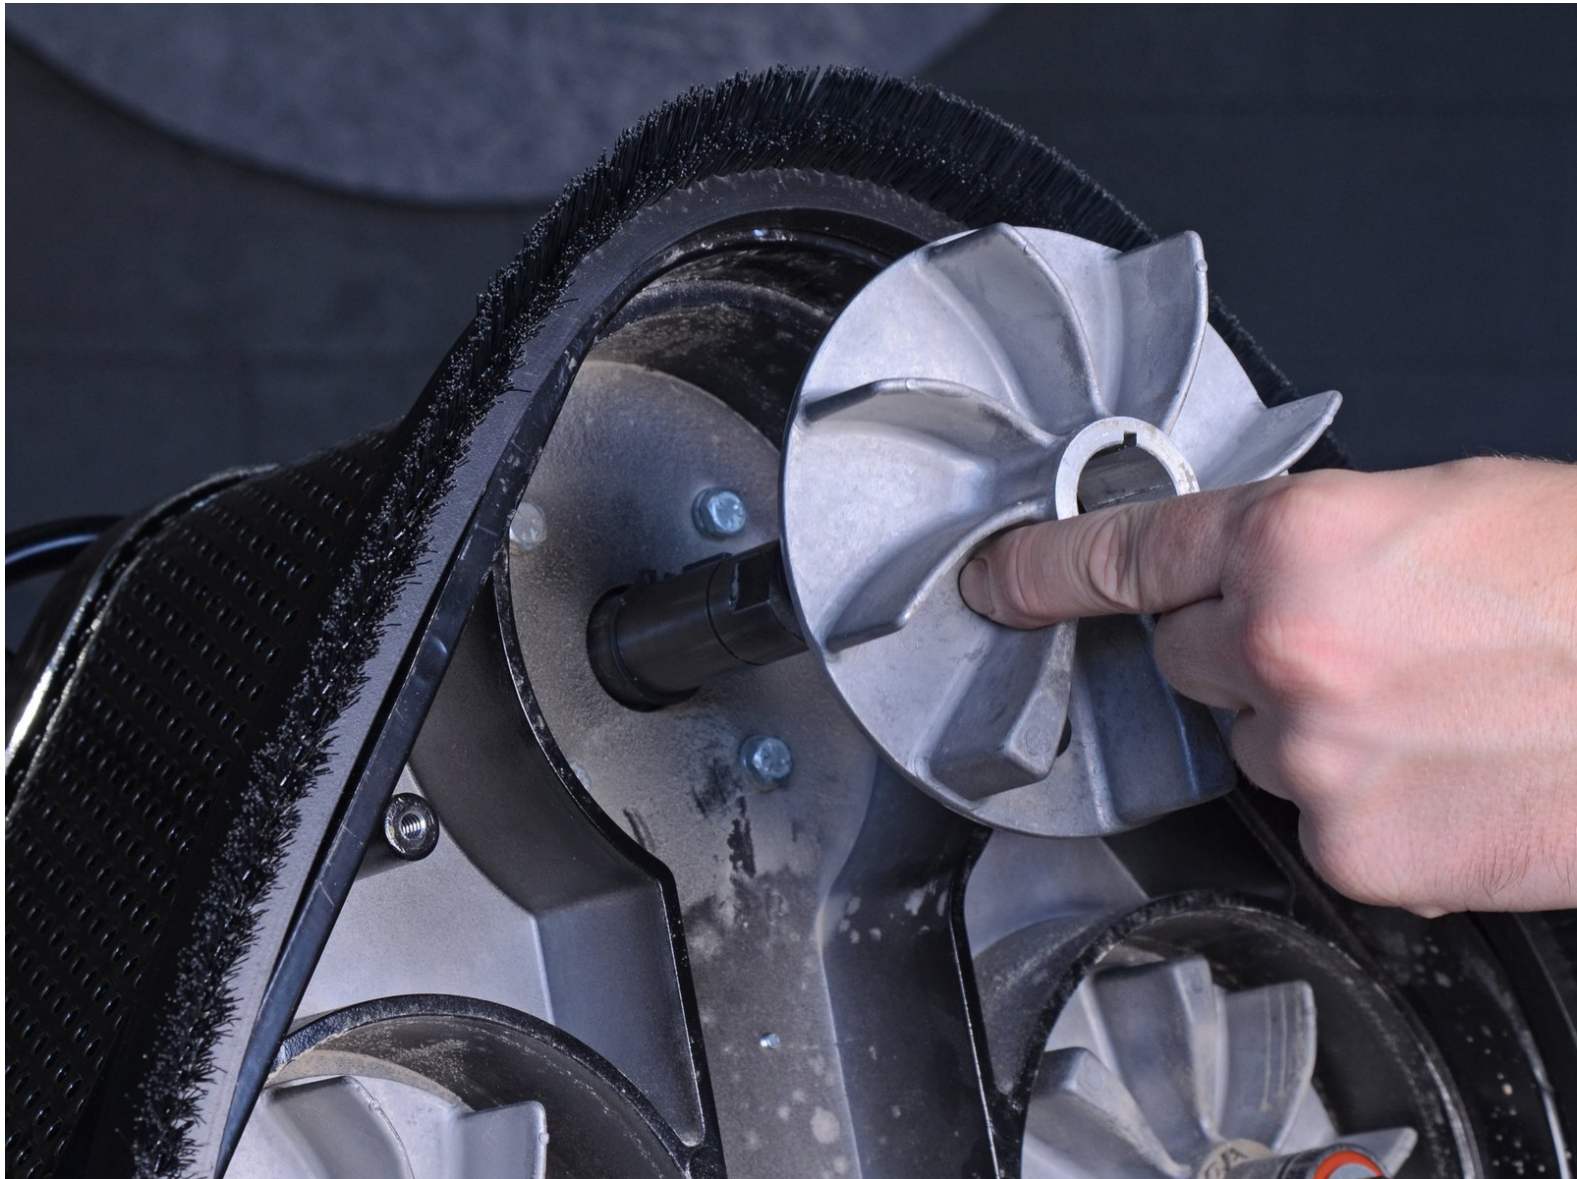

INTRODUCTION

Use this guide to remove or replace the dust fan in an American Sanders EZSand Orbital Sander 07163A 2017.



TOOLS:

- [Flathead Screwdriver](#) (1)
- [11 mm Socket](#) (1)
- [Socket Wrench](#) (1)
- [22 mm Thin Wrench](#) (1)
- [Pry Bar](#) (1)
- [3mm Hex Key](#) (1)
- [4 mm Hex Key](#) (1)
- [Snap Ring Pliers](#) (1)



PARTS:

- [Clarke DUST FAN 29893A](#) (1)

Step 1 — Remove the sandpaper disc



- ⚠ Before you begin, be sure that the sander is unplugged and powered off.
- Carefully tilt the sander back and lay it down on its side, exposing the three sanding pads on the bottom.

Step 2




- Peel the hook-and-loop sandpaper disc off of the driver assembly.

Step 3 — Remove the driver pad



- Use a 3 mm hex key or driver bit to remove the six 11.9 mm-long screws securing the driver pad.
- Remove the driver pad from the sanding disc.

Step 4 — Remove the sanding disc

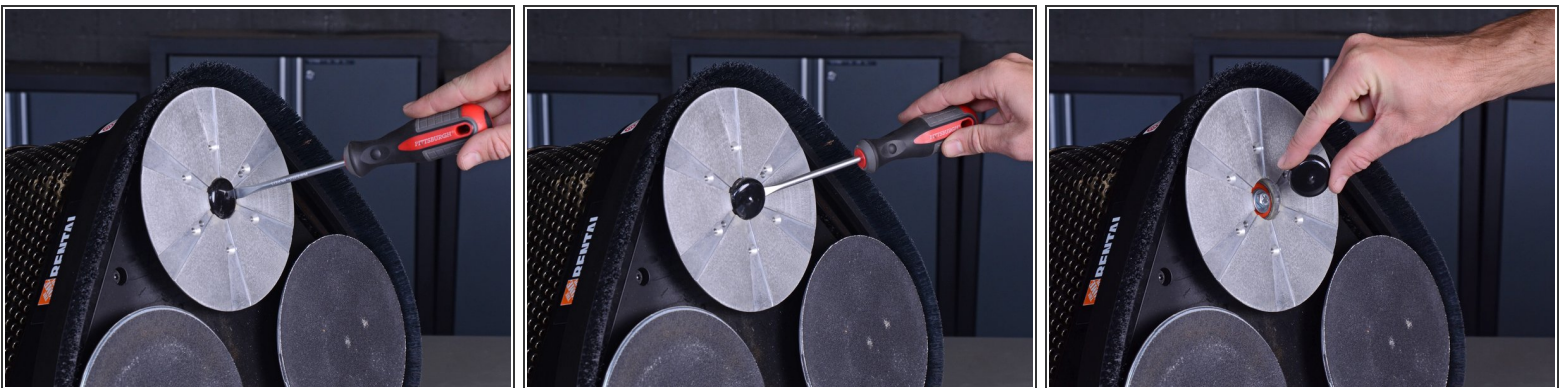


- Use a flathead screwdriver to pry off and remove the rubber plug in the center of the sanding disc.

Step 5



- Slide a thin 22 mm wrench underneath the sanding disc and clasp it onto the flat part of the motor driveshaft to keep the driveshaft from turning.

Step 6

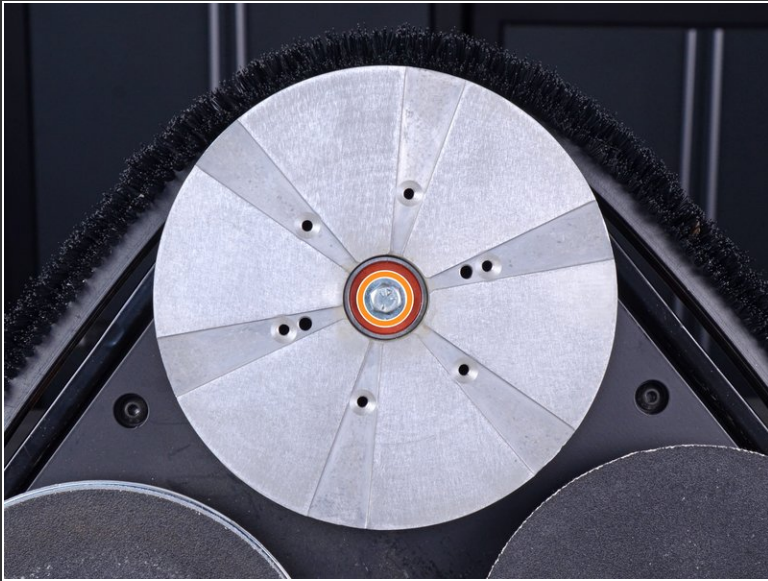

- Use an 11 mm socket and socket wrench to remove the 16.5 mm-long bolt securing the sanding disc to the motor driveshaft.
- Apply counter torque to the driveshaft wrench as you loosen the bolt to keep the sanding disc from spinning.

Step 7



- Take two pry bars and insert them underneath the sanding disc as close to the driveshaft as possible.
- Apply pressure to the pry bars in opposite directions to carefully pry the sanding disc off of the driveshaft.
- Remove the sanding disc from the floor sander.

Step 8 — Remove the bottom weight and cover



- Repeat the previous seven steps to remove the other two sanding discs before continuing.
- With all three sanding discs removed, use a 4 mm hex key to remove four 25.4 mm-long screws securing the bottom cover and bottom weight.

Step 9



- Lift the bottom weight away from the sander.

Step 10



- Pull the top edge of the bottom cover away from the sander until you have enough space to slide the cover out.
- Slide the cover across the bottom of the sander, away from the wheels, and remove it.

Step 11 — Remove the dust fan



- Remove the washer from the motor shaft.

Step 12




- Pull the drive pad bearing straight off of the motor shaft.
- You may not be able to remove the bearing with your hands. If this is the case, use a bearing puller to remove the bearing.

Step 13



- Using snap ring pliers, pry the snap ring open and slide it off of the motor shaft.
- Remove the snap ring.

Step 14

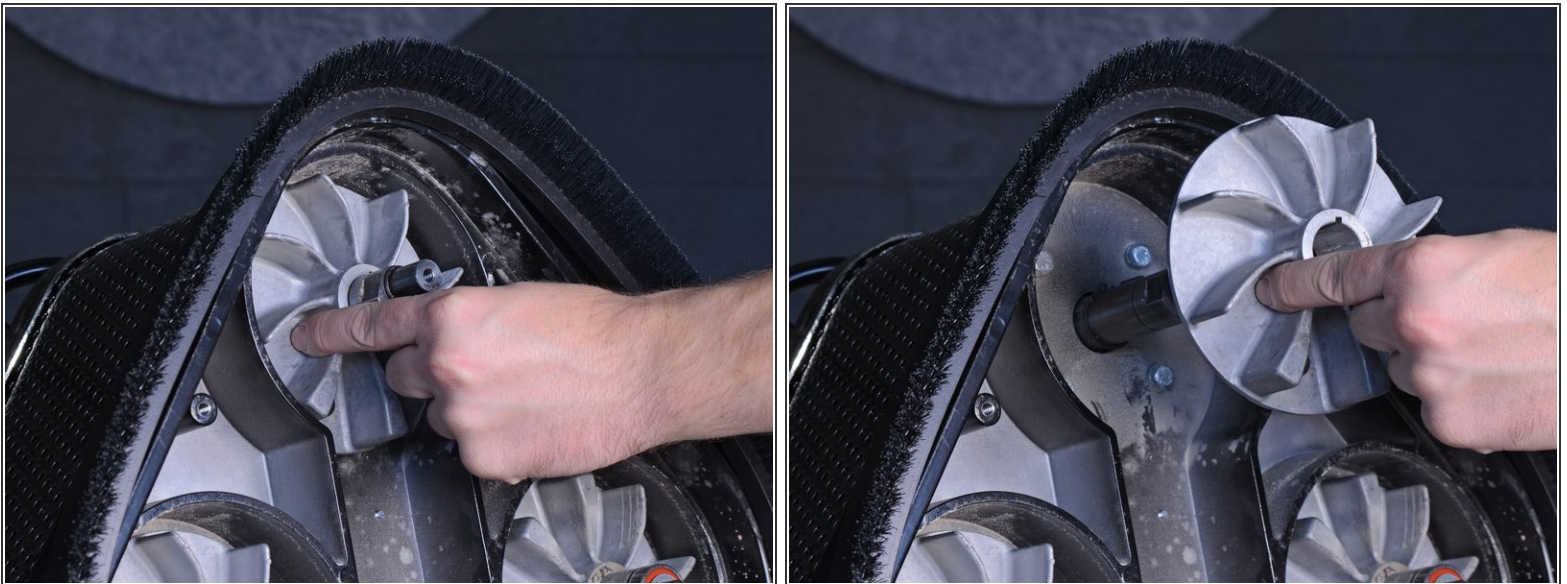

- Slide the dust fan straight off of the motor shaft.

To reassemble your device, follow these instructions in reverse order.