




Microsoft Kinect Motherboard Replacement

We will be removing the motherboard from the Kinect.

Written By: Nick Carlucci

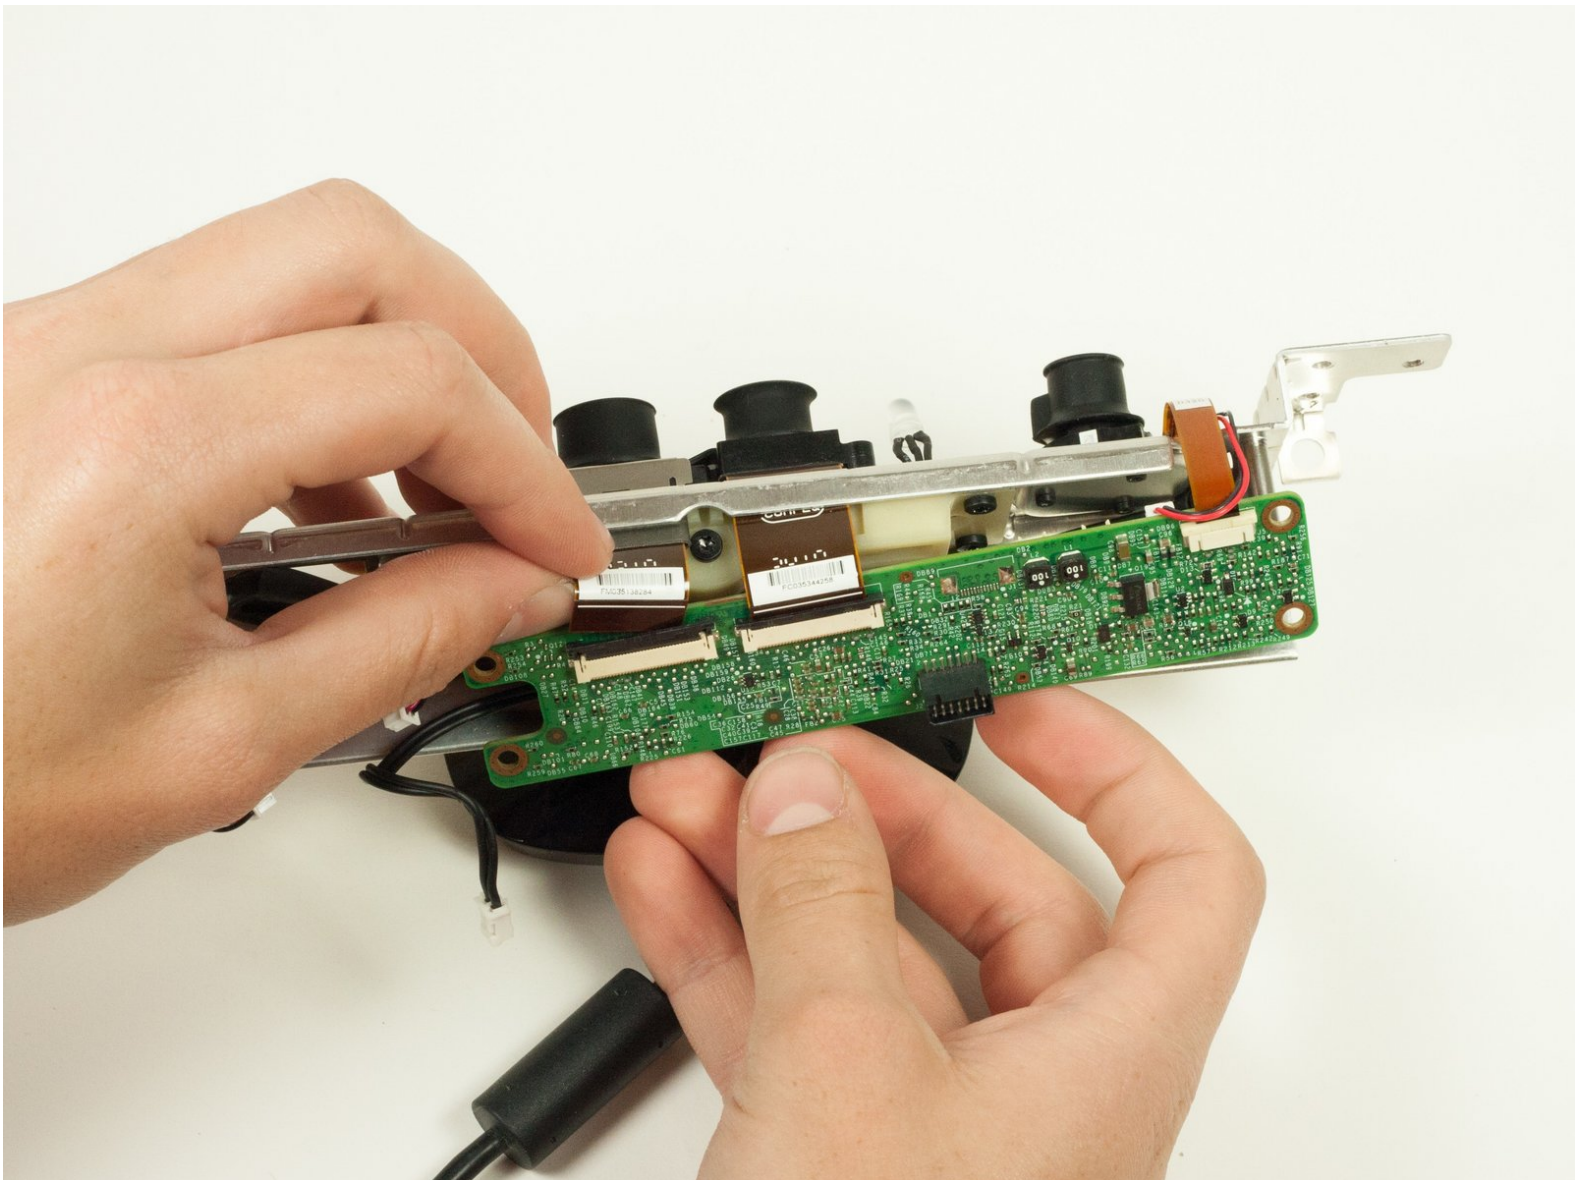

INTRODUCTION

This shows how the remove the motherboard from the Kinect. All of the components of the Kinect run through the motherboard. If the Kinect wont turn on or a component isn't working it may be an issue with the motherboard not the component itself.



TOOLS:

- [Metal Spudger](#) (1)
 - [T10 Torx Screwdriver](#) (1)
 - [5mm Nut Driver](#) (1)
-

Step 1 — Case




- Remove the two plastic strips off the bottom of the main Kinect housing using the metal spudger's sharper side.
 - Peel off the two Xbox 360 stickers from the bottom of the case to reveal two hidden screws.
- i** Some force may be required to remove the adhesive. Applying heat to the adhesive may make it easier to remove.
- !** Do not overheat as it may cause damage to the internal components.

Step 2



- Unscrew the six 12mm T10 Torx screws.


Step 3

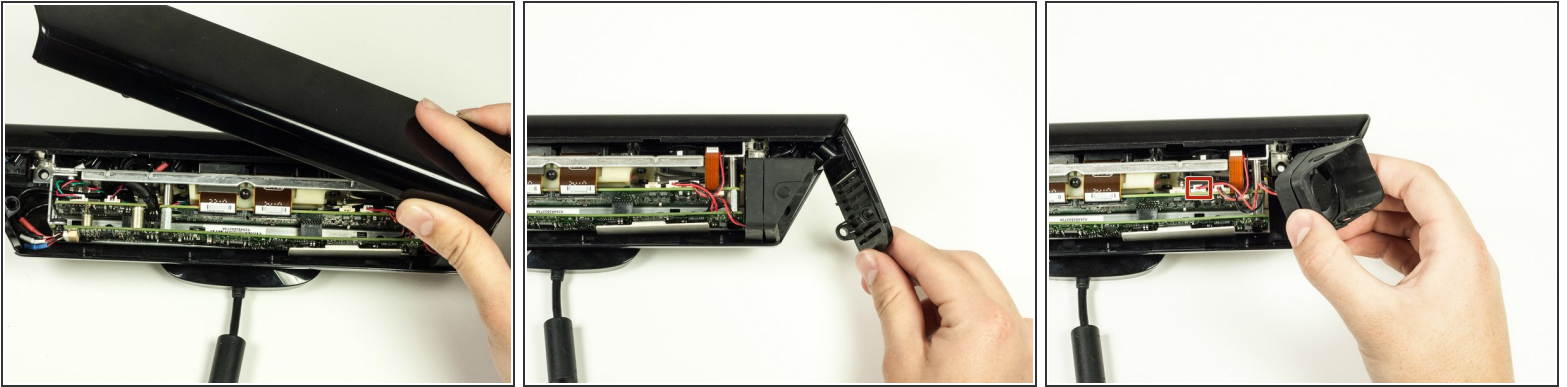

- Remove the top portion of the case from the rest of the body.
- Detach the side portions of the case from the body.
- Remove the fan piece from the side of the body. Unplug it from the logic board to fully remove it.



⚠ When unplugging the fan, be sure to pull from the white connector at the end of the wire to avoid breaking it.

Step 4

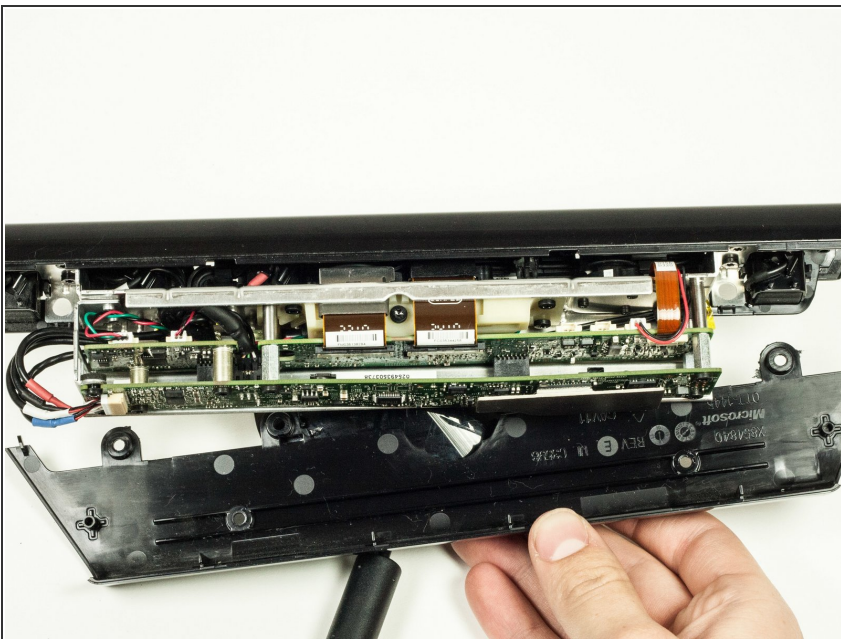



- Remove the bottom portion of the case by sliding it out from under the body.
- ⓘ The bottom of the case may be difficult to remove if there is any residual adhesive. If the residual adhesive prevents you from removing the case, apply gentle heat and wiggle the case out.

Step 5

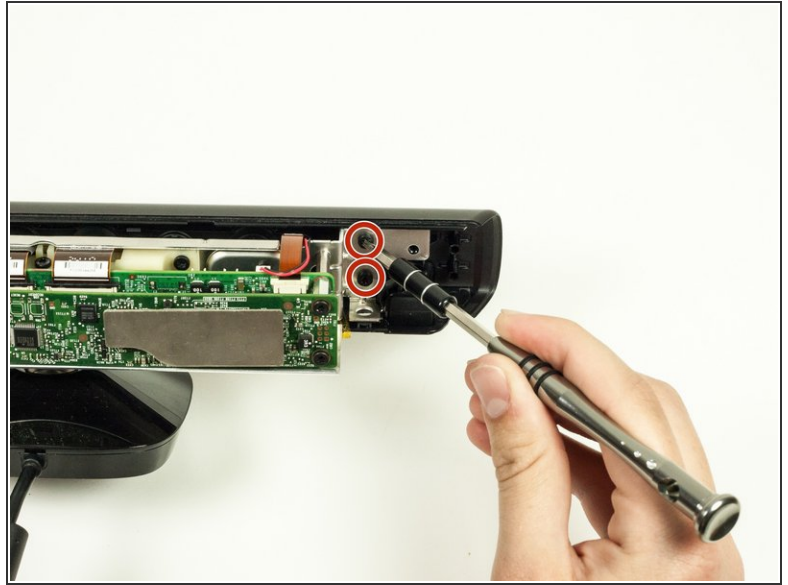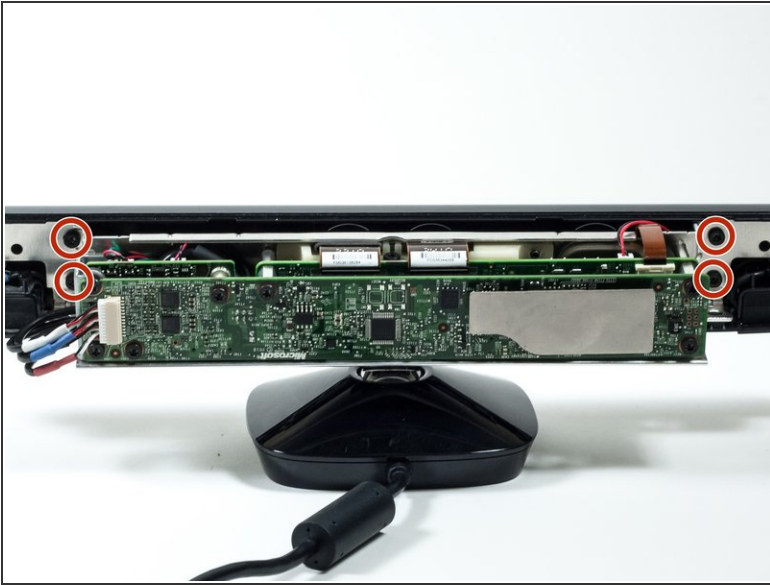


- Remove the four 7mm T10 Torx screws (two on each side of the metal body).

Step 6

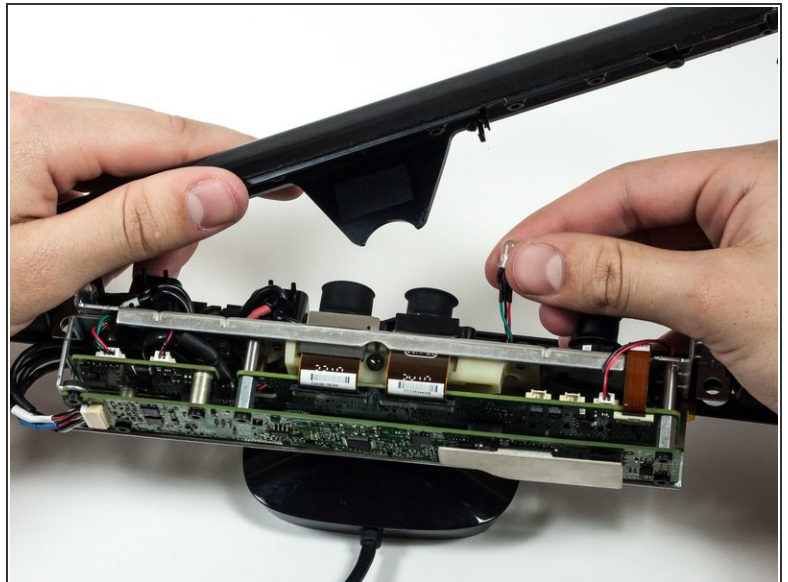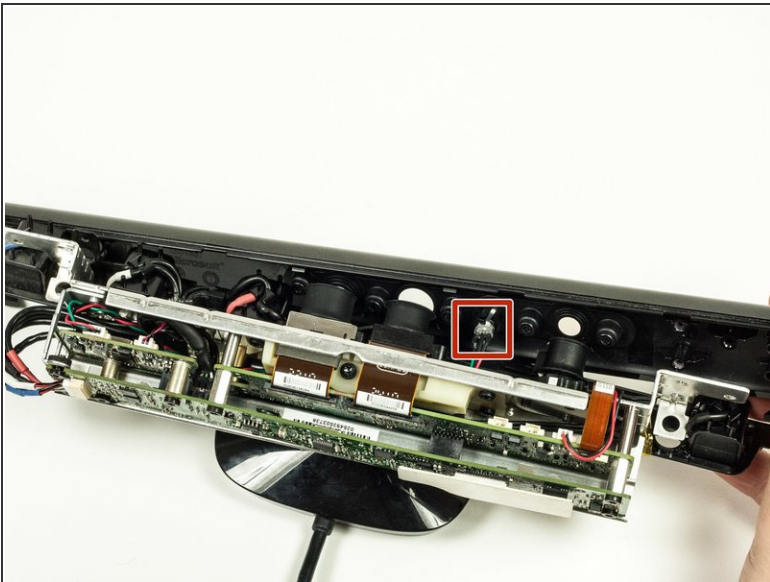


- Remove the front portion of the case containing the lens coverings for the cameras.
- The LED component is connected to the front portion of the case. To disconnect it, just pull it out of its plastic connector.

Step 7 — Microphone Panel

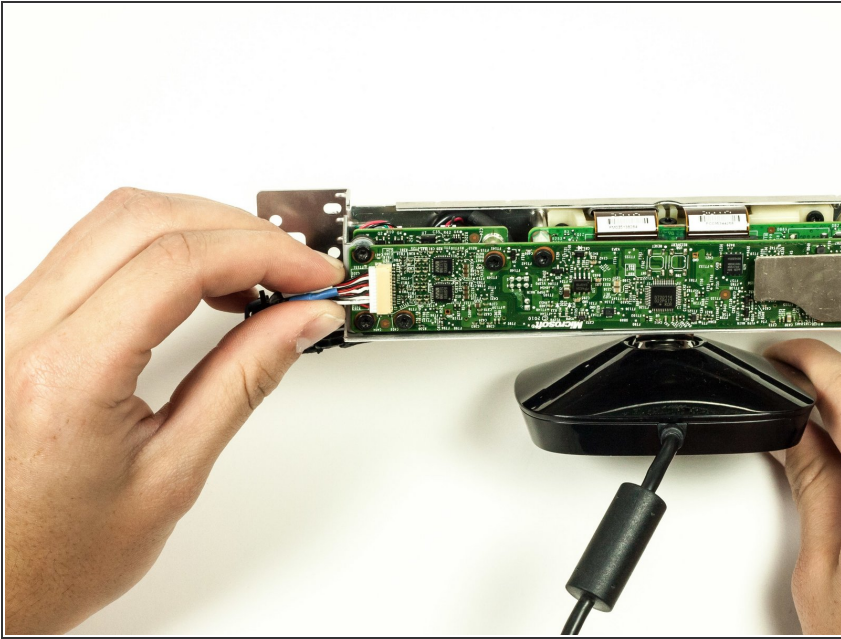


- Unplug the microphone from motherboard.

Step 8

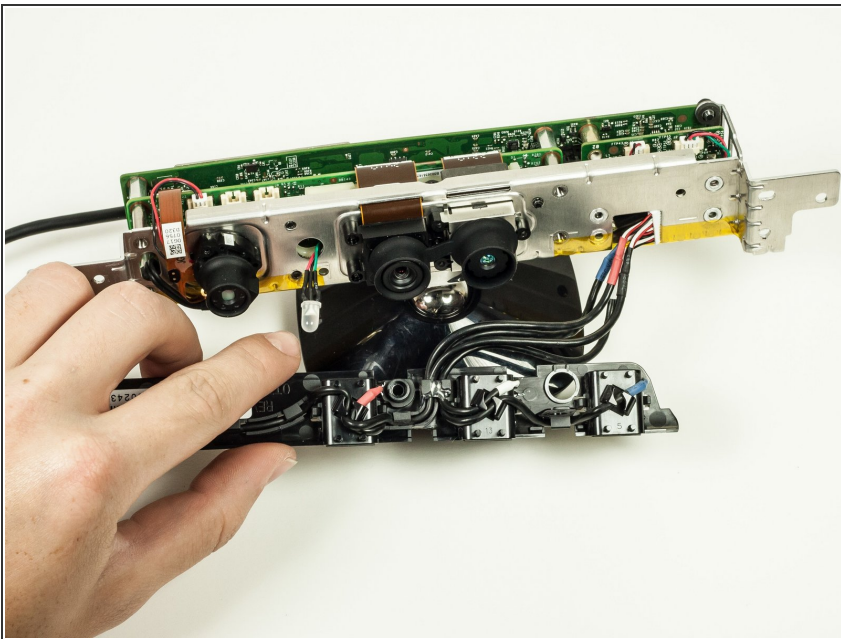


- Pull off the microphone panel and snake the cable that was connected to the motherboard through the hole on the camera panel.
- ⚠ Pull the cable out carefully to avoid damage.

Step 9 — Motherboard

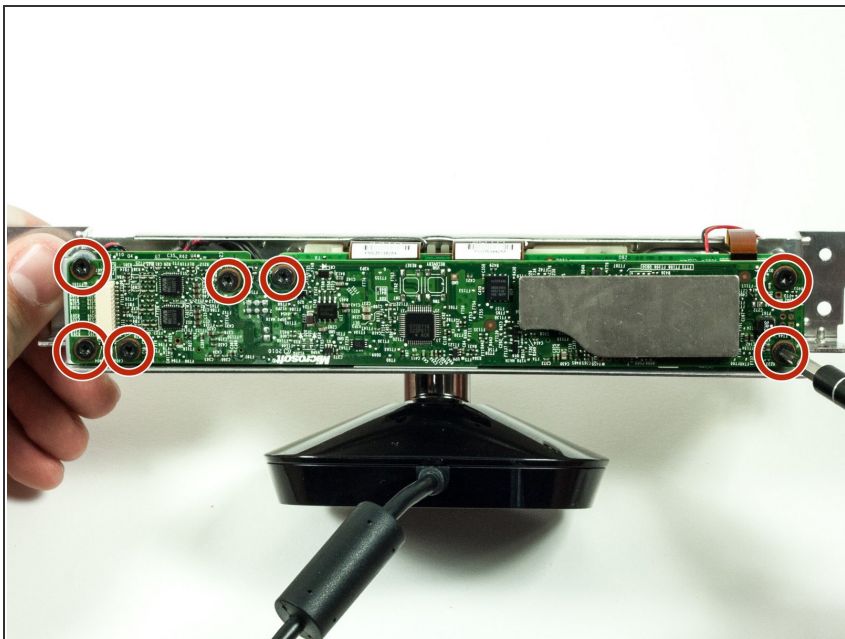


- Unscrew the seven 6.5mm T10 Torx screws.

Step 10

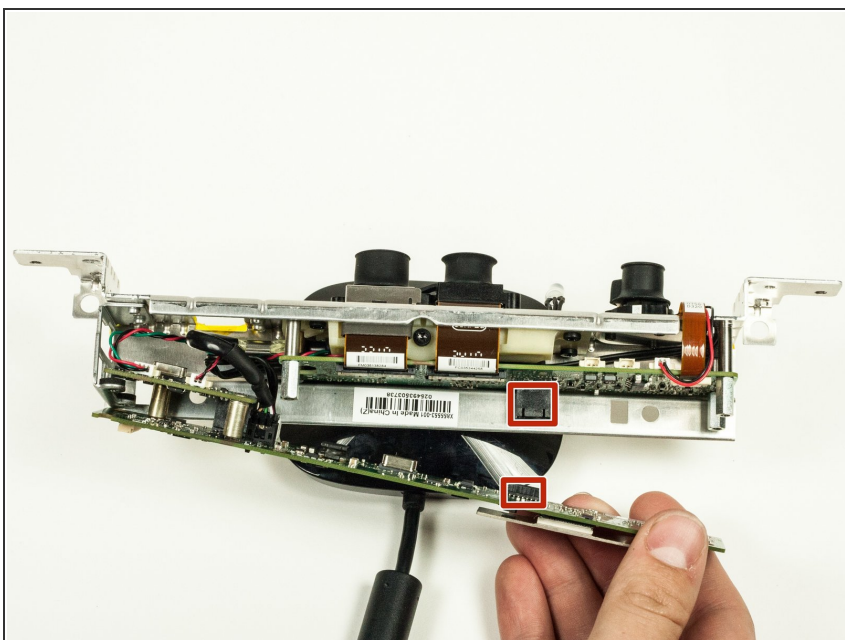


- Disconnect the bridge connecting the first and second layer of the motherboard.
- Pull the first layer of the motherboard off.

Step 11

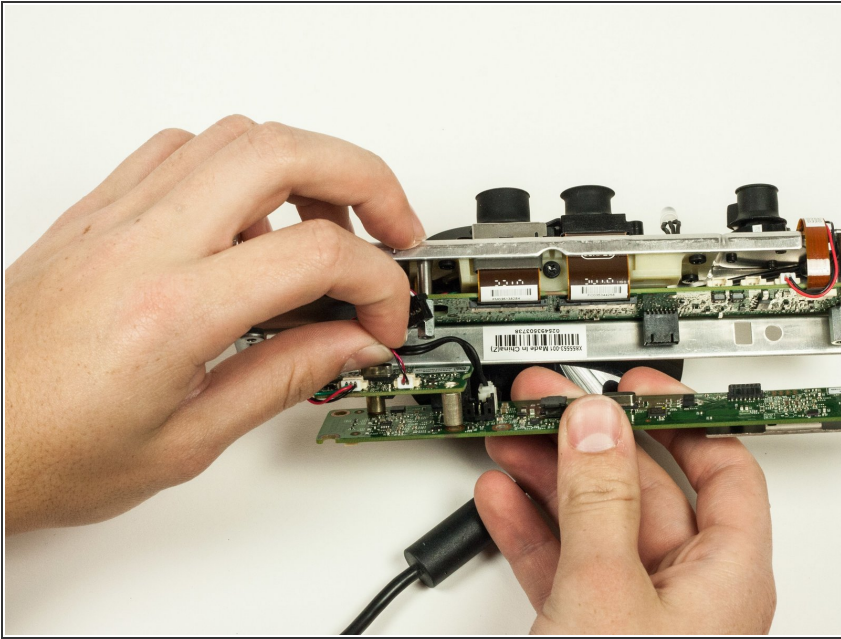



- Unplug the LED cable from the motherboard.

Step 12

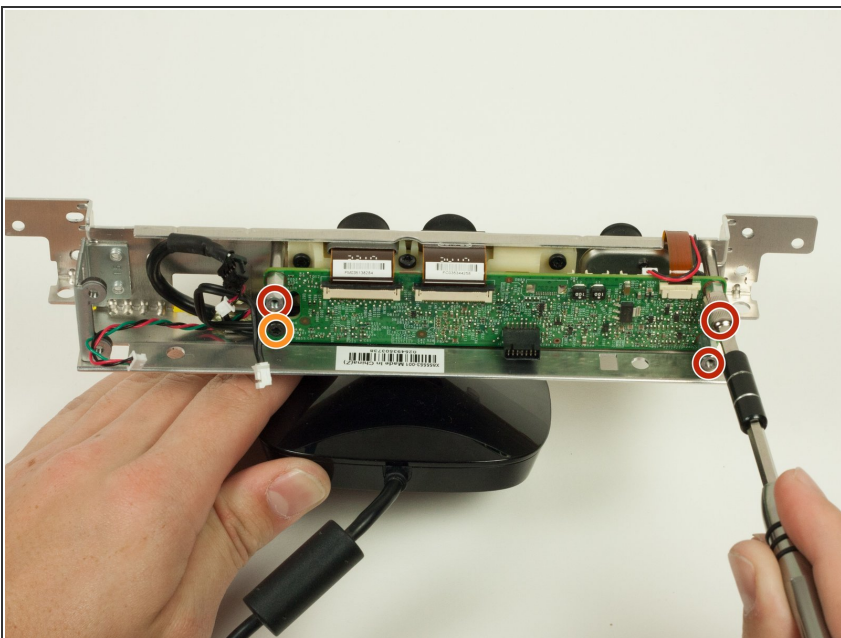

- Unscrew the three 16.5mm screws using the 5mm Nut Driver.
- Unscrew the one 6.5mm T10 Torx screw.

Step 13

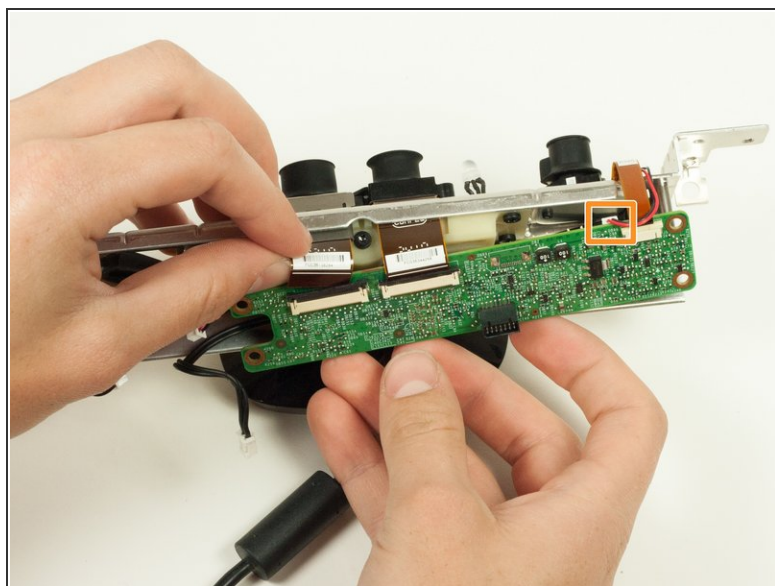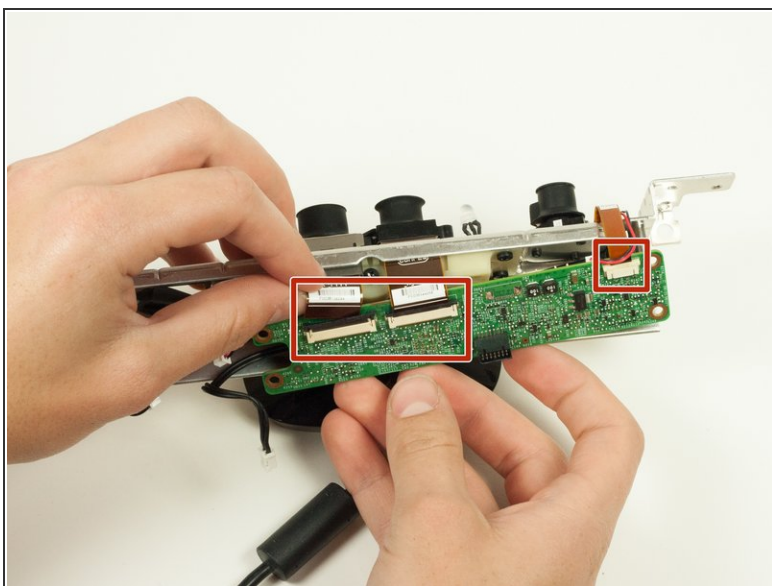

- Remove the three ribbon cables.
- Disconnect the left most camera from the motherboard.

To reassemble your device, follow these instructions in reverse order.