



Sony CCD-TR81 Lens Assembly Replacement

If the lens of the Sony CCD-TR81 video camera...

Written By: Andrew



INTRODUCTION

If the lens of the Sony CCD-TR81 video camera cracks or becomes cloudy, replacing it can be costly and confusing. This guide shows how you can easily access the lens assembly to make a quick replacement. You must remove the battery and the outer casing to get to the lens assembly for proper replacement or repair.

TOOLS:

[Tweezers](#) (1)
[Phillips #0 Screwdriver](#) (1)
[Phillips #00 Screwdriver](#) (1)
[Phillips #000 Screwdriver](#) (1)
[Phillips #1 Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)

Step 1 — Disassembling Sony CCD-TR81 Battery



- Lift viewfinder to access battery pack.

Step 2



- Press the battery release button.
- While pushing the battery button, slide the battery to the left.

Step 3



- Pull the battery pack out of the video camera.

Step 4 — Outer Case



- Open the cassette cover.
- Unscrew 14 screws located on the outer casing. Three are located on the top face 2x6.8mm and 1x4.54mm, three on the left face 1x4.54mm, 1x5.3mm and seven on the bottom face 5x4.54mm and 2x6.77mm.

Step 5




- Remove five screws from the right side, from bottom to top, 3x4.54mm 2x5.70mm.
- Remove the single 4.5 mm screw from the backside.

Step 6



- Pull off the plastic tape cover by lifting it up and out of the camera base.


Step 7

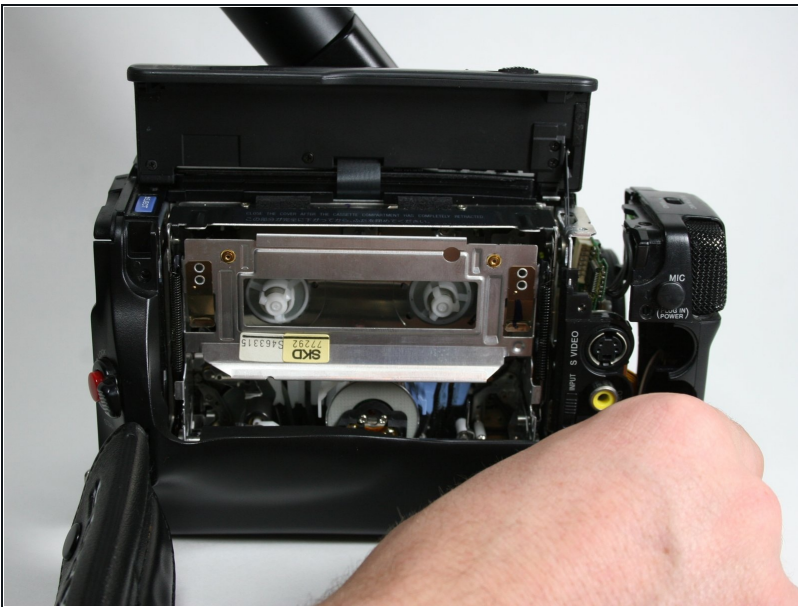

- Disconnect the mic assembly by pulling it away from the camera base.


⚠ Do not pull too hard as the wires are still connected.

Step 8

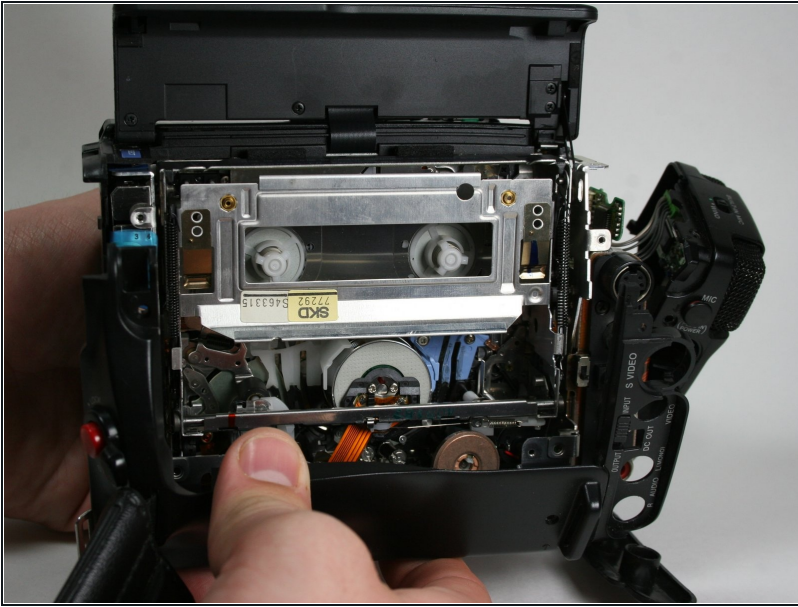


- Pull the bottom part of the case away from the camera.

Step 9

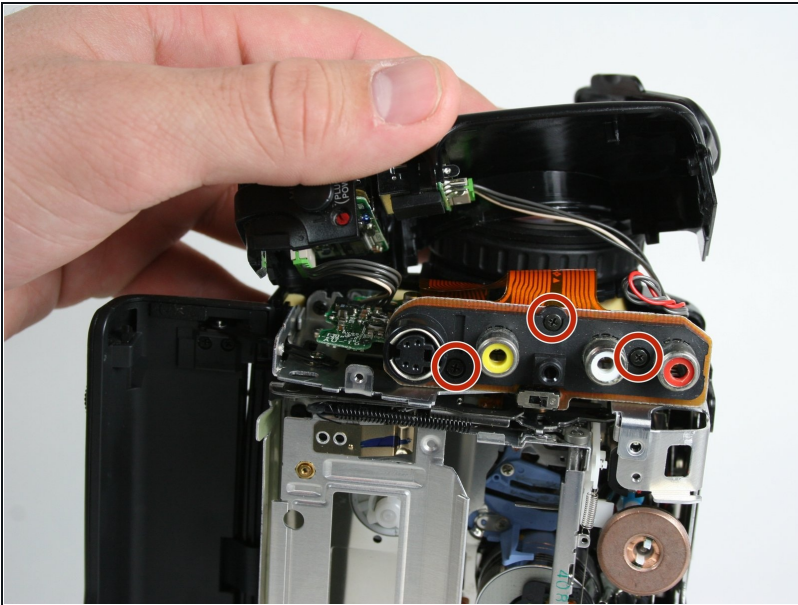


- Remove the three 4.5 mm screws from the right face of the video camera.

Step 10

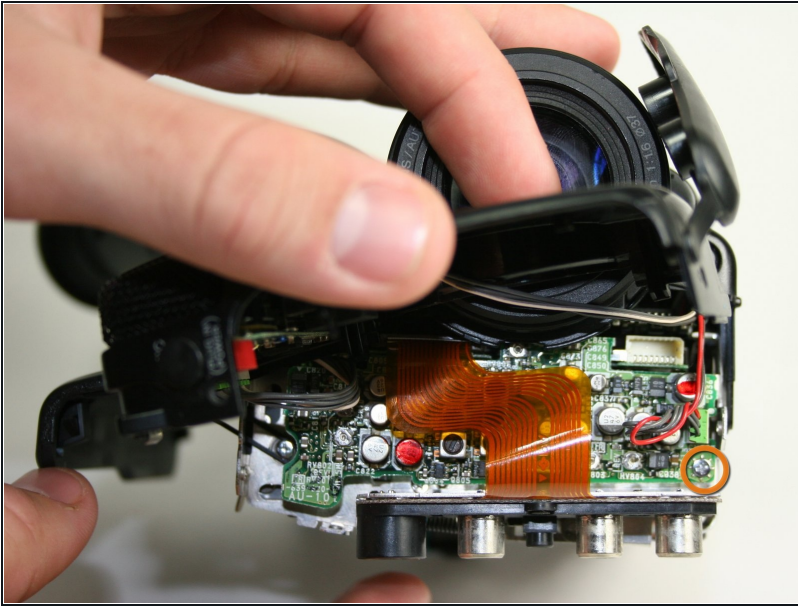


- Remove the single 3.6 mm screw at the front of the video camera on the circuit board.

Step 11

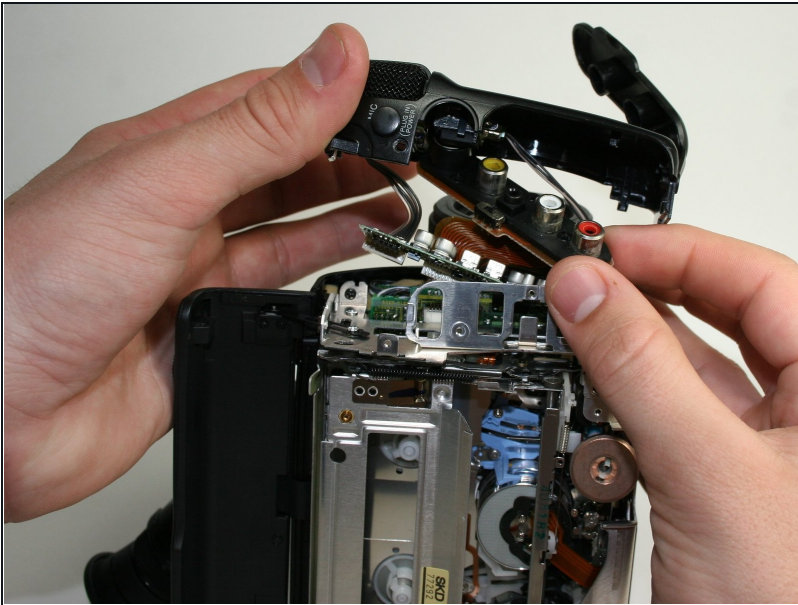



- Pull the audio/video inputs underneath the microphone assembly. The inputs should still be connected to the circuit board.

Step 12

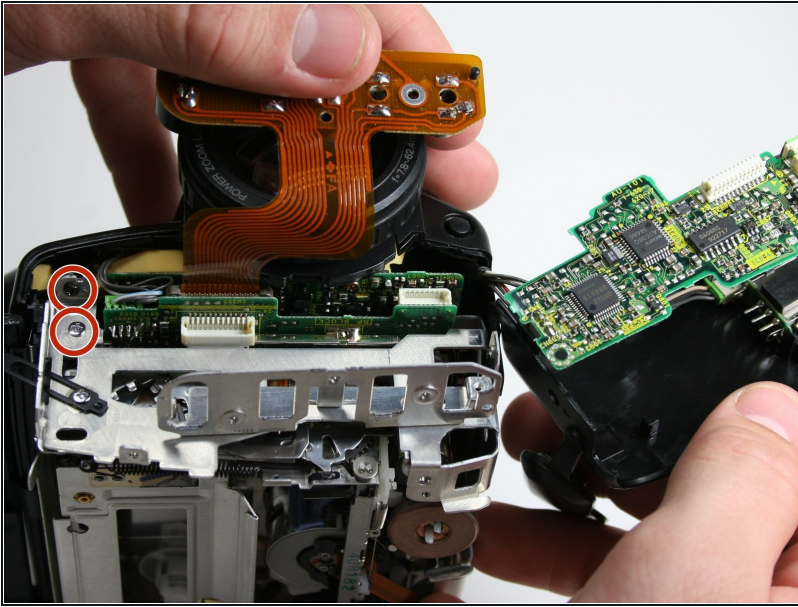

- Remove two remaining 3.6 mm case screws from the front of the camera.

Step 13

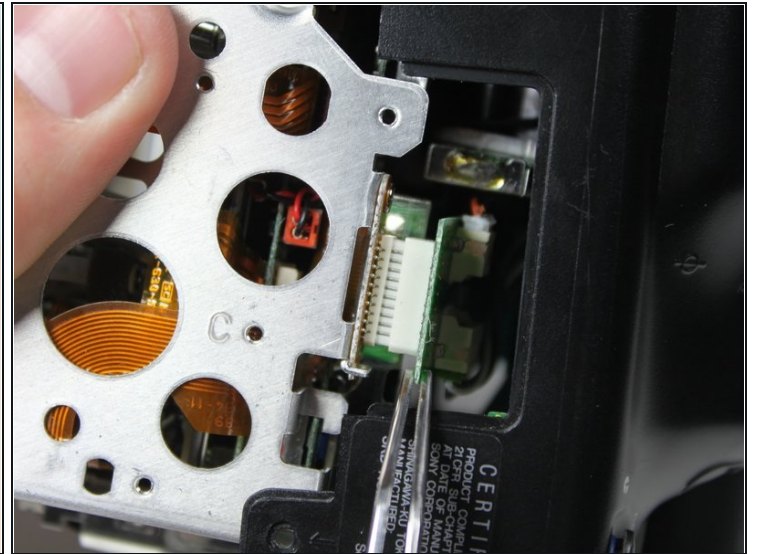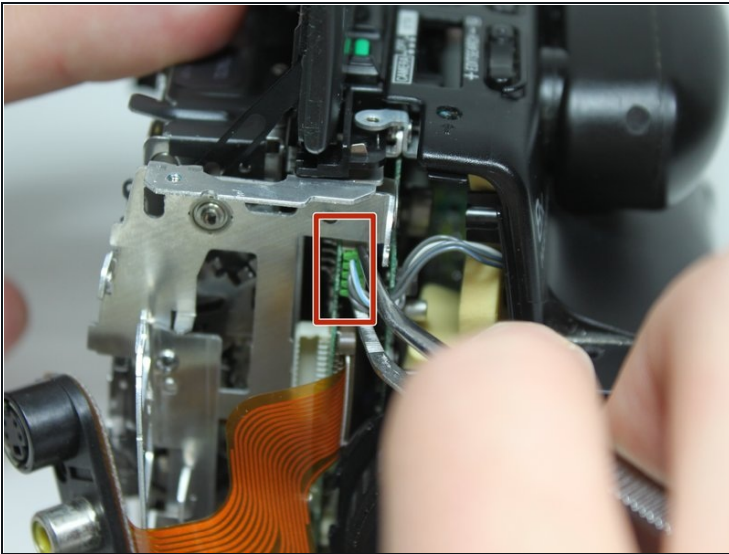



- Using metal [tweezers](#), pull out the plastic connector box on the front side.
- Again use metal tweezers to pull out the connection box on the bottom of the camera. The right side of the case can now be removed by pulling it to the right.

Step 14 — Lens Assembly




- Remove the three screws from the circuit board.

Step 15

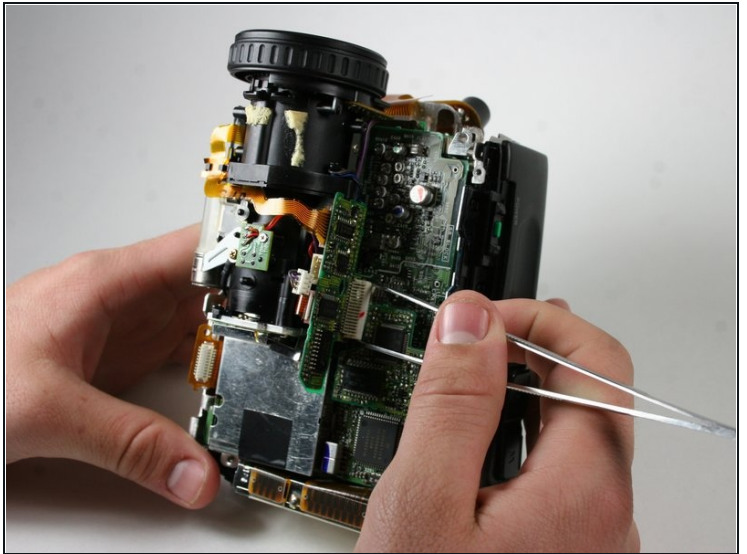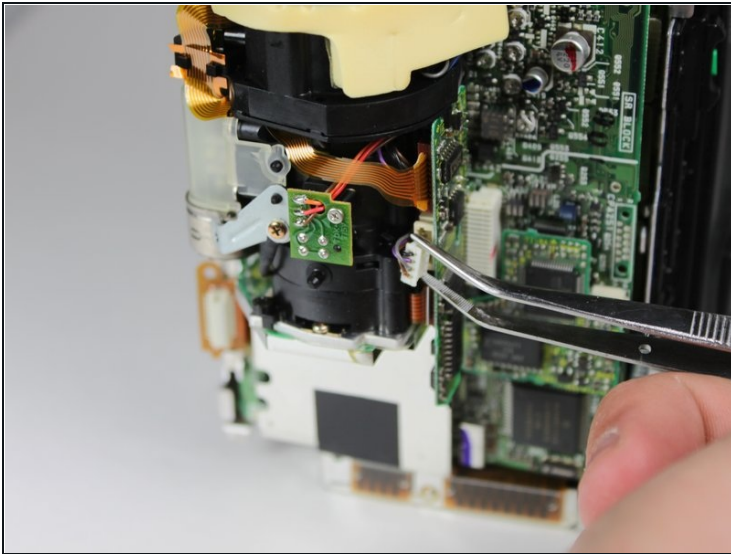


- Using metal [tweezers](#), pull out the plastic connector box located in the center area.
- Pull up the circuit board.
⚠ Be careful; it should still be connected to a band wire.

Step 16

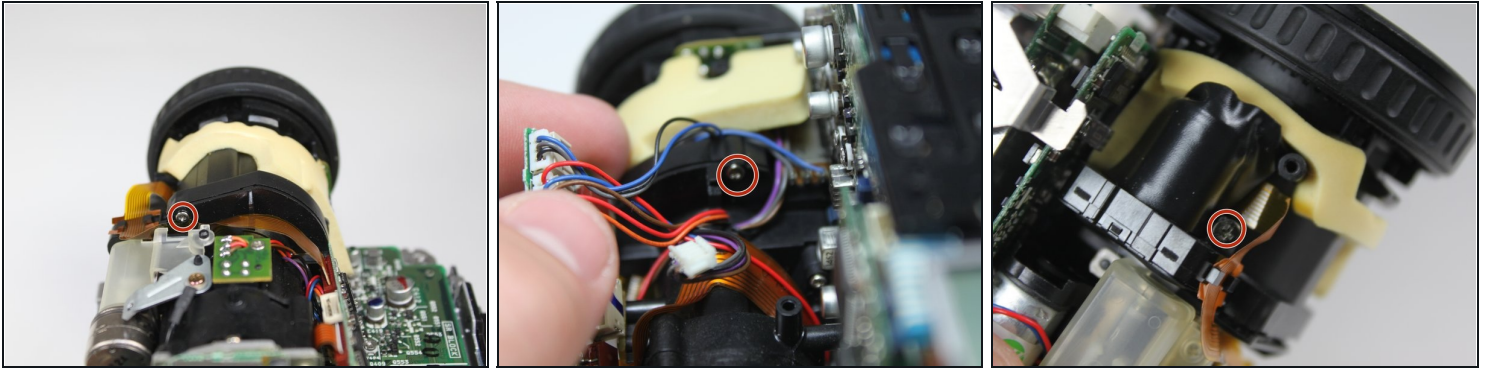

- Remove all three screws around the lens assembly.


Step 17

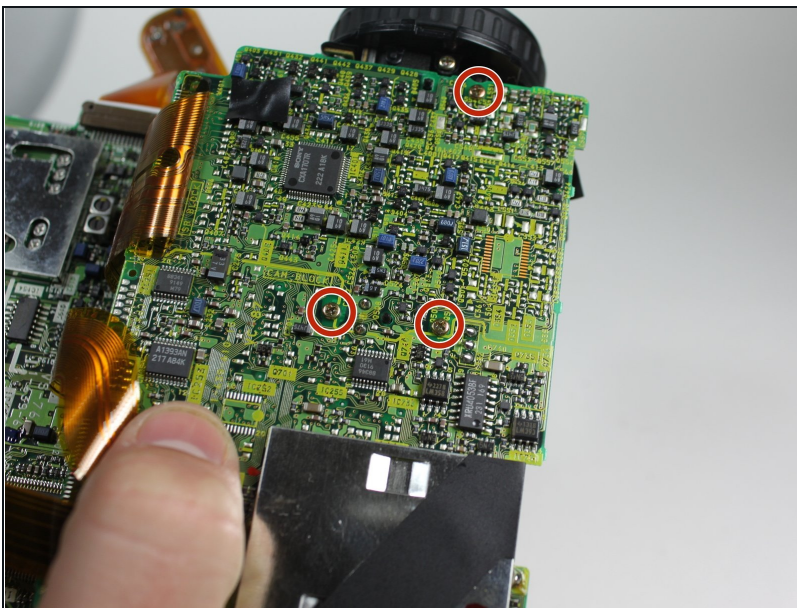

- Remove three gold screws from the lens assembly.

⚠ Be careful not to break band wires.

Step 18

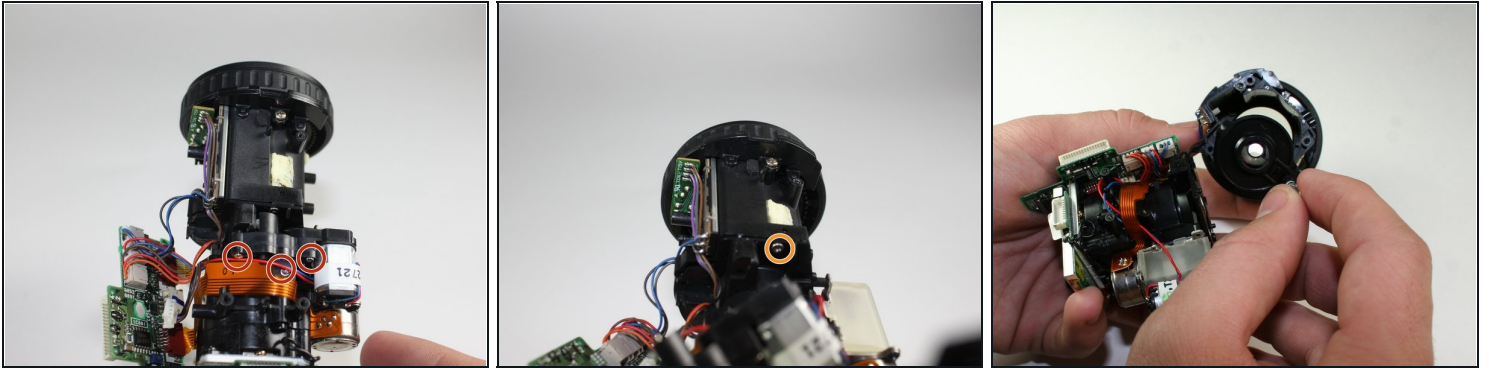

- Lift the lens assembly from the large circuit board.
- Remove the two 5.3 mm screws.
- Remove the single 6.1 mm screw using a Phillips #000 screwdriver.
- Remove the lens from the lens assembly.

To reassemble your device, follow these instructions in reverse order.